

Ford Wildtrak
Mountain Top Roll
Installation Instructions



- | | |
|---|--|
| GR Installation instruction
Mountain Top Roll | S Monteringsanvisning
Mountain Top Roll |
| D Einbauanleitung
Mountain Top Roll | SF Asennusohje
Mountain Top Roll |
| E Instrucciones de montaje
Mountain Top Roll | CZ Návod k instalaci
Mountain Top Roll |
| F Notice de montage
Mountain Top Roll | H Szerelési utasítás
Mountain Top Roll |
| I Istruzioni di montaggio
Mountain Top Roll | PL Instrukcja montażu
Mountain Top Roll |
| P Instruções de instalação
Mountain Top Roll | GR Οδηγίες Εγκατάστασης
Mountain Top Roll |
| NL Installatie-instructies
Mountain Top Roll | RUS Инструкция по установке
Mountain Top Roll |
| DK Monteringsvejledning
Mountain Top Roll | TR Montaj Talimatı
Mountain Top Roll |
| N Monteringsveiledning
Mountain Top Roll | RO Instrucțiuni de instalare
Mountain Top Roll |

Model Year: 2011 →

Part Number: MTR FO90 H02 Double cab (DC)
MTR FO91 H02 Super cab (SC)



Weight: 31 / 36 kg



Installation Time: 2 hr

Ford Wildtrak

Mountain Top Roll

Installation Instructions
















<p>A</p> <p>x 1</p>	<p>B</p> <p>x 1</p>
<p>C</p> <p>x 1</p>	<p>D</p> <p>x 1</p>
<p>E</p> <p>x 1</p>	<p>F</p> <p>x 2</p>

<p>Kit DC SC</p>	<p>G</p> <p>x 6 SC x 4 DC</p>	<p>H</p> <p>x 2</p>	<p>I</p> <p>M6x12</p> <p>x 6 SC x 4 DC</p>	<p>J</p> <p>Ø6</p> <p>x 8 SC x 6 DC</p>	<p>K</p> <p>M6</p> <p>x 2</p>	<p>Installation Manual</p> <p>x 1</p>
<p>L</p> <p>M6x12</p> <p>x 4</p>	<p>M</p> <p>M6x25</p> <p>x 2</p>	<p>N</p> <p>M5x6</p> <p>x 6</p>	<p>O</p> <p>x 6</p>	<p>P</p> <p>x 6</p>	<p>TÜV</p> <p>x 1</p>	
<p>X</p> <p>M6x25</p> <p>x 2</p>	<p>R</p> <p>x 4</p>	<p>S</p> <p>x 2</p>	<p>T</p> <p>x 2</p>	<p>U</p> <p>R L</p> <p>x 1</p>	<p>Q</p> <p>650mm</p> <p>x 2</p>	<p>W</p> <p>x 2</p>

Ford Wildtrak

Mountain Top Roll


Installation Instructions

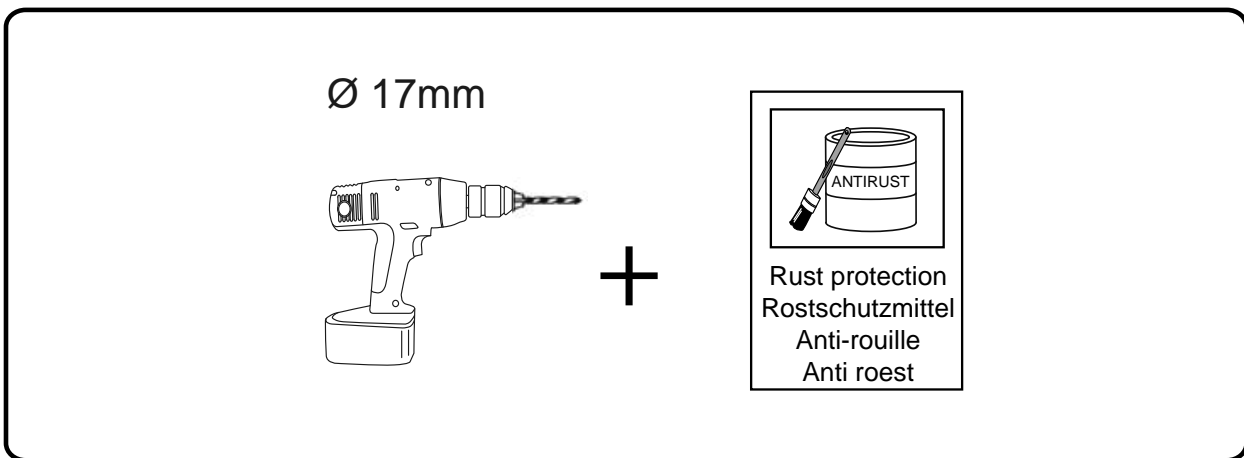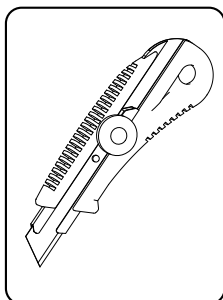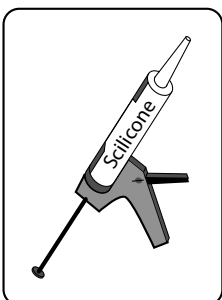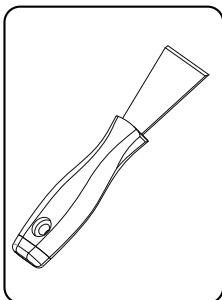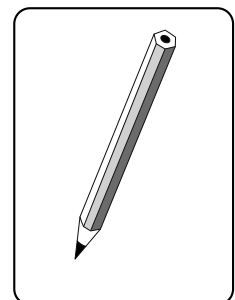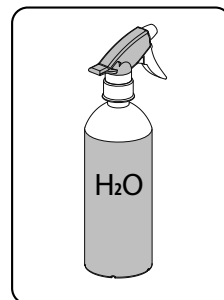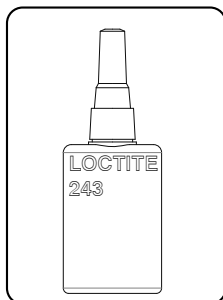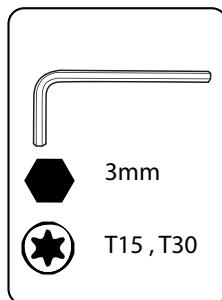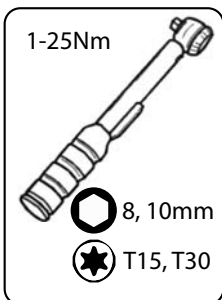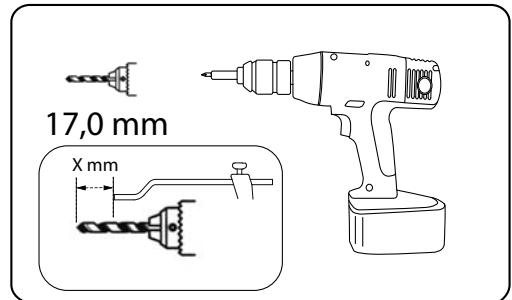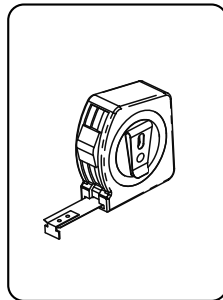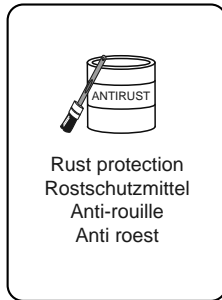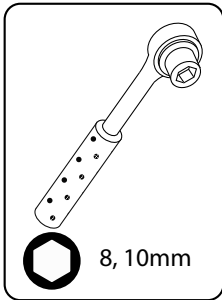

Ford Wildtrak

Mountain Top Roll



Installation Instructions

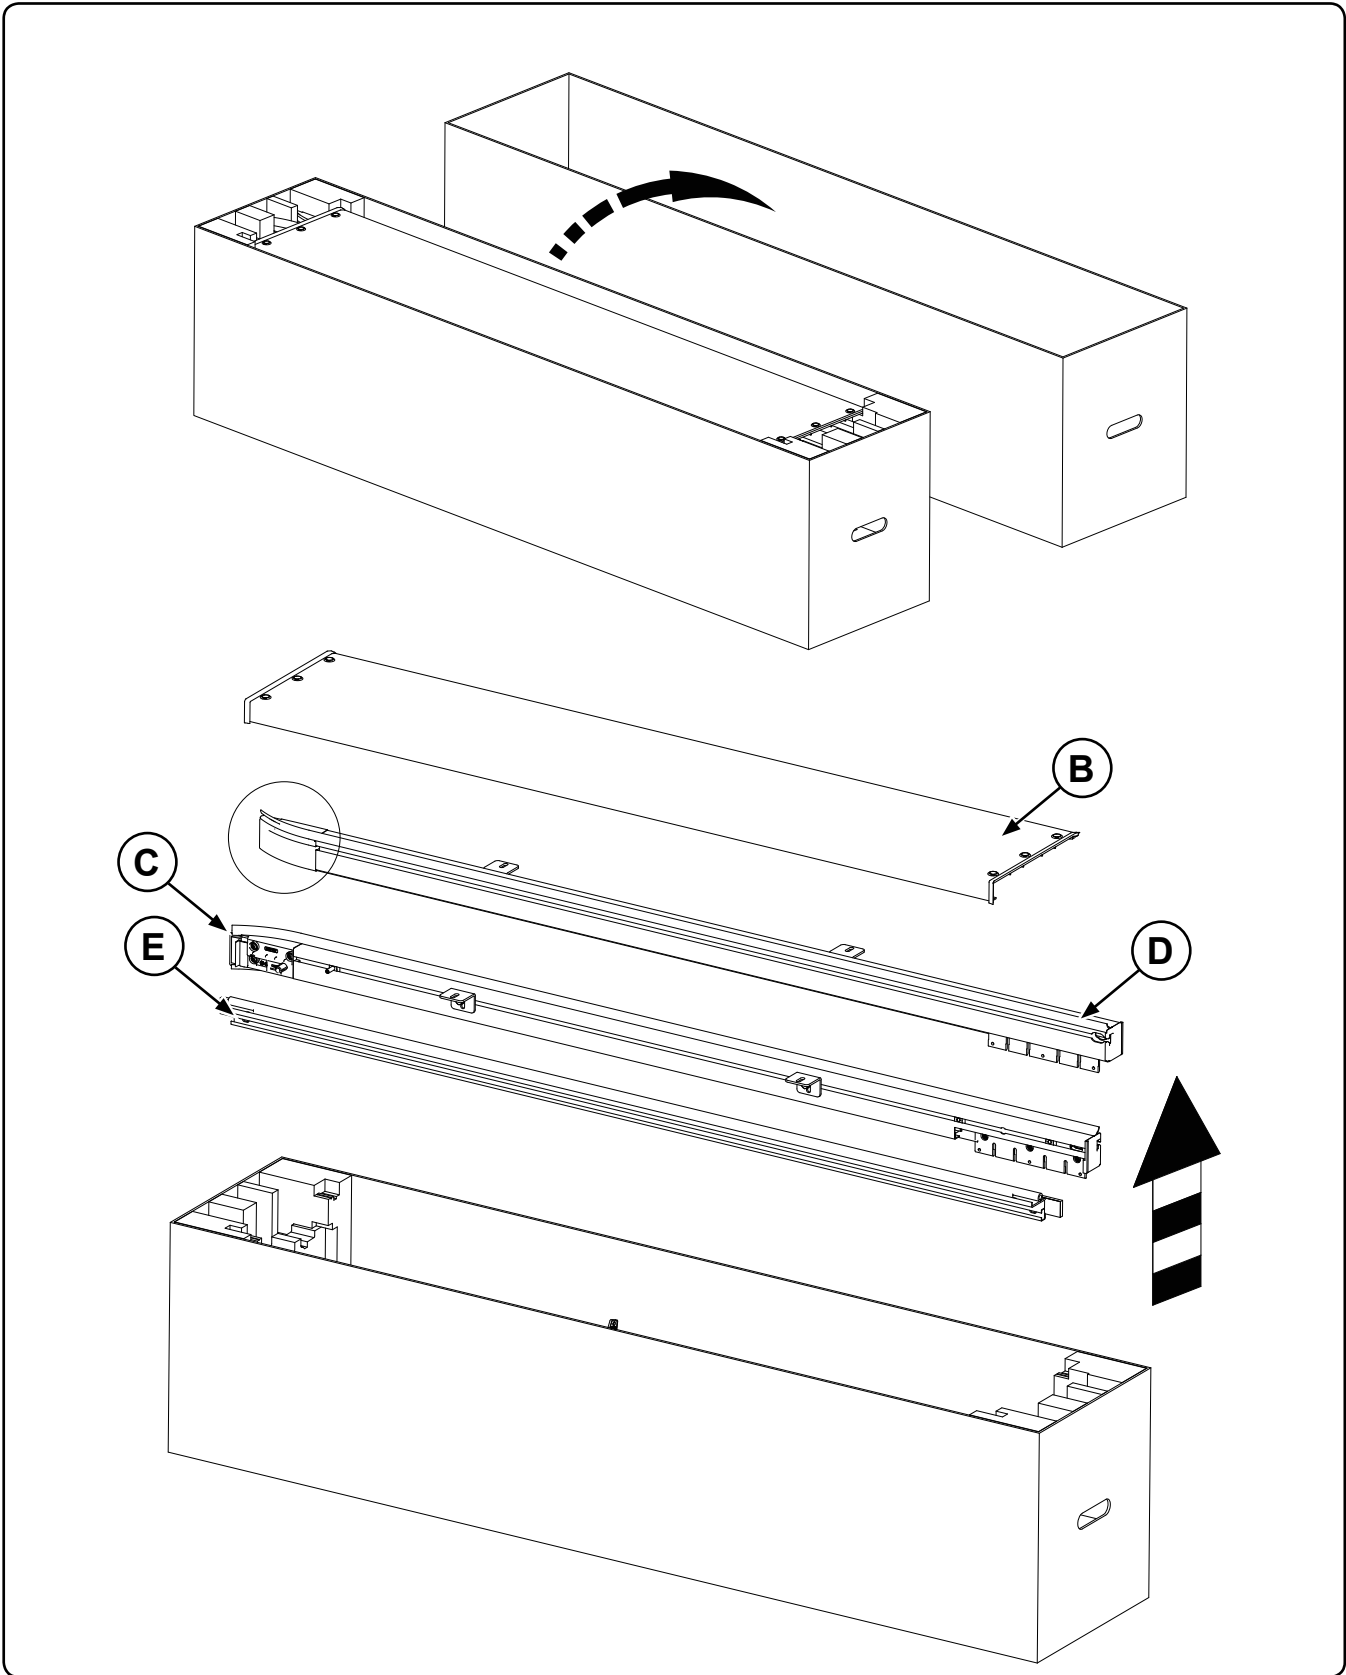

Ford Wildtrak

Mountain Top Roll

Installation Instructions

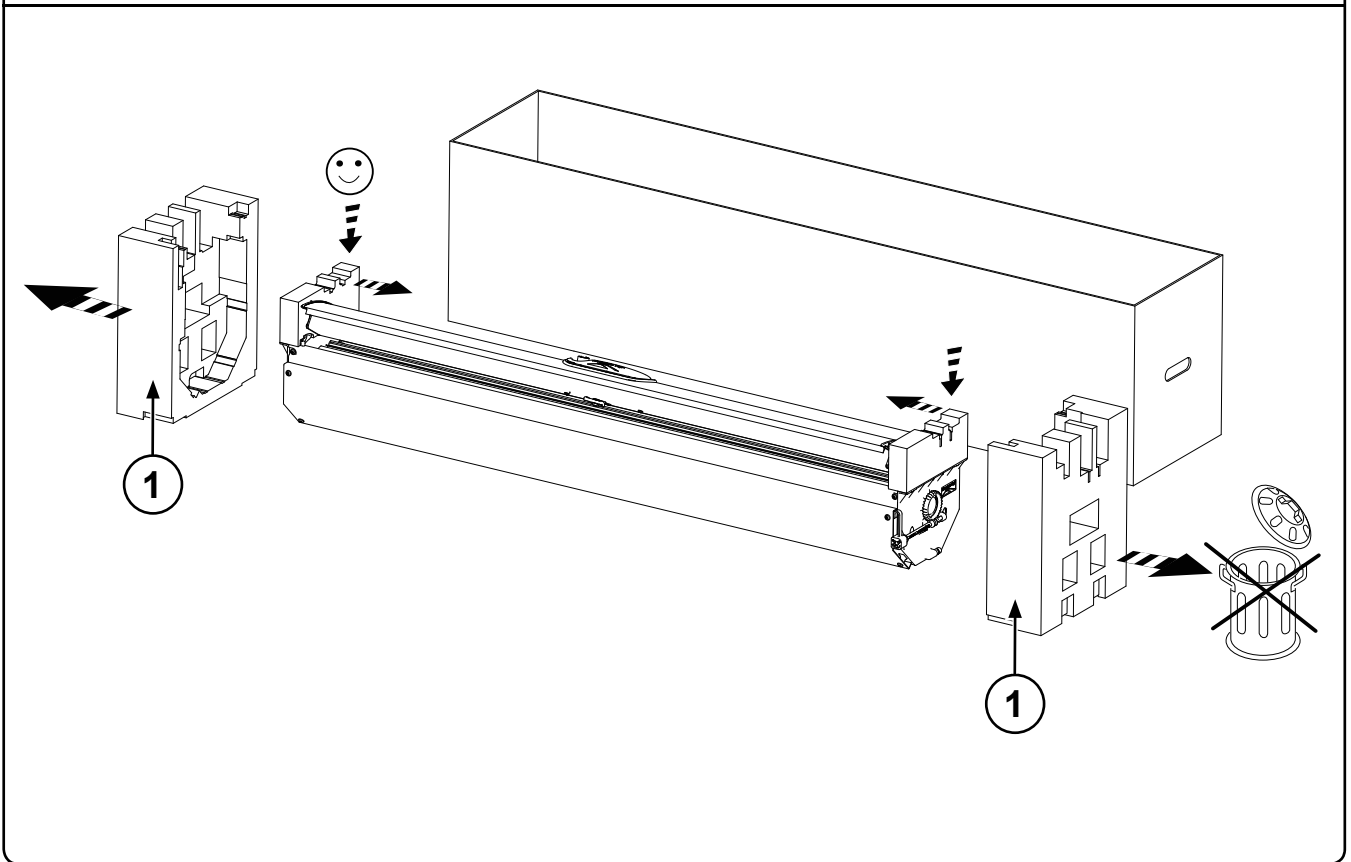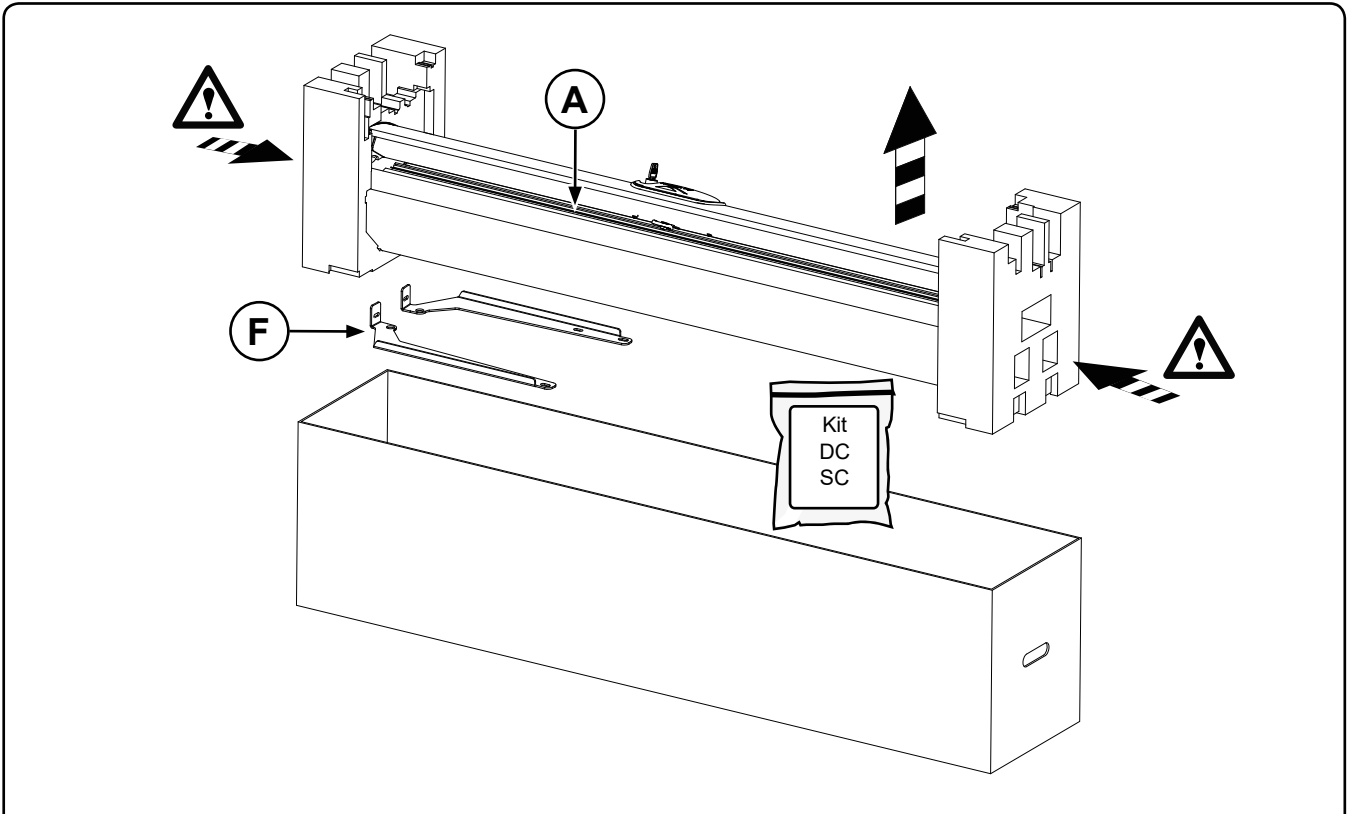


Ford Wildtrak

Mountain Top Roll

Installation Instructions




L & R

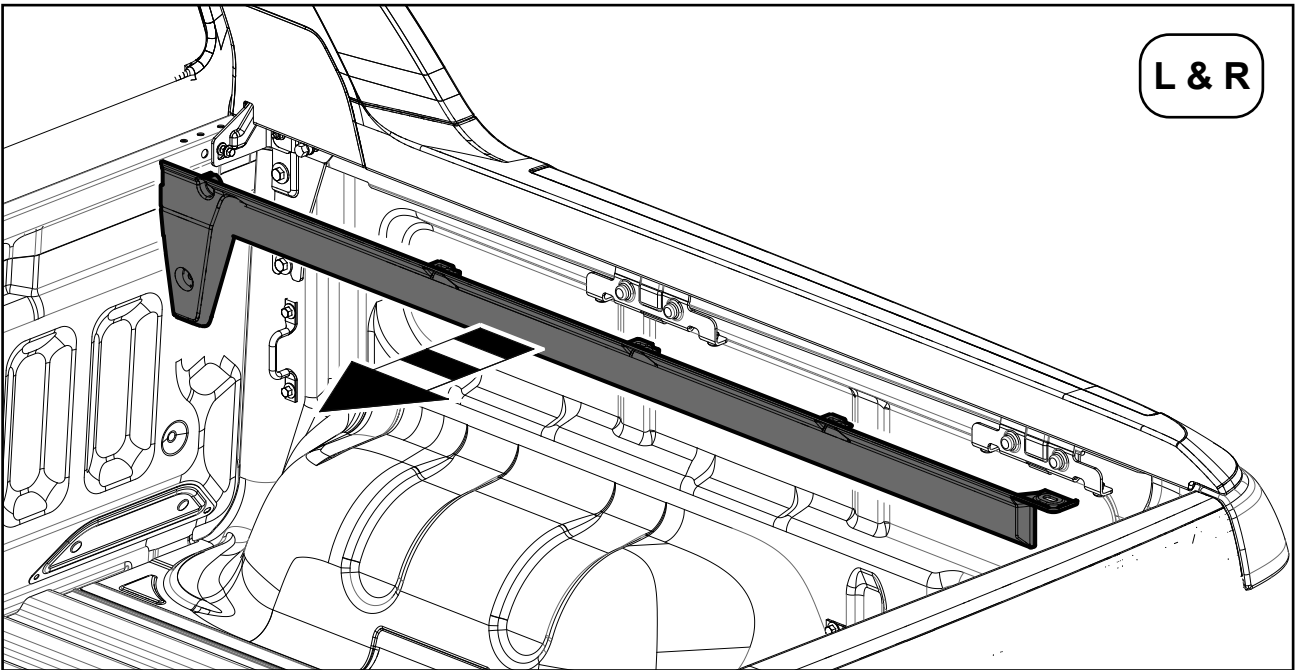


Double Cab

L & R

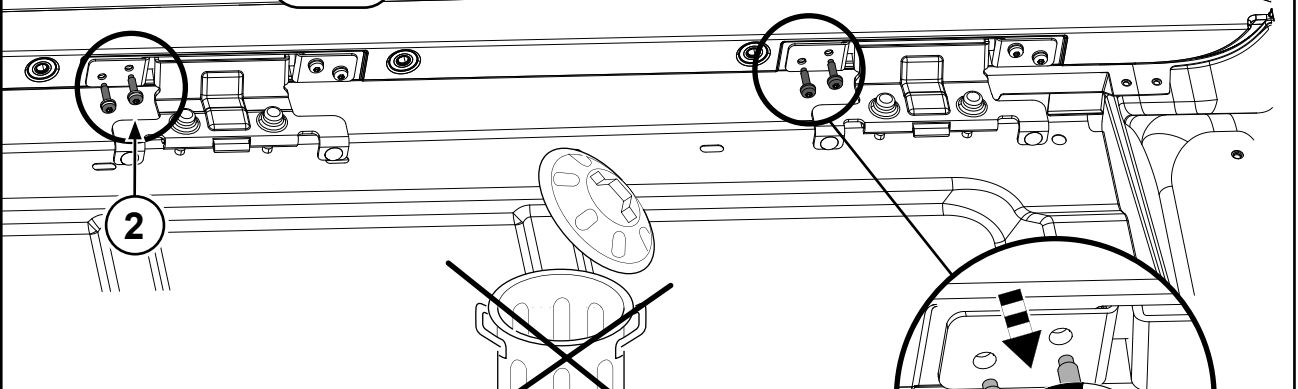

Super Cab


L & R

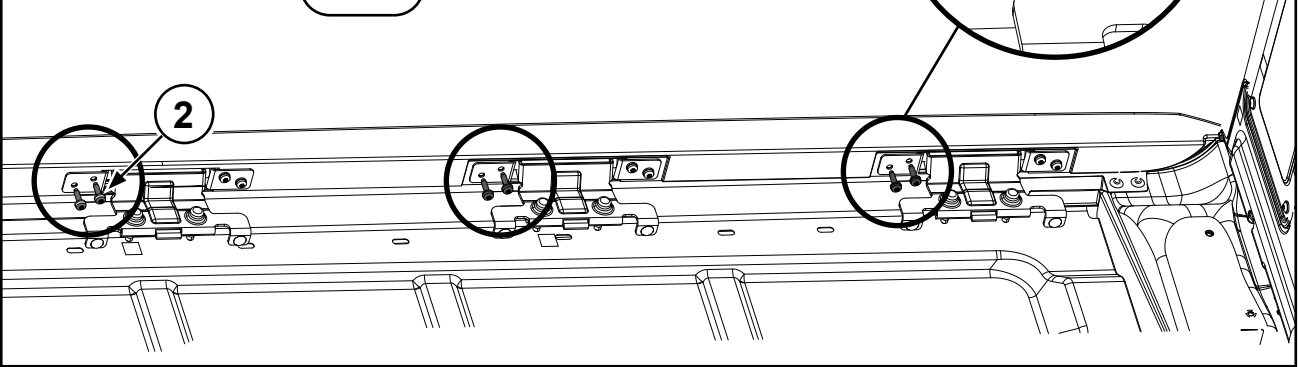

Ford Wildtrak

Mountain Top Roll



Installation Instructions

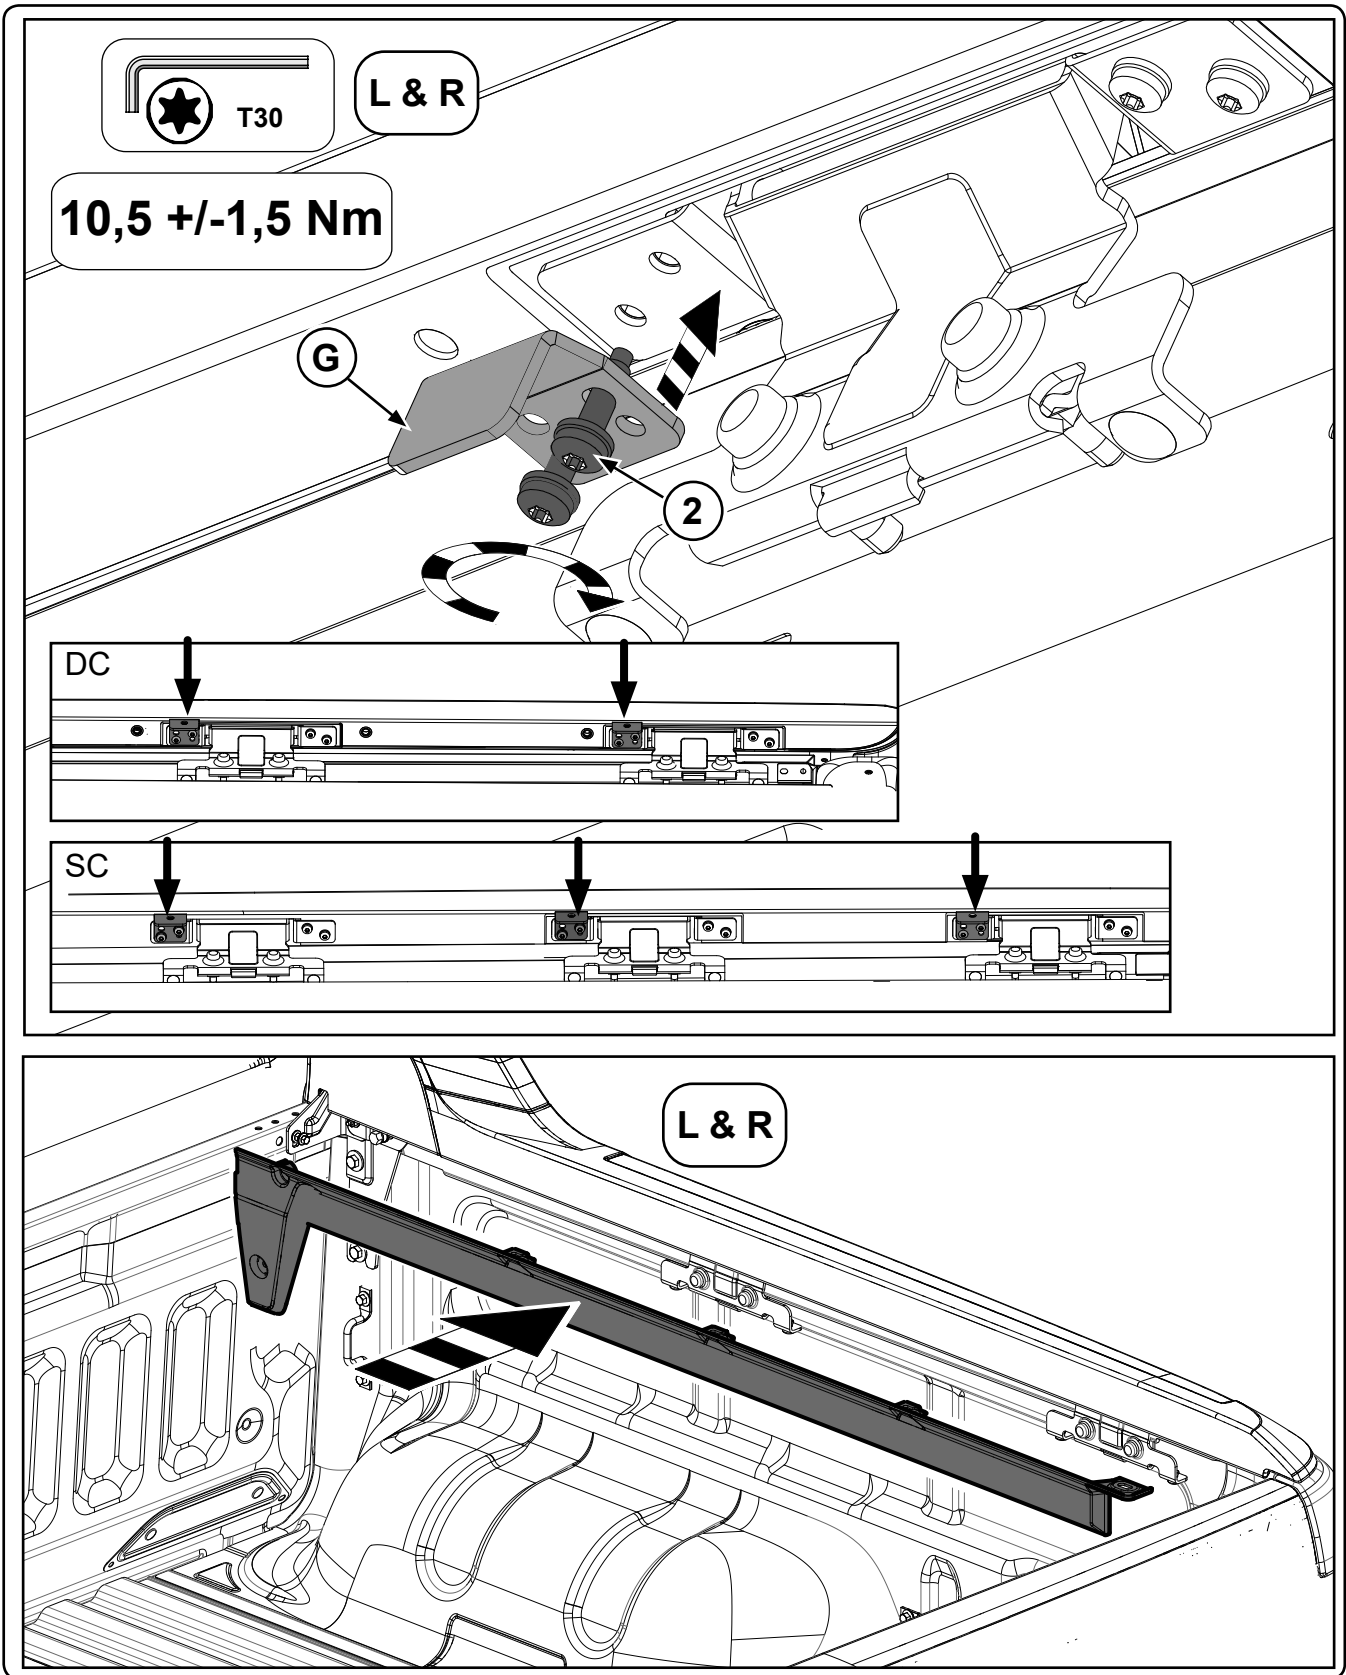

Ford Wildtrak

Mountain Top Roll

Installation Instructions



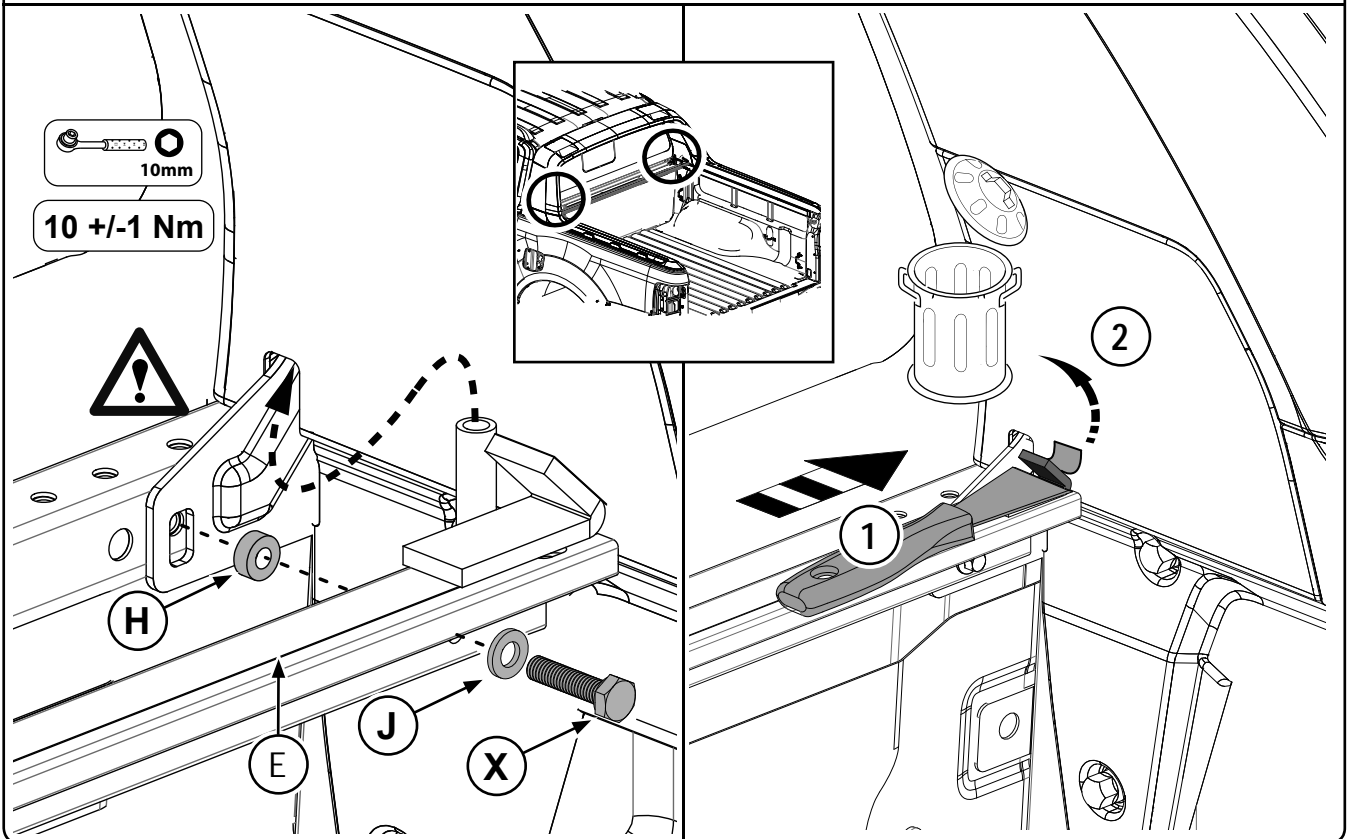
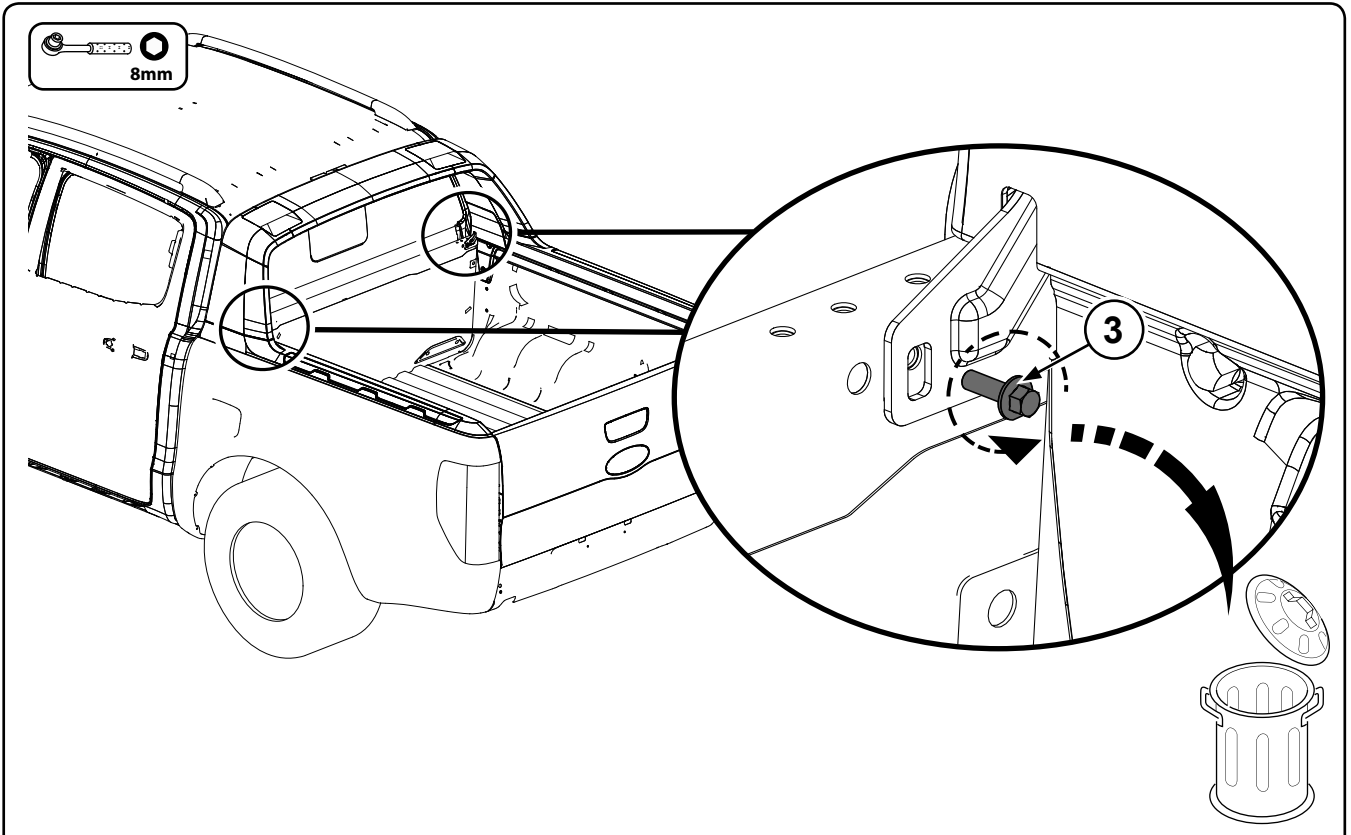


MTI-number 886 013	Issue 07	Date 02/05/2018	EB3B 26501A42-BB EB3B 26501A42-BC EB3B 26501A42-CC	AB39 21501A42-AB AB39-26501A42-AC	A66SX-19501A34-BB A66SX-26501A34-CC	Page 8/24
Pedersholmparken 10 3600 Frederikssund Denmark			ph: +45 4810 2950 Fax +45 4810 2960		www.mountaintop.dk	

Ford Wildtrak

Mountain Top Roll



Installation Instructions

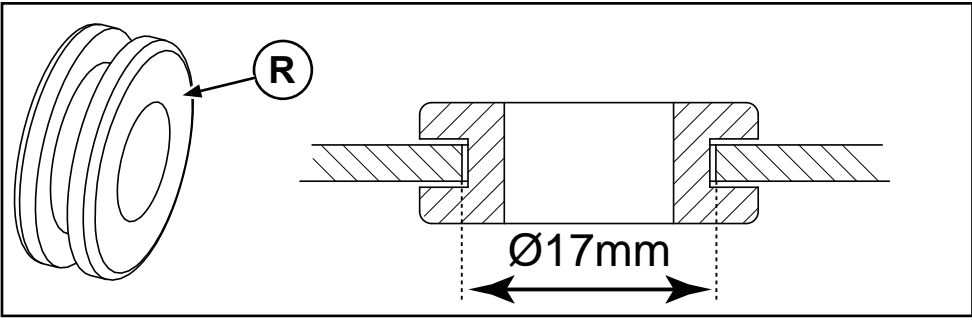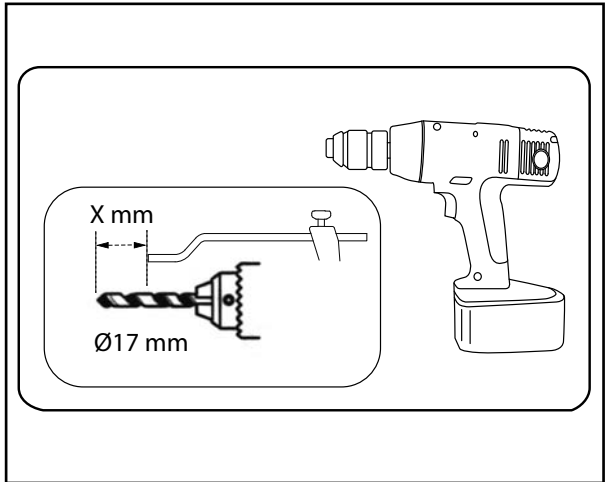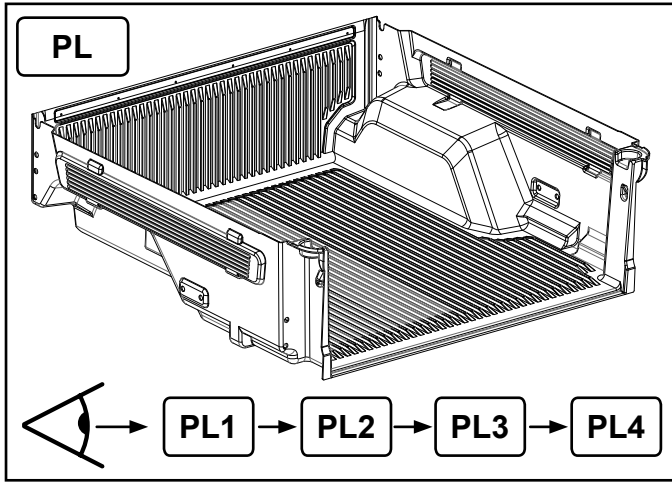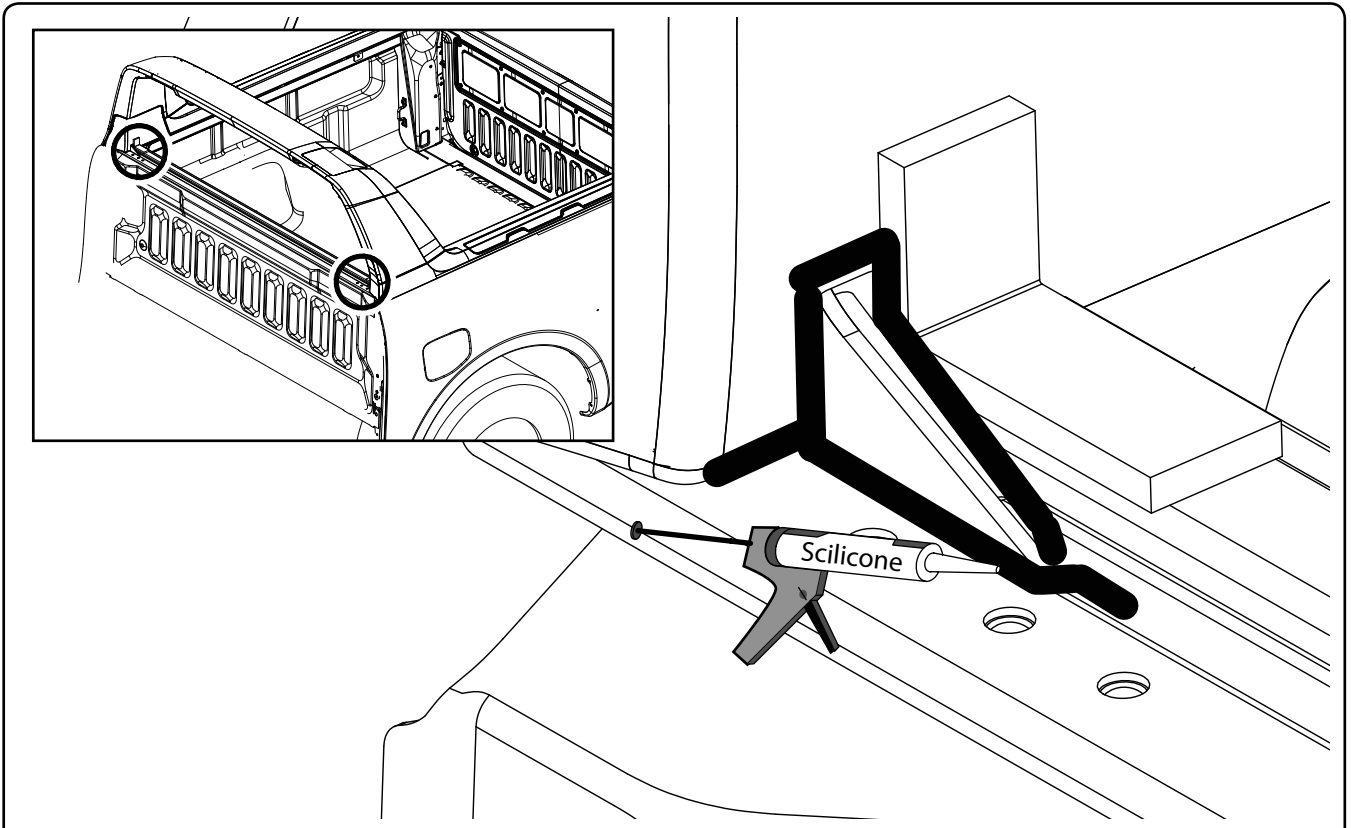

Ford Wildtrak

Mountain Top Roll

Installation Instructions

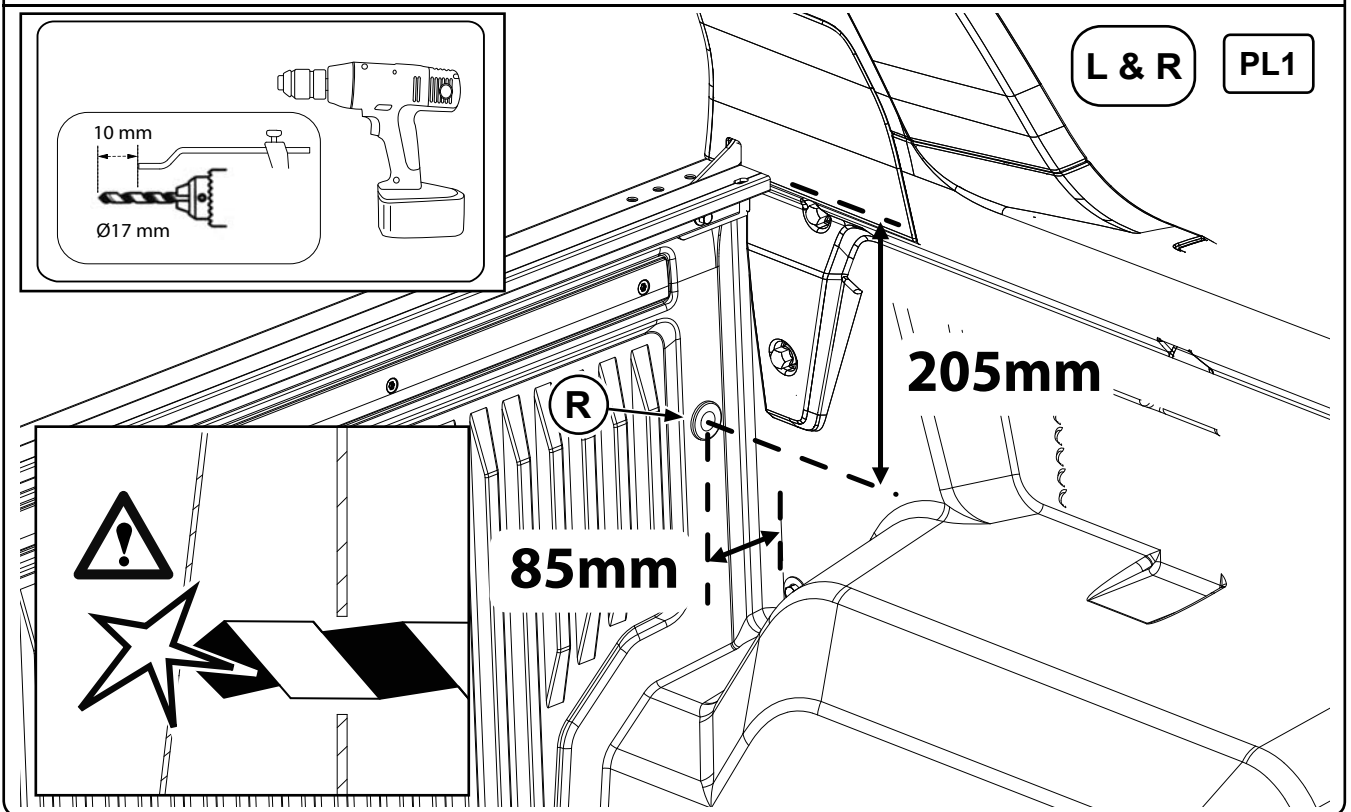
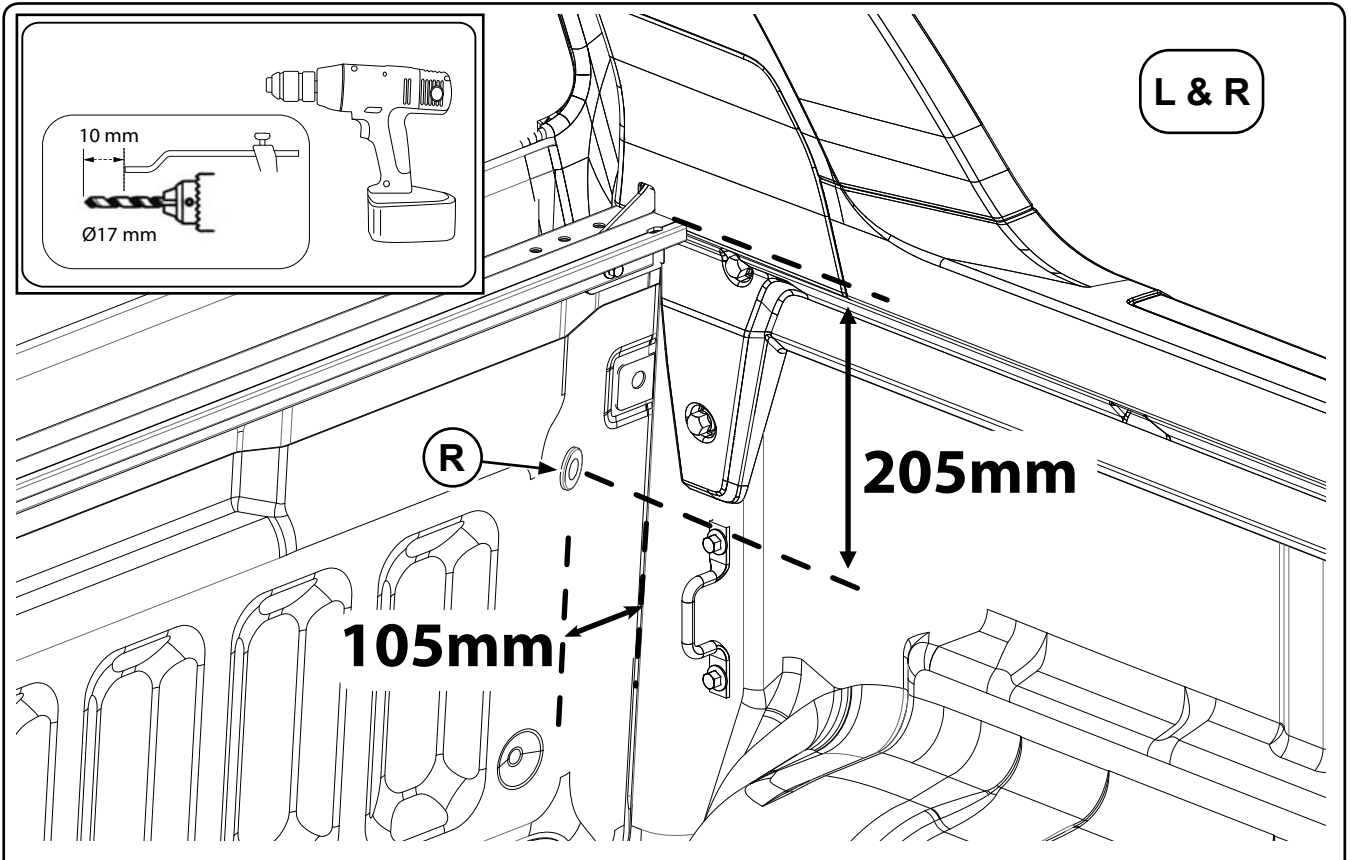


MTI-number 886 013	Issue 07	Date 02/05/2018	EB3B 26501A42-BB EB3B 26501A42-BC EB3B 26501A42-CC	AB39 21501A42-AB AB39-26501A42-AC	A66SX-19501A34-BB A66SX-26501A34-CC	Page 10/24
Pedersholmparken 10 3600 Frederikssund Denmark			ph: +45 4810 2950 Fax +45 4810 2960		www.mountaintop.dk	

Ford Wildtrak

Mountain Top Roll

Installation Instructions

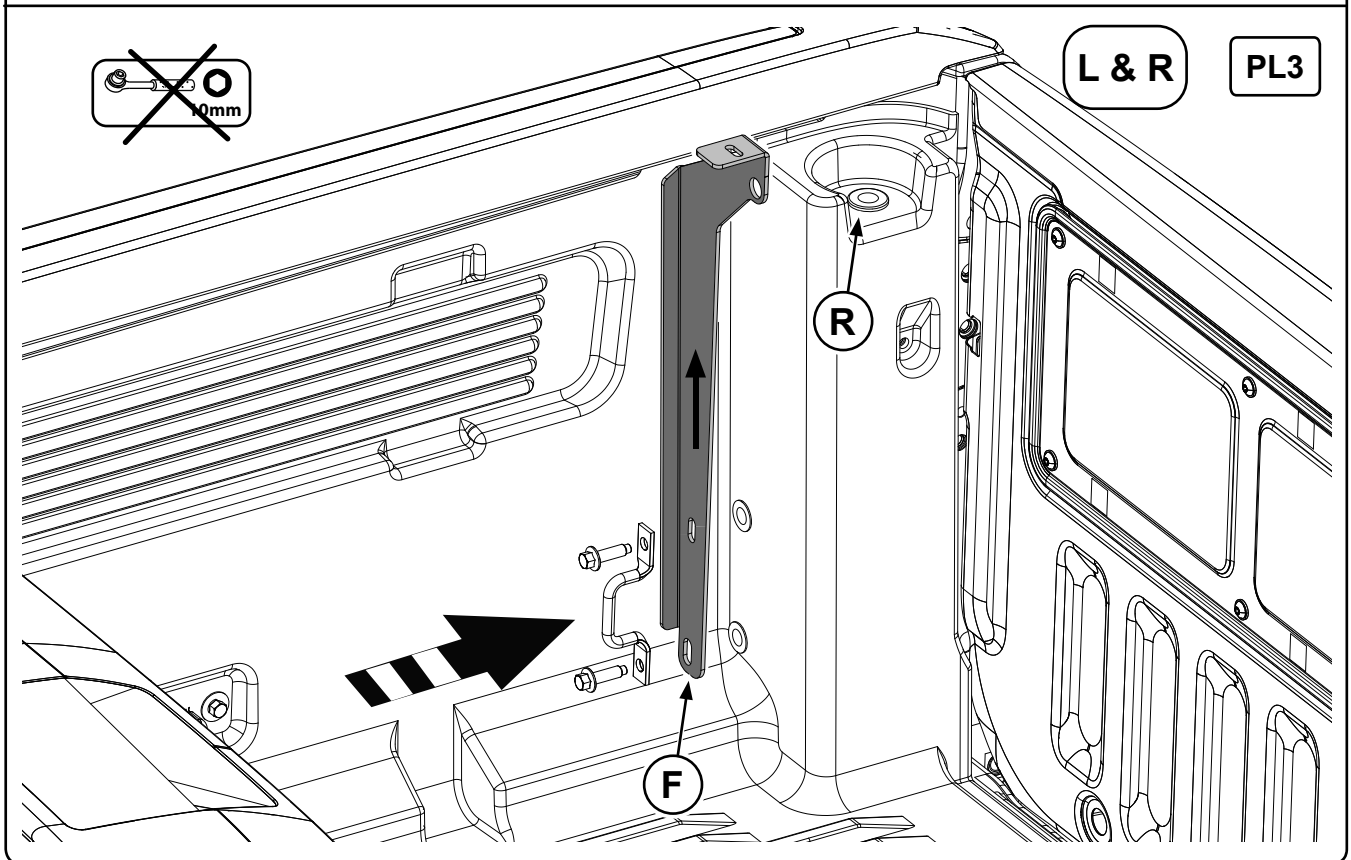
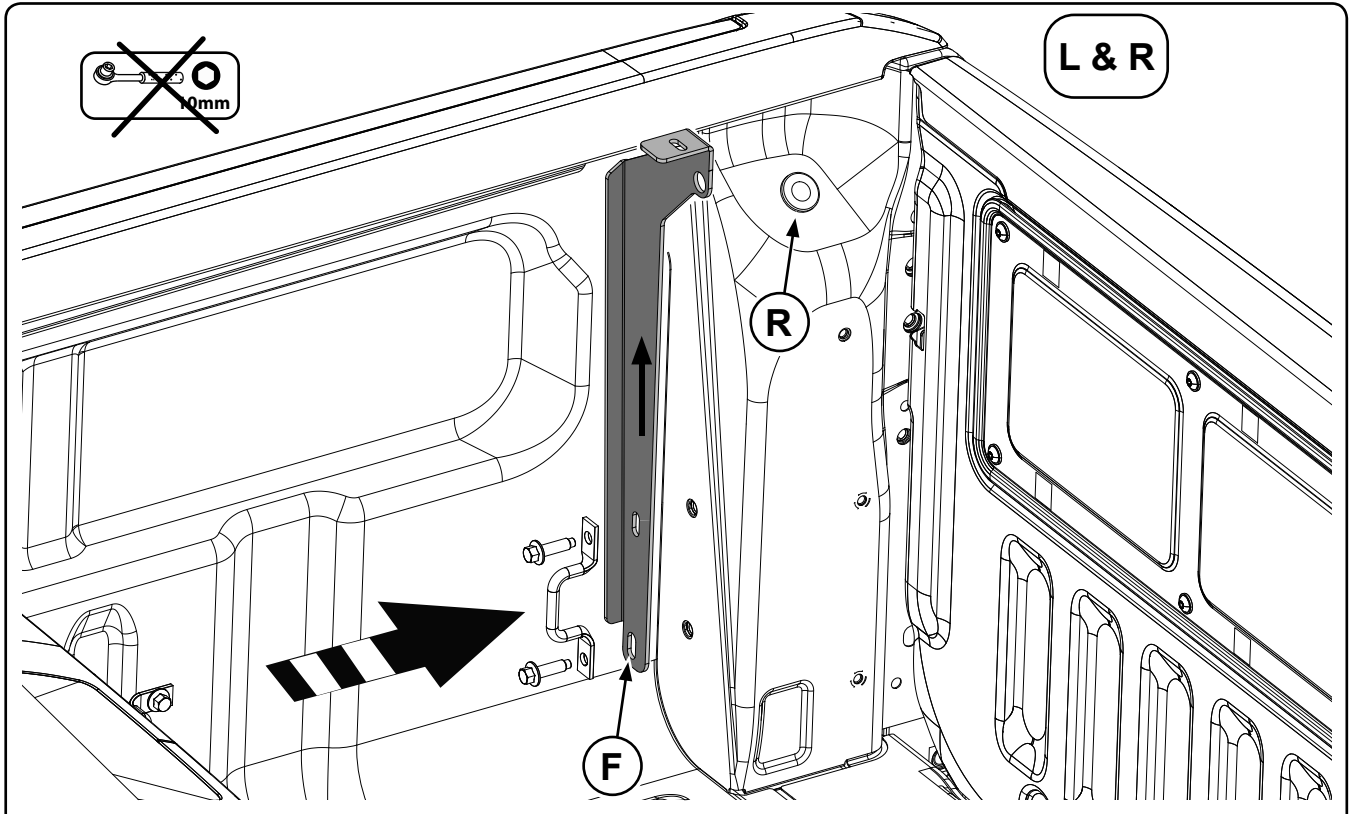


MTI-number 886 013	Issue 07	Date 02/05/2018	EB3B 26501A42-BB EB3B 26501A42-BC EB3B 26501A42-CC	AB39 21501A42-AB AB39-26501A42-AC	A66SX-19501A34-BB A66SX-26501A34-CC	Page 12/24
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk						

Ford Wildtrak

Mountain Top Roll


Installation Instructions

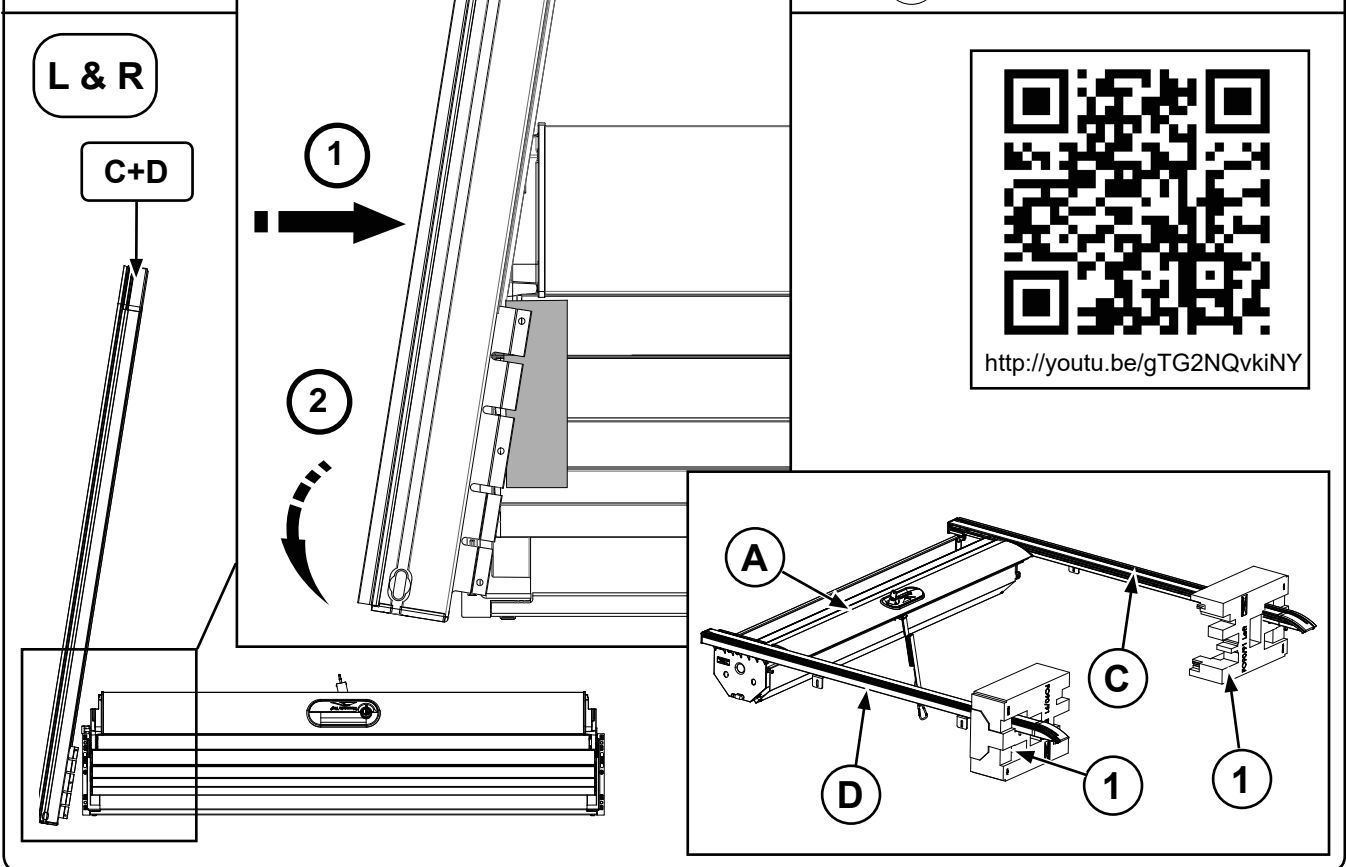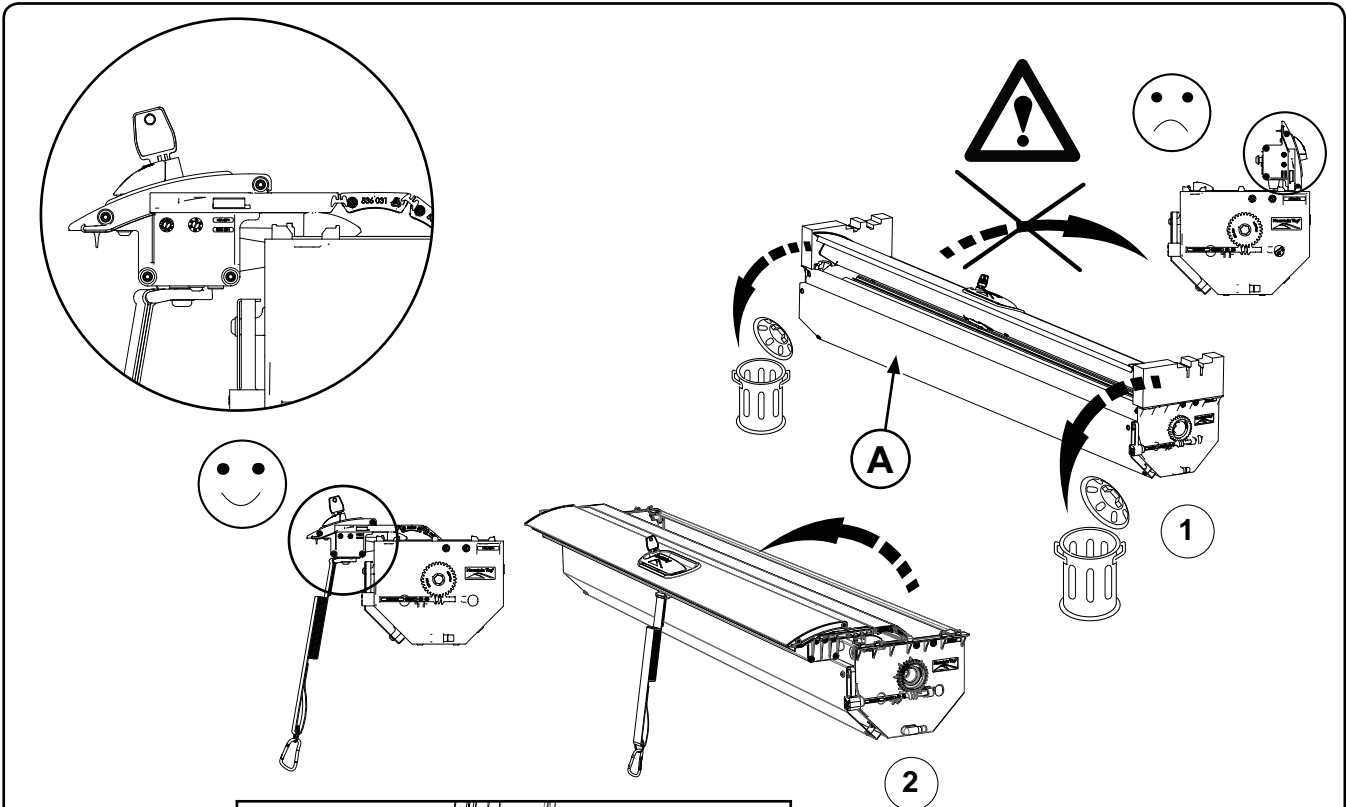

Ford Wildtrak

Mountain Top Roll



Installation Instructions

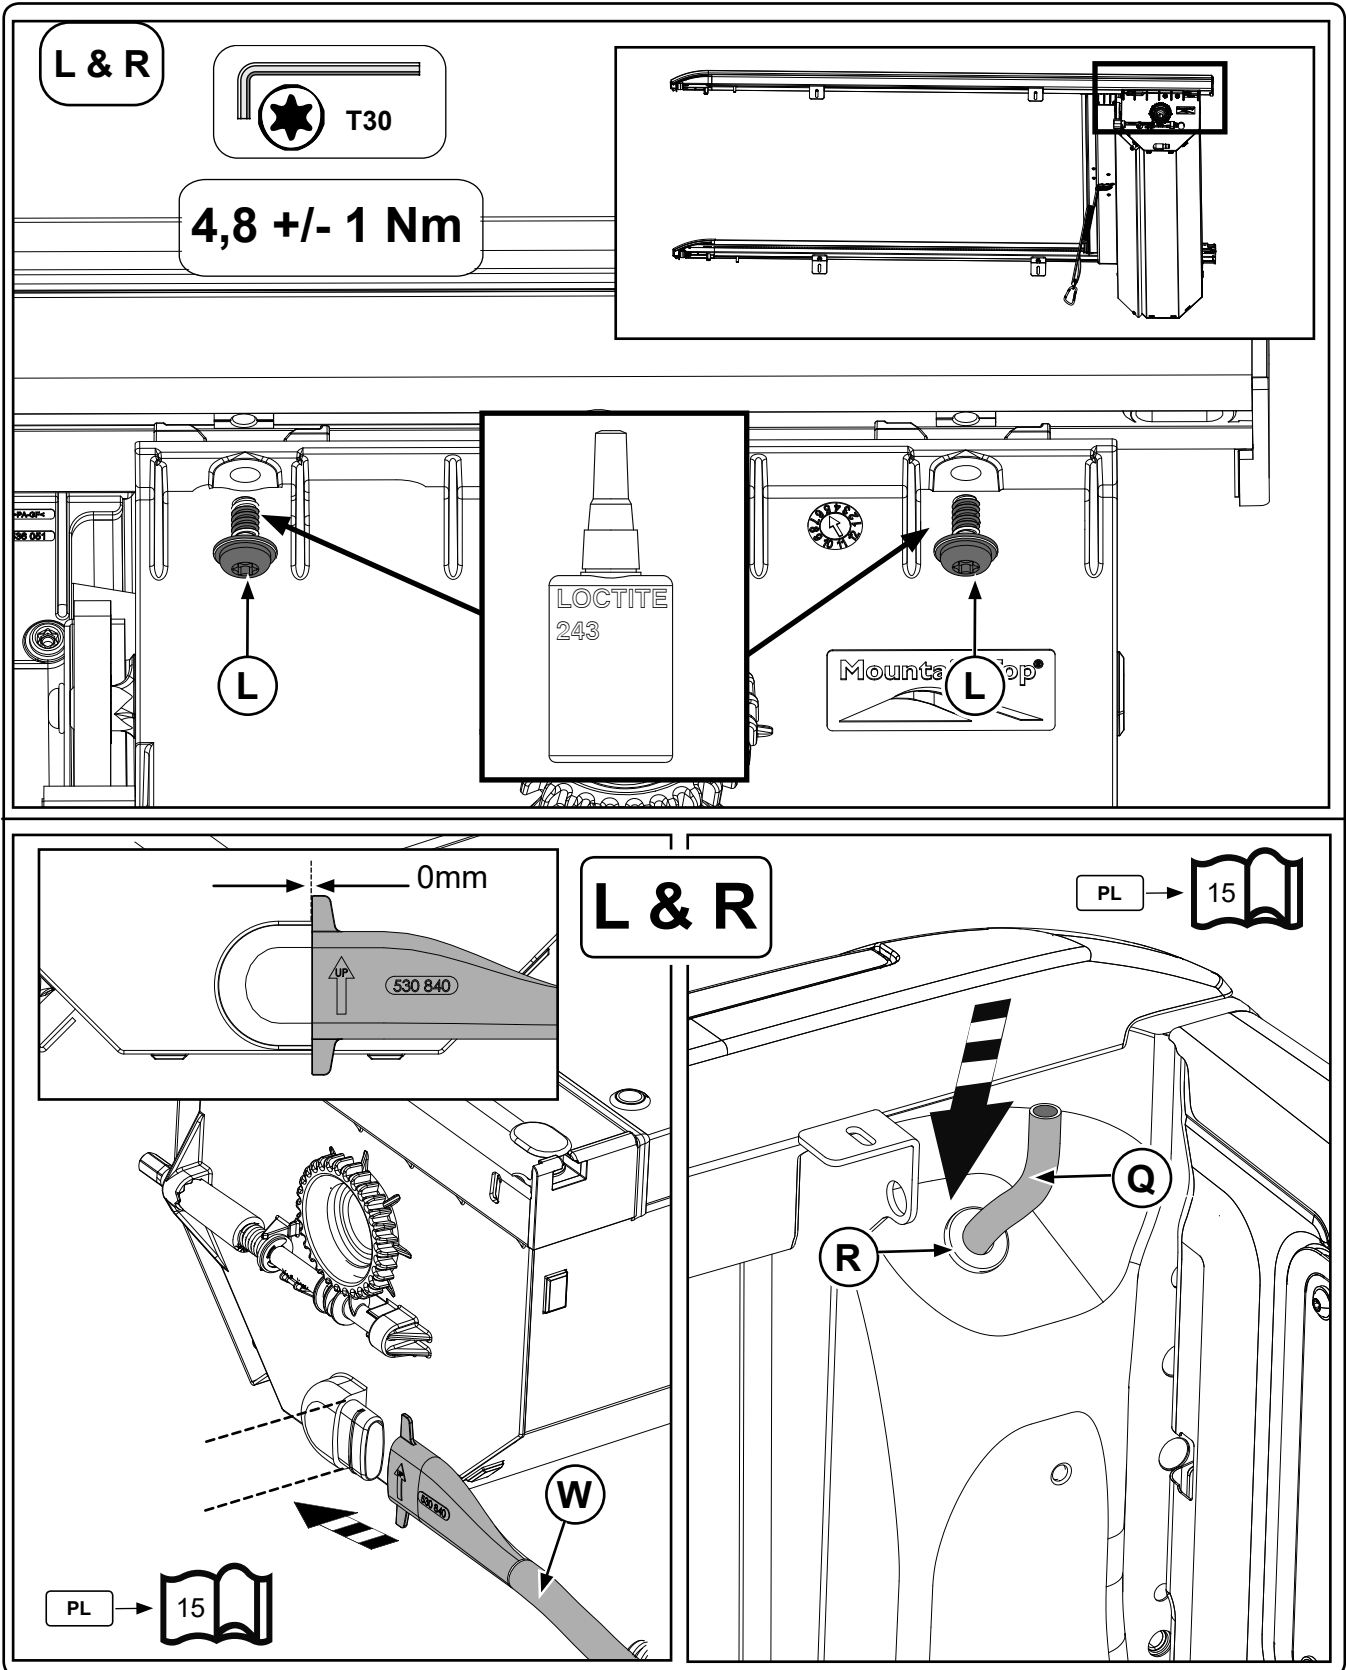

Ford Wildtrak

Mountain Top Roll

Installation Instructions

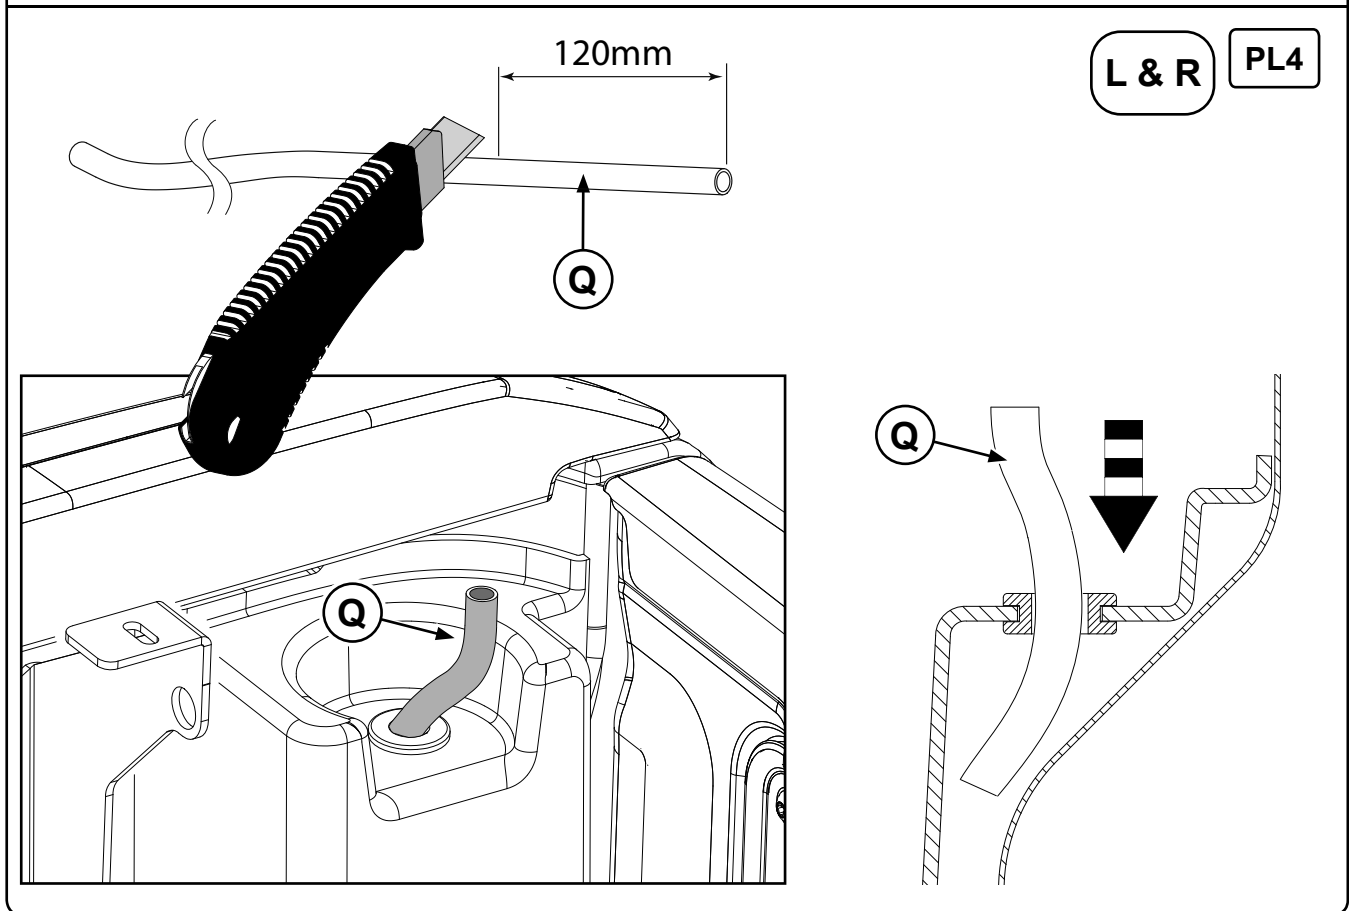
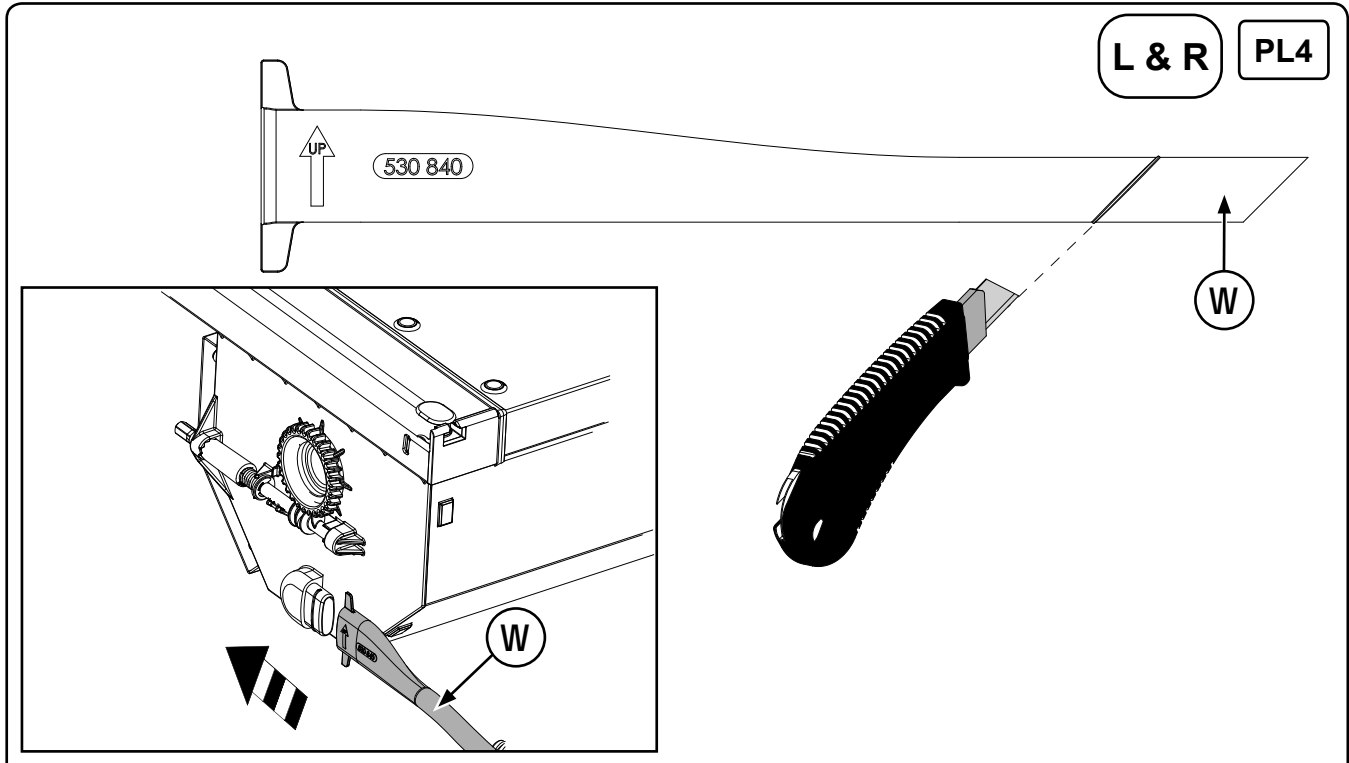


MTI-number 886 013	Issue 07	Date 02/05/2018	EB3B 26501A42-BB EB3B 26501A42-BC EB3B 26501A42-CC	AB39 21501A42-AB AB39-26501A42-AC	A66SX-19501A34-BB A66SX-26501A34-CC	Page 15/24
Pedersholmparken 10 3600 Frederikssund Denmark			ph: +45 4810 2950 Fax +45 4810 2960		www.mountaintop.dk	

Ford Wildtrak

Mountain Top Roll

Installation Instructions

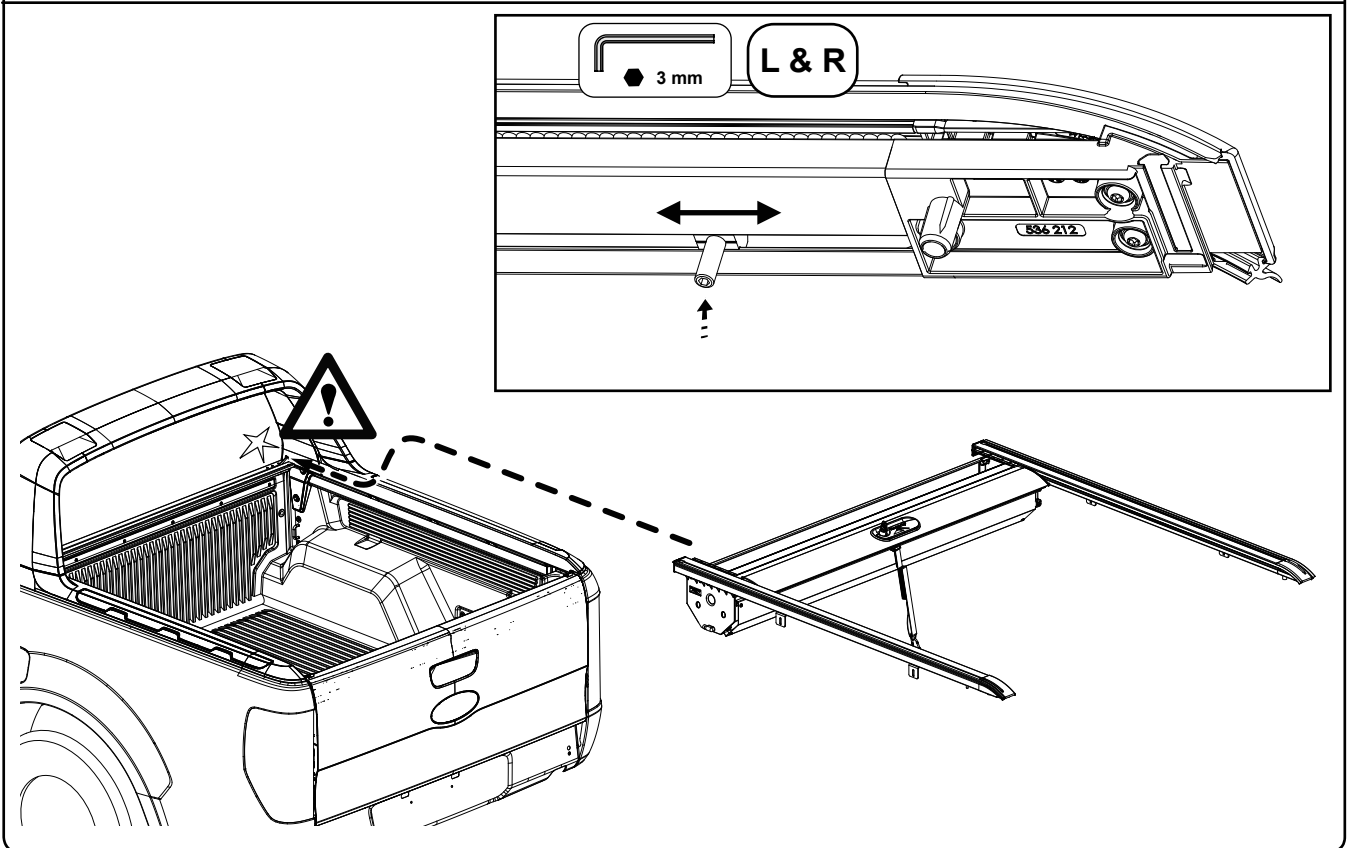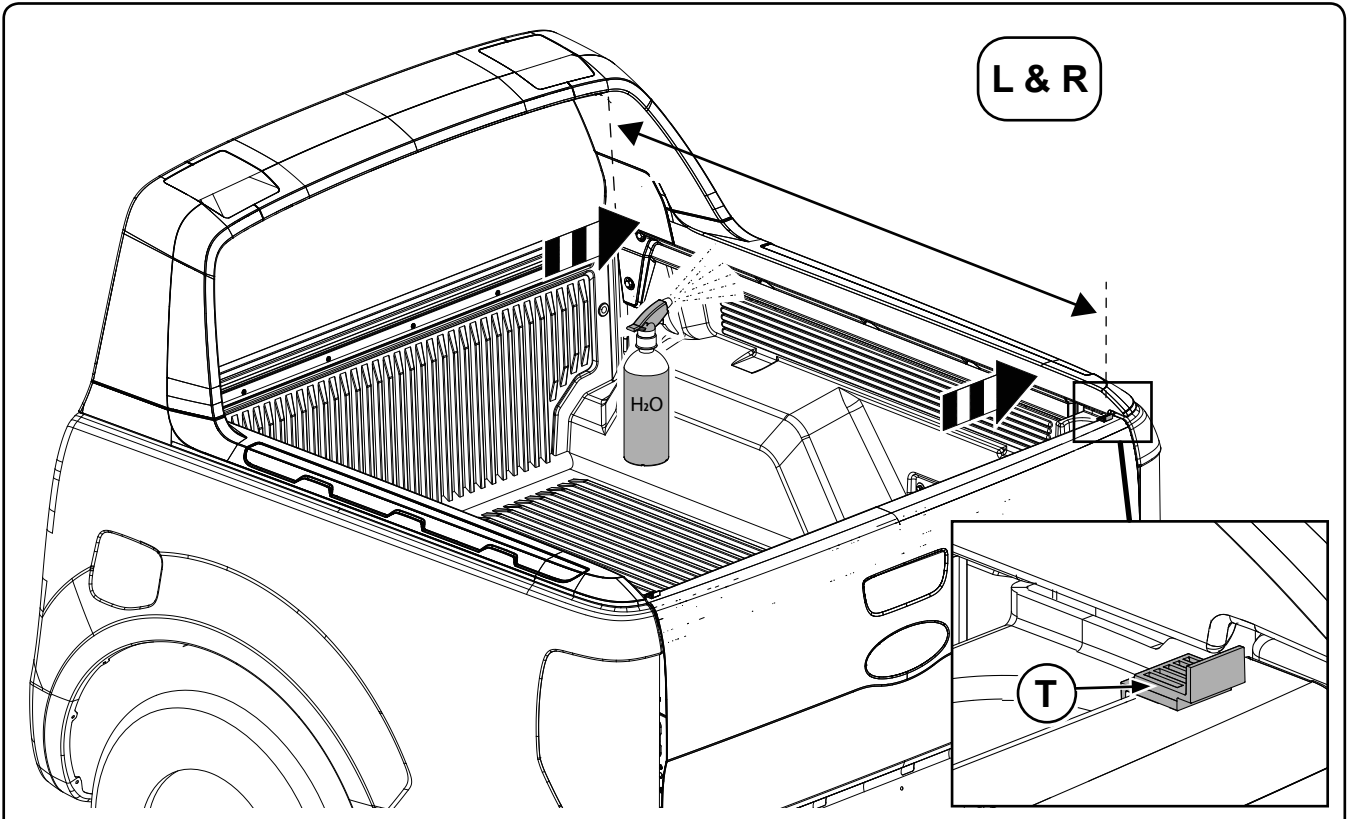


MTI-number 886 013	Issue 07	Date 02/05/2018	EB3B 26501A42-BB EB3B 26501A42-BC EB3B 26501A42-CC	AB39 21501A42-AB AB39-26501A42-AC	A66SX-19501A34-BB A66SX-26501A34-CC	Page 16 / 24
Pedersholmparken 10 3600 Frederikssund Denmark			ph: +45 4810 2950 Fax +45 4810 2960		www.mountaintop.dk	

Ford Wildtrak

Mountain Top Roll

Installation Instructions

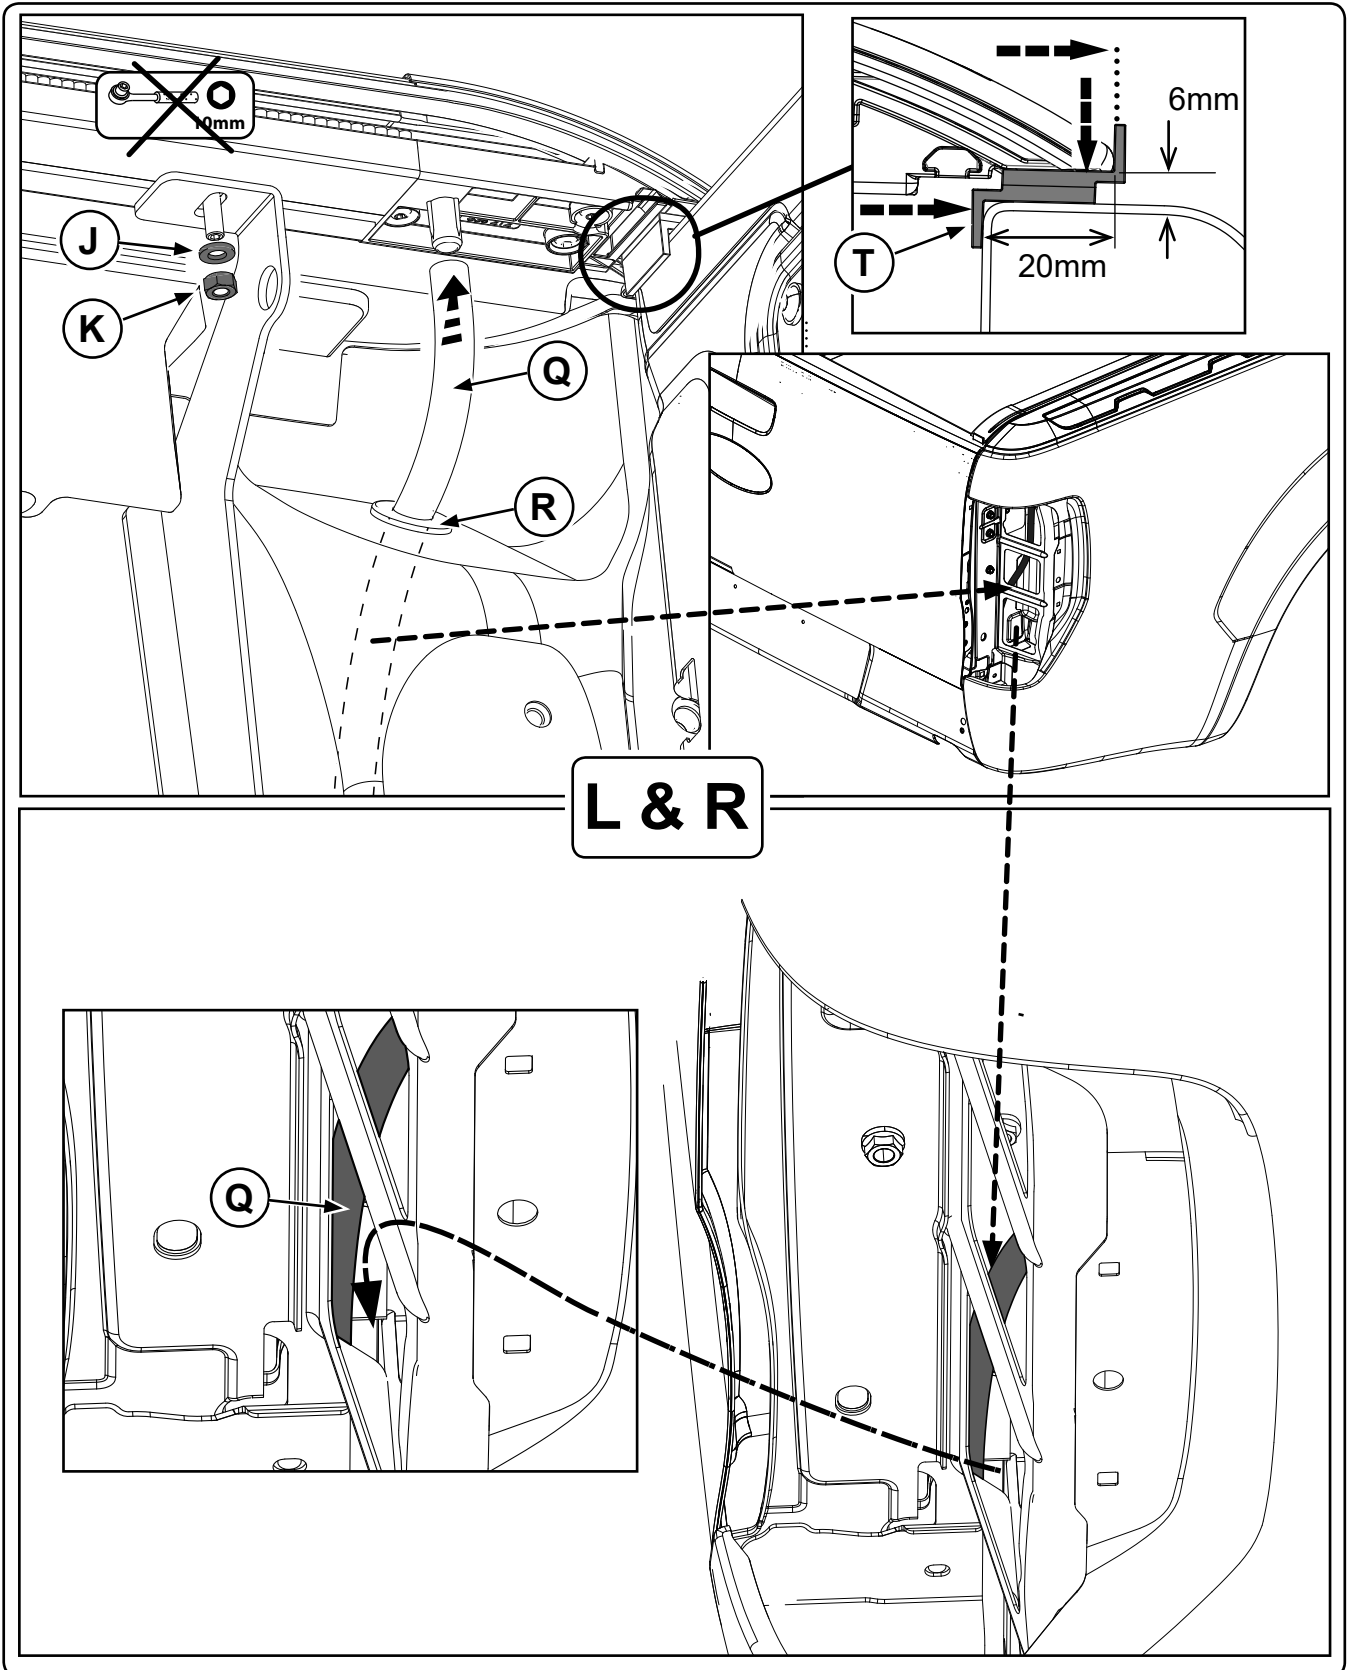


MTI-number 886 013	Issue 07	Date 02/05/2018	EB3B 26501A42-BB EB3B 26501A42-BC EB3B 26501A42-CC	AB39 21501A42-AB AB39-26501A42-AC	A66SX-19501A34-BB A66SX-26501A34-CC	Page 17 / 24
Pedersholmparken 10 3600 Frederikssund Denmark			ph: +45 4810 2950 Fax +45 4810 2960		www.mountaintop.dk	

Ford Wildtrak

Mountain Top Roll


Installation Instructions

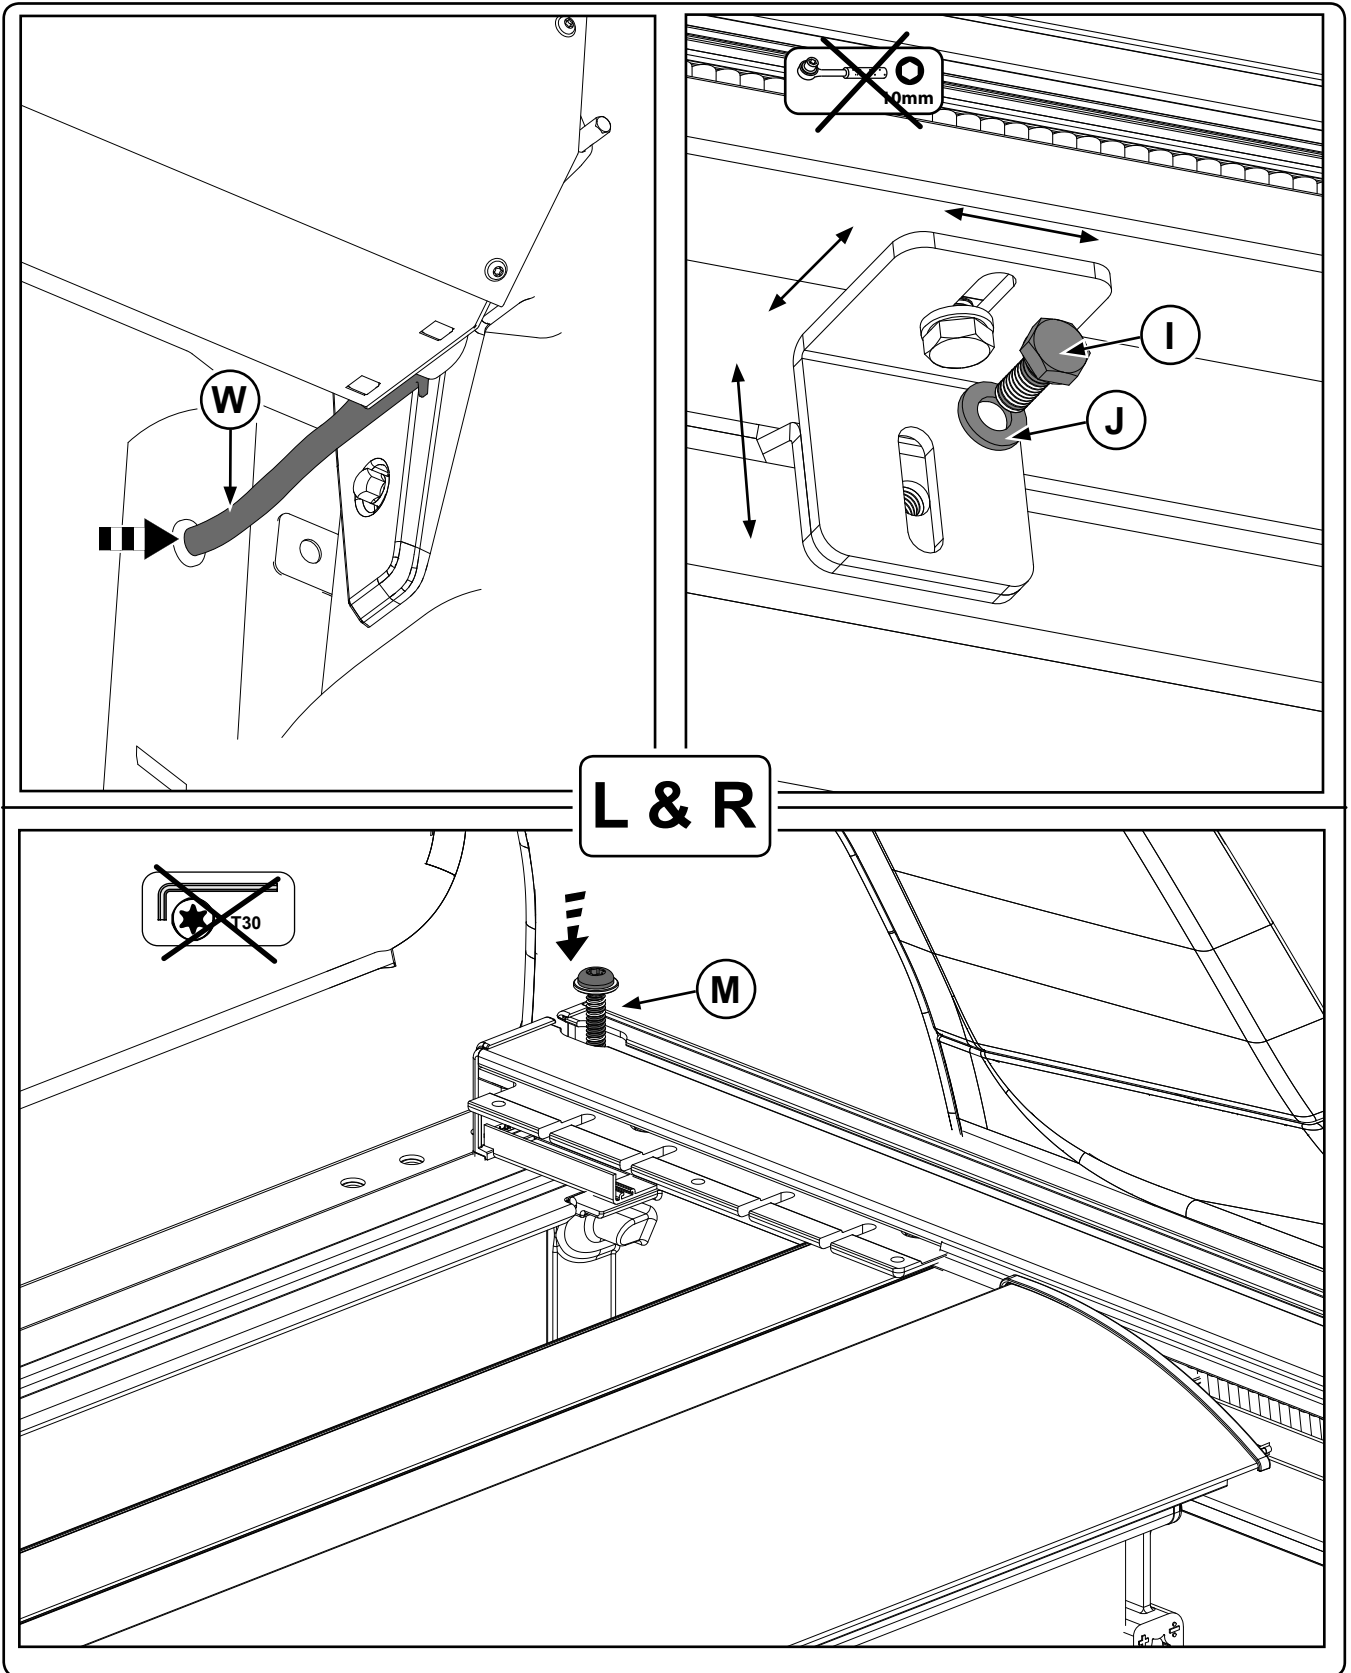

Ford Wildtrak

Mountain Top Roll

Installation Instructions

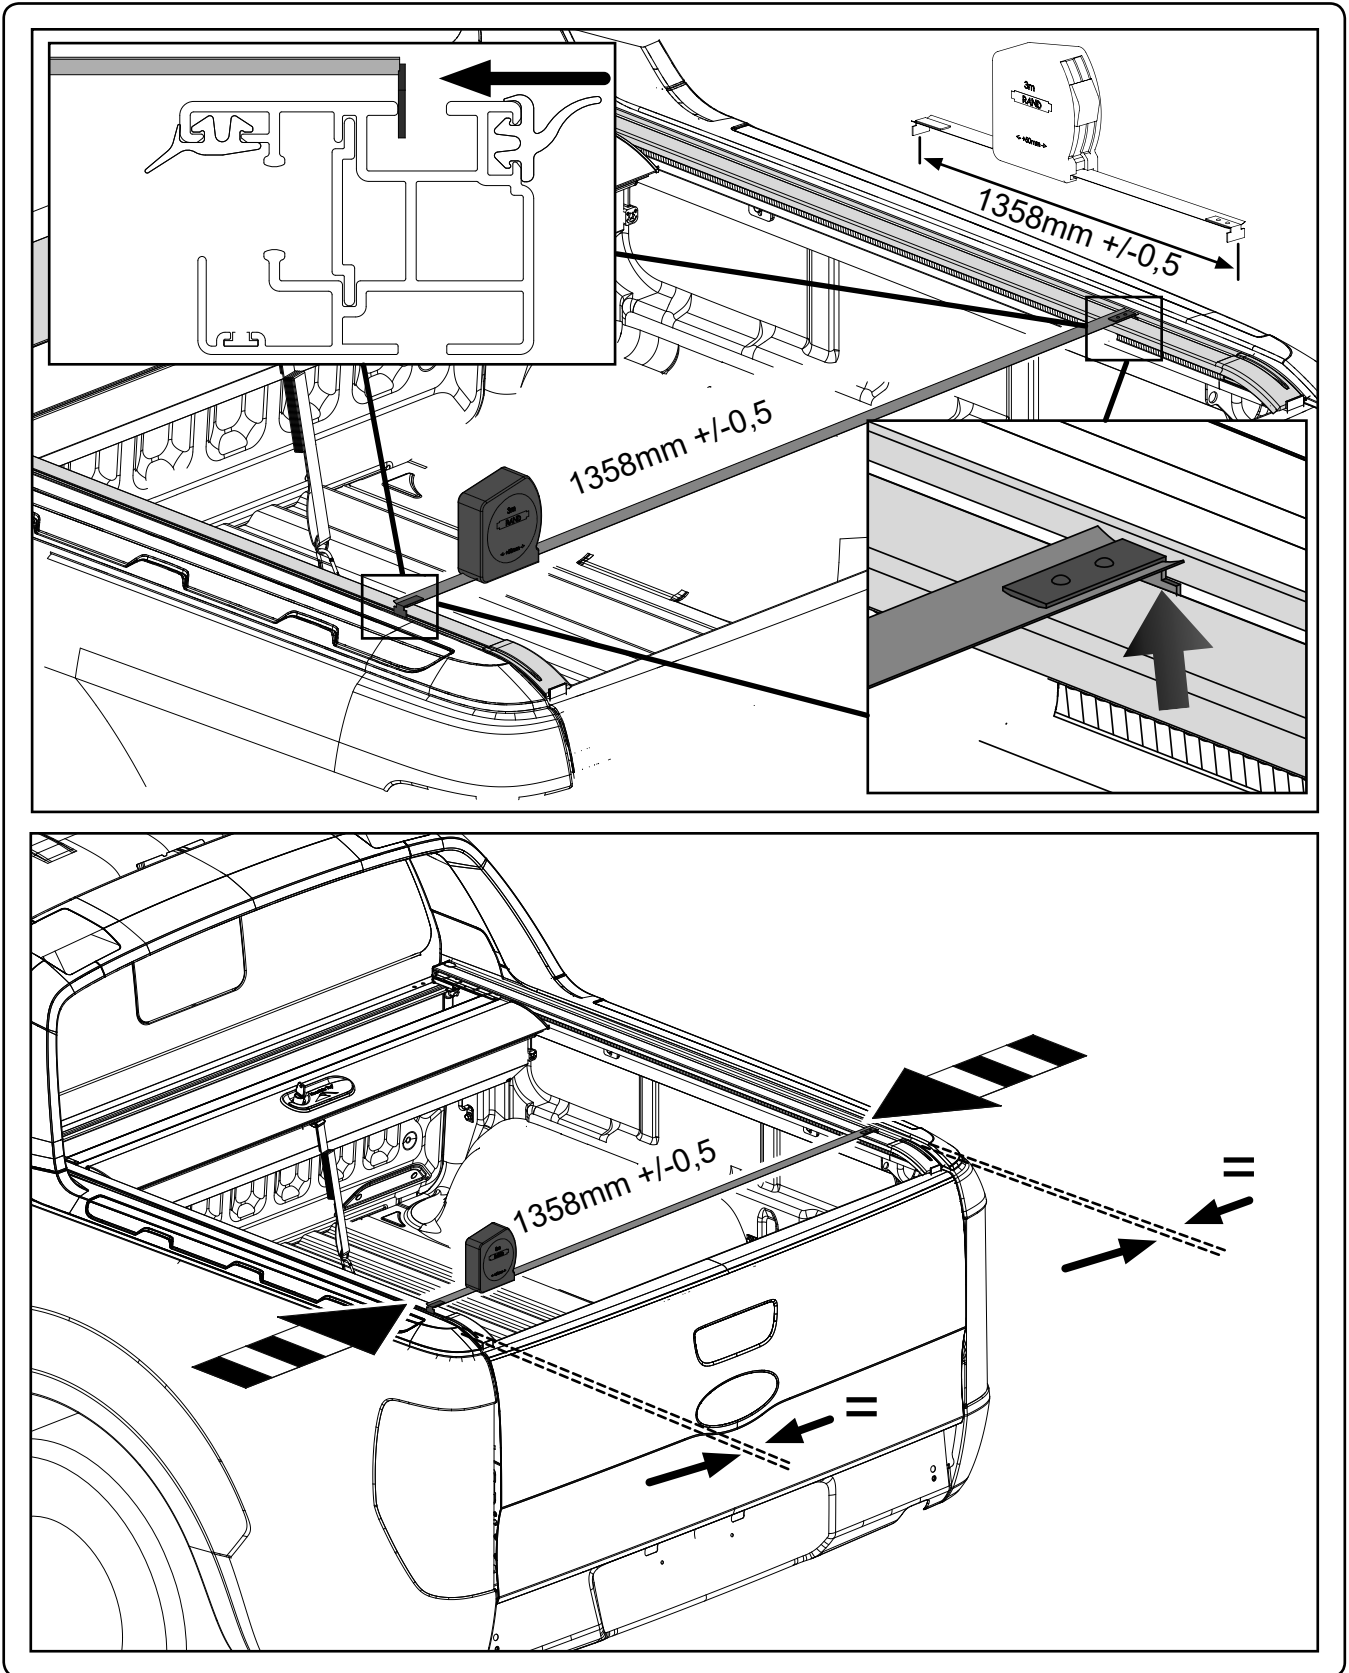


MTI-number 886 013	Issue 07	Date 02/05/2018	EB3B 26501A42-BB EB3B 26501A42-BC EB3B 26501A42-CC	AB39 21501A42-AB AB39-26501A42-AC	A66SX-19501A34-BB A66SX-26501A34-CC	Page 19/24
Pedersholmparken 10 3600 Frederikssund Denmark			ph: +45 4810 2950 Fax +45 4810 2960		www.mountaintop.dk	

Ford Wildtrak

Mountain Top Roll



Installation Instructions

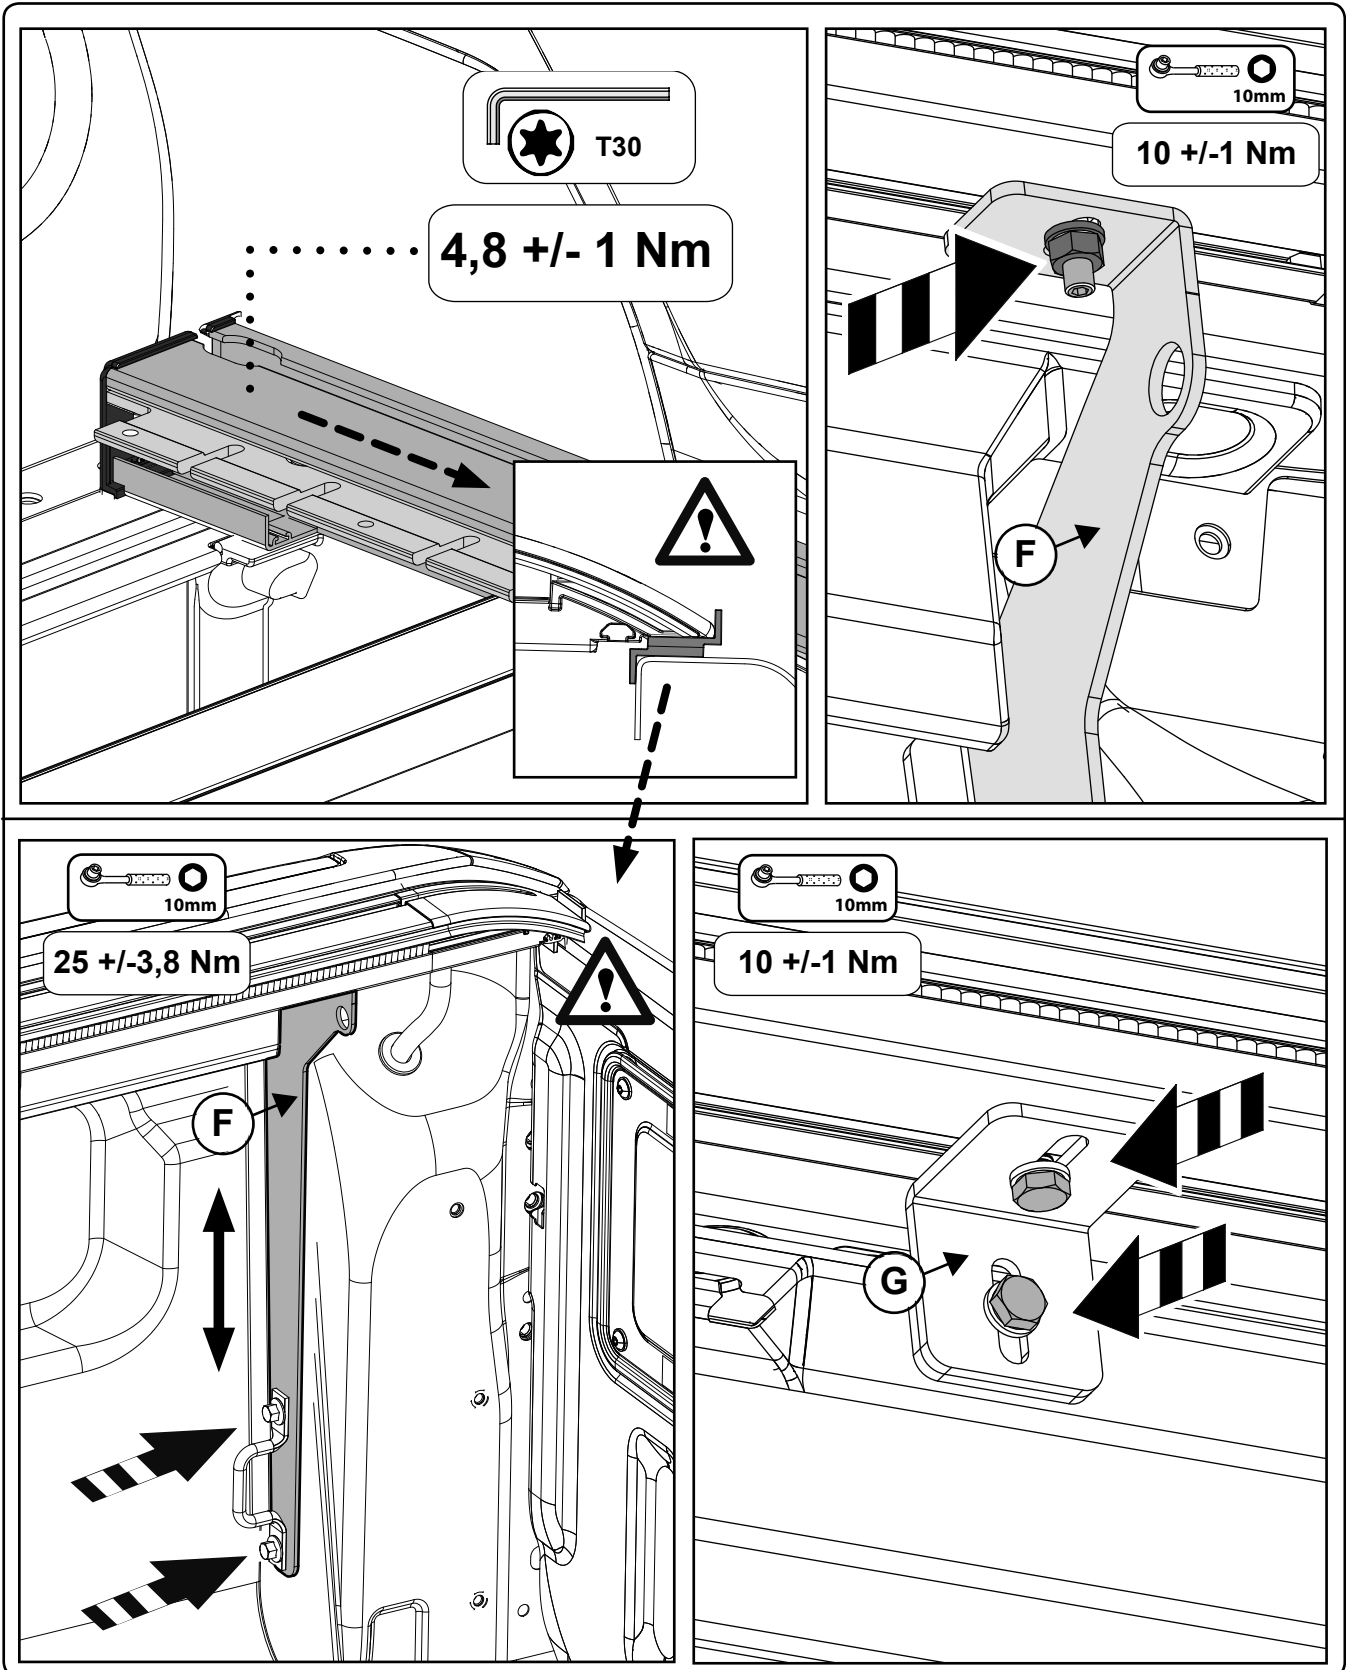

Ford Wildtrak

Mountain Top Roll

Installation Instructions

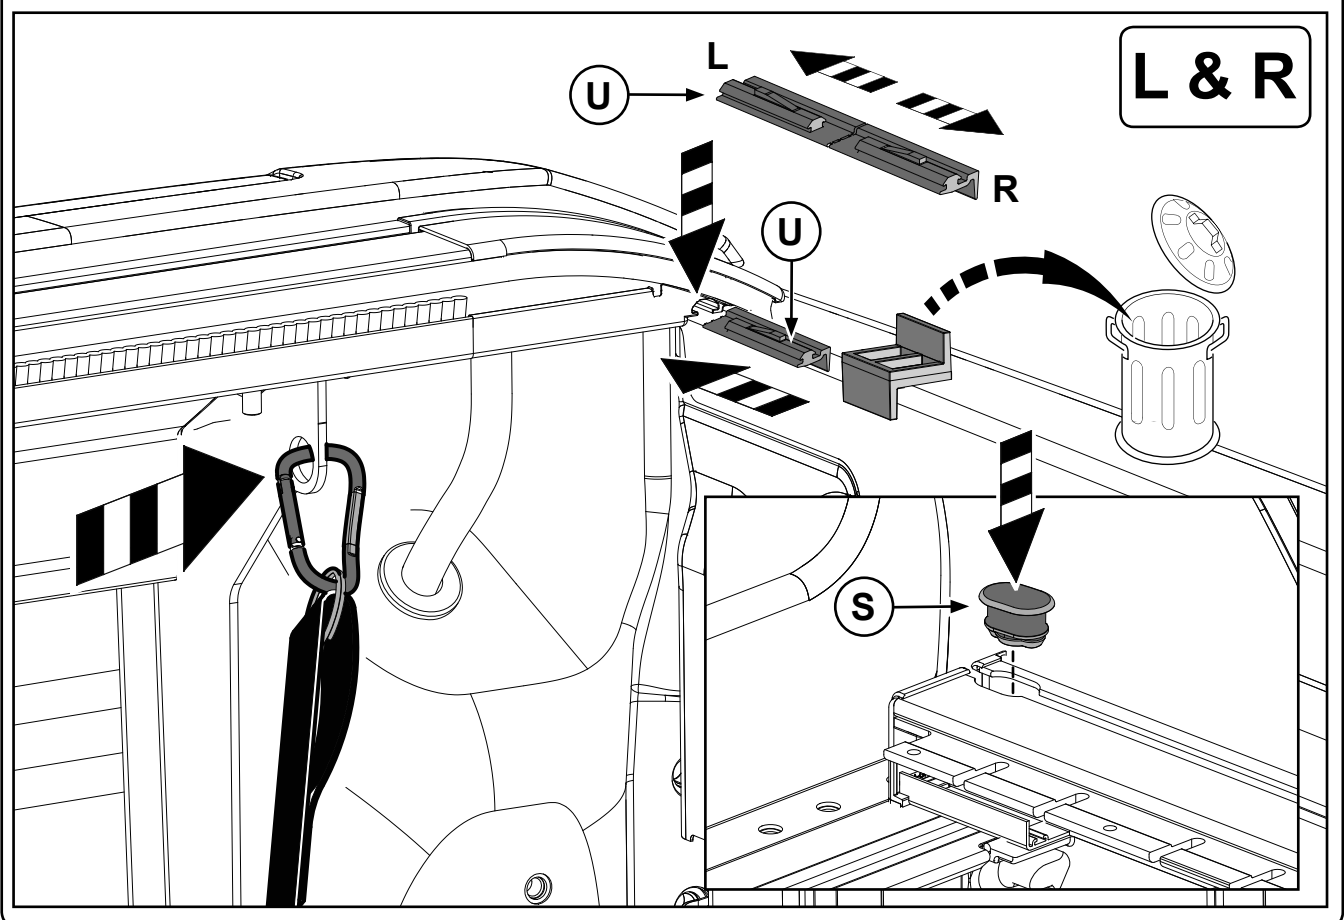
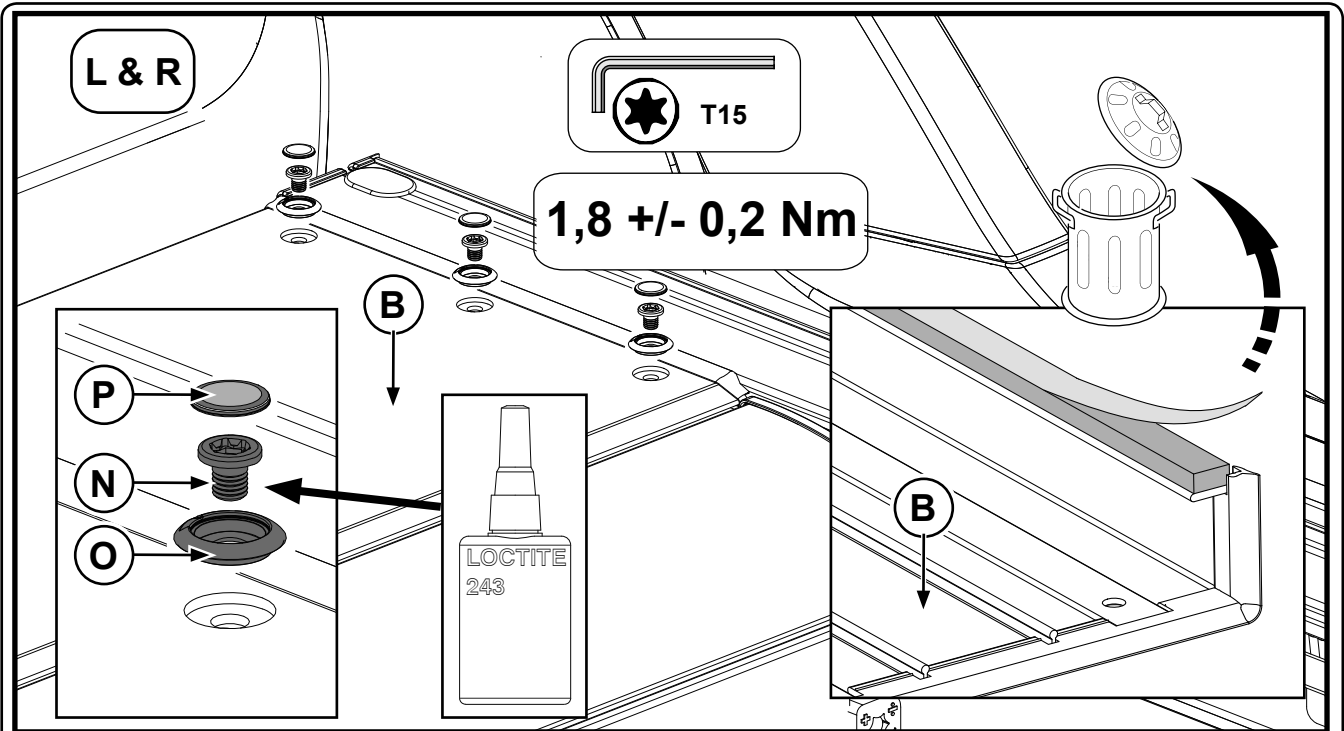


MTI-number 886 013	Issue 07	Date 02/05/2018	EB3B 26501A42-BB EB3B 26501A42-BC EB3B 26501A42-CC	AB39 21501A42-AB AB39-26501A42-AC	A66SX-19501A34-BB A66SX-26501A34-CC	Page 21 / 24
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk						

Ford Wildtrak

Mountain Top Roll

Installation Instructions



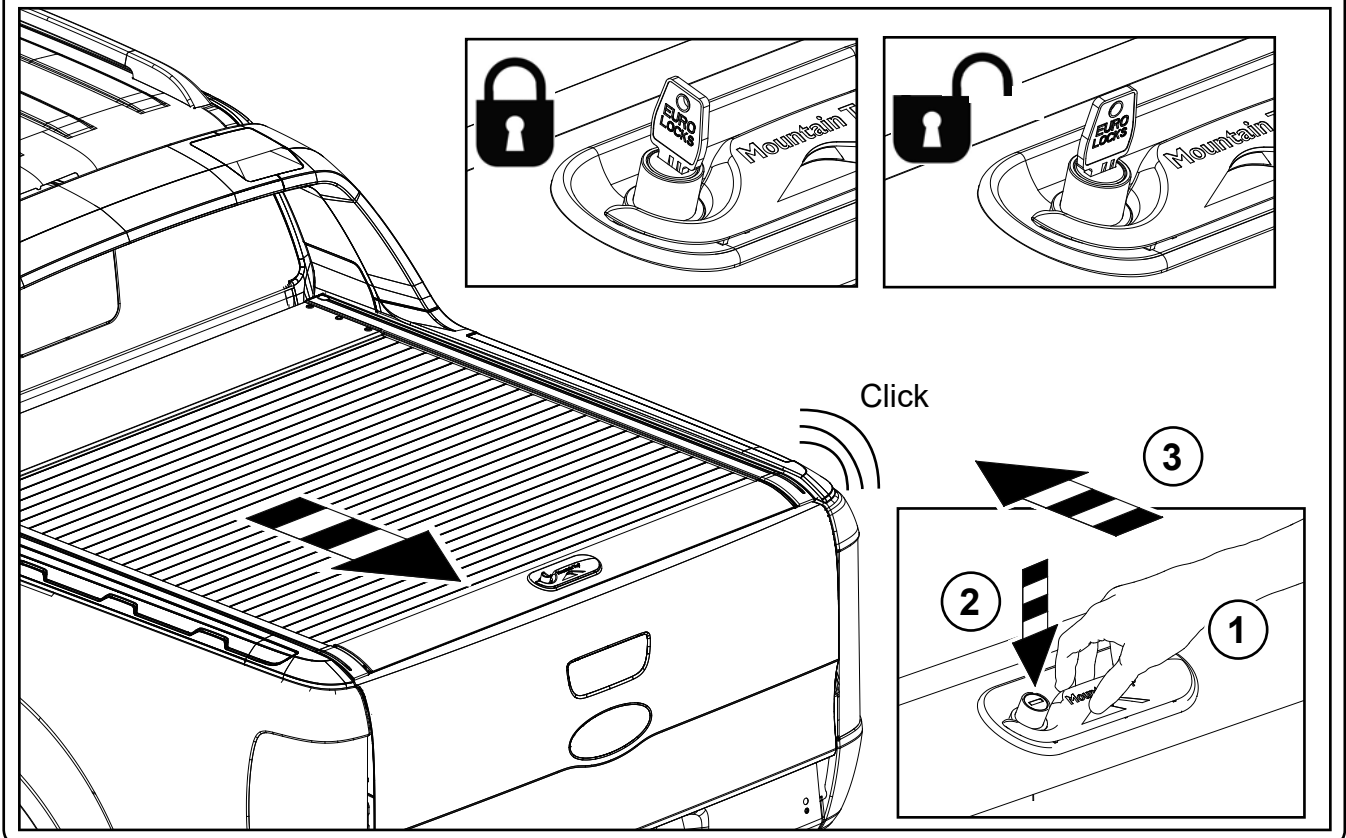
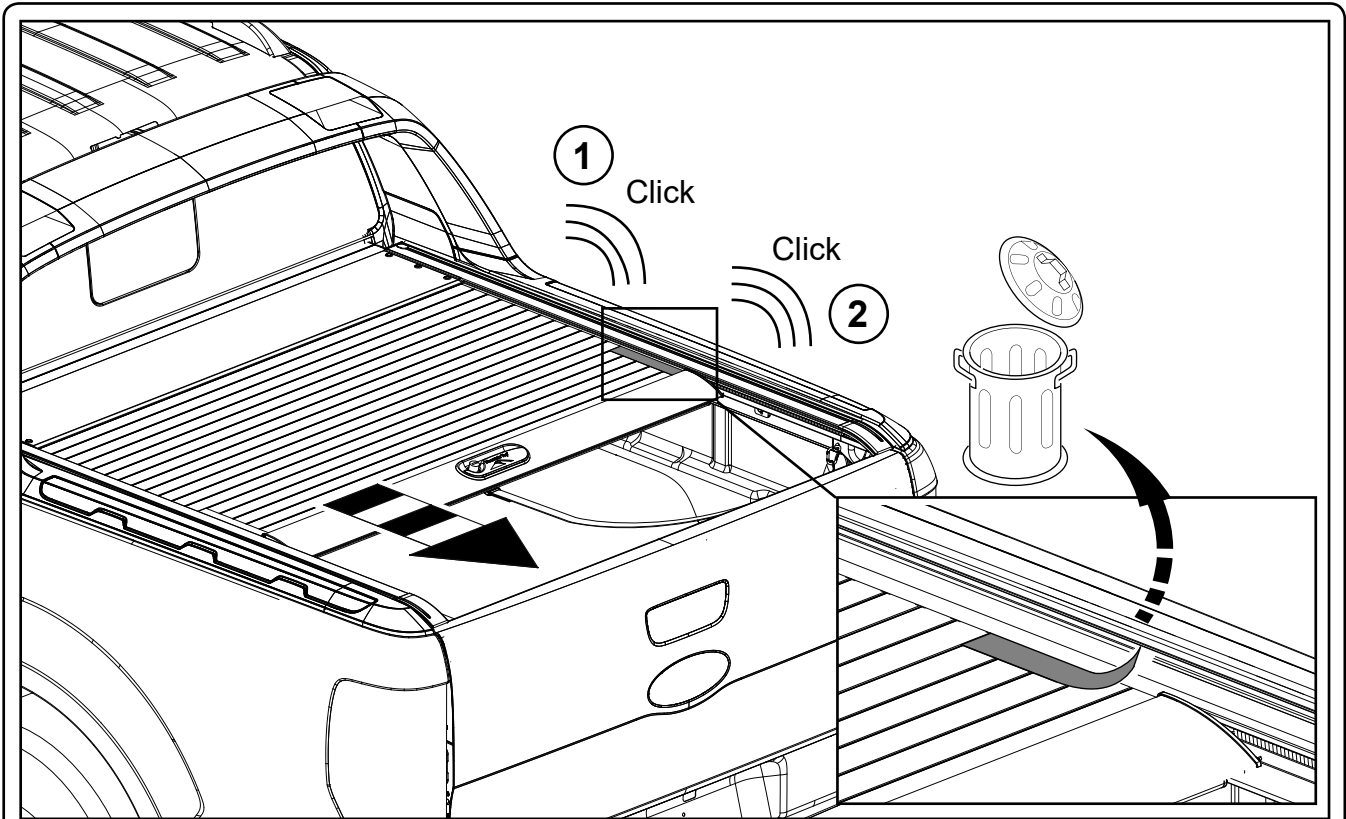


MTI-number 886 013	Issue 07	Date 02/05/2018	EB3B 26501A42-BB EB3B 26501A42-BC EB3B 26501A42-CC	AB39 21501A42-AB AB39-26501A42-AC	A66SX-19501A34-BB A66SX-26501A34-CC	Page 22 / 24
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk						

Ford Wildtrak

Mountain Top Roll

Installation Instructions

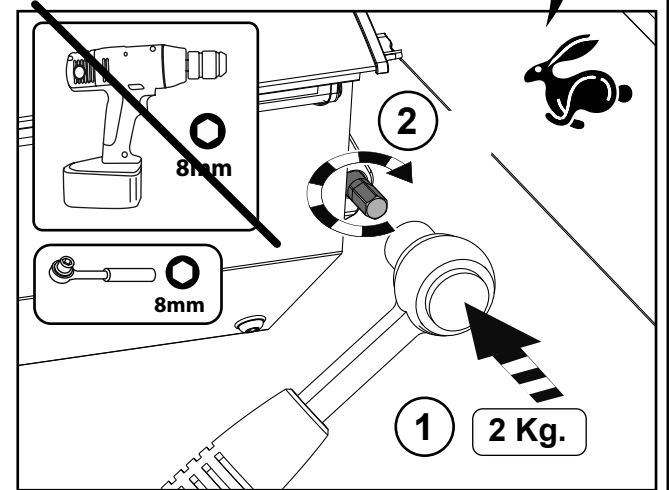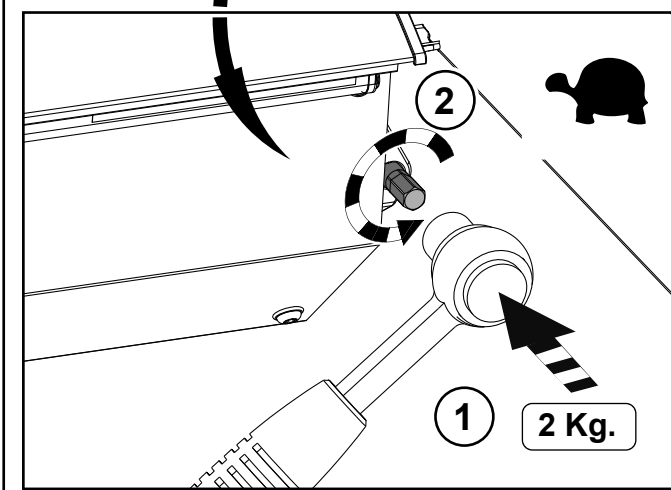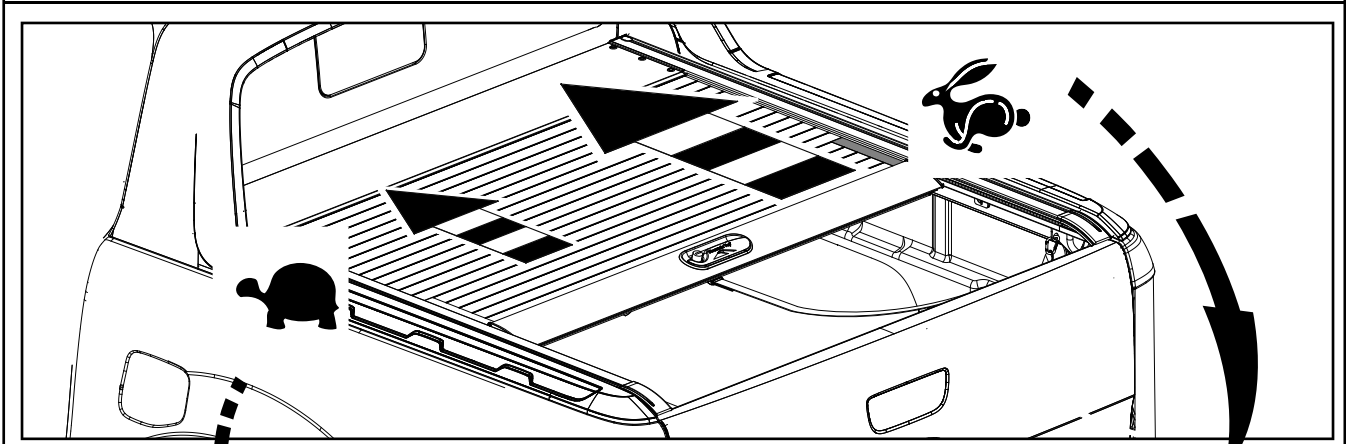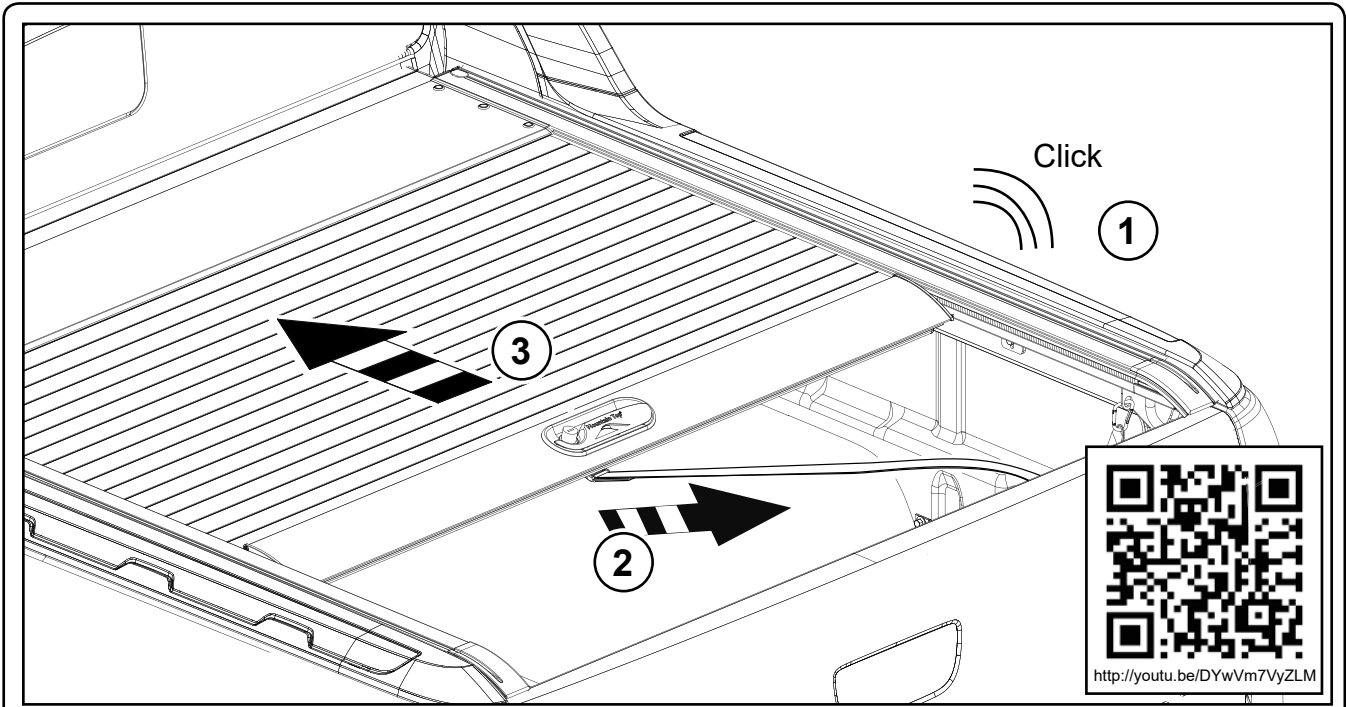

Ford Wildtrak

Mountain Top Roll

Installation Instructions

