

Mountain Top® Roll

Installation manual




DOWNLOAD PDF




Parts

A

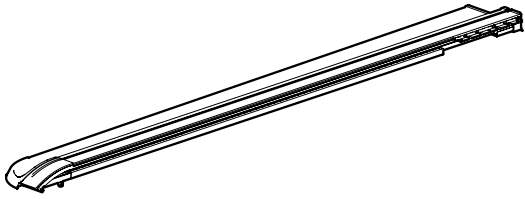


x 1

B

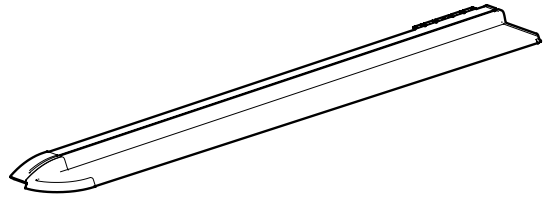


x 1

C

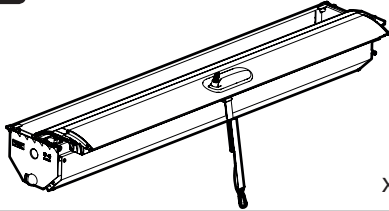


x 1

D

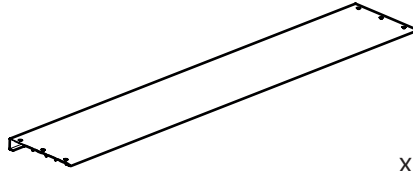

x 1

E

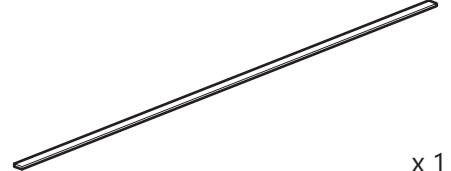


x 1

F




x 6

G

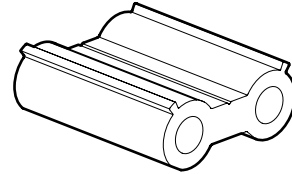


x 6

H

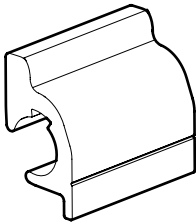


x 6

I




x 6

J

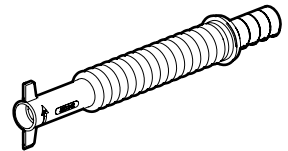

x 2

K



x 12

L




x 6

M




x 6

N

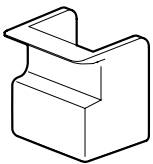


x 2

O




x 1

P

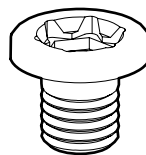

x 6

Q

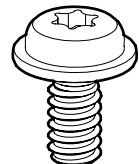


x 4



Kit

K



x 12

L




x 6

M




x 6

N

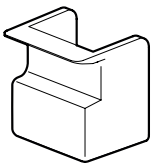


x 2

O




x 1

P


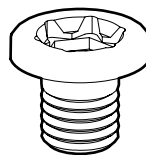




x 6



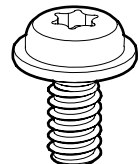

Q

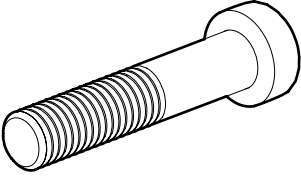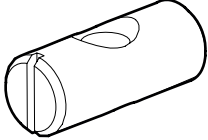

x 4

Kit		
R		S
		T
	x 6	x 6
		x 6

Kit	
U	V
	
x 2	x 2


Manual(s)	
	
	
x 1	x 1




Tools and materials needed



24 mm

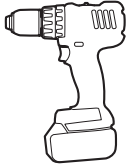






1 - 25 Nm

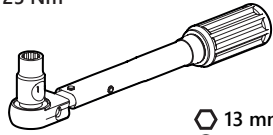

- ⬡ 13 mm
- 5 mm
- ⚙ T15, T30







Rust protection
Rostschutzmittel
Anti-rouille
Anti roest

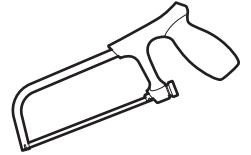
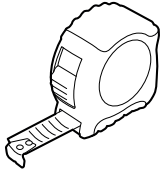




1



Applying rust protection

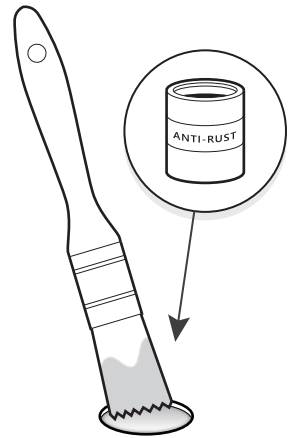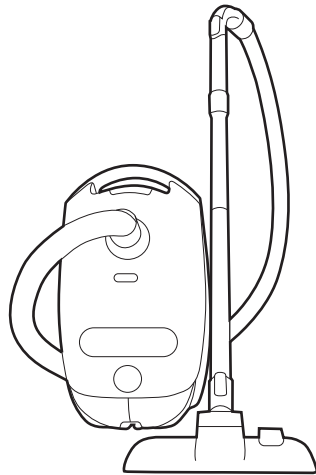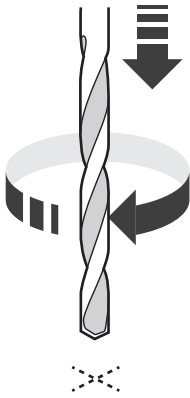




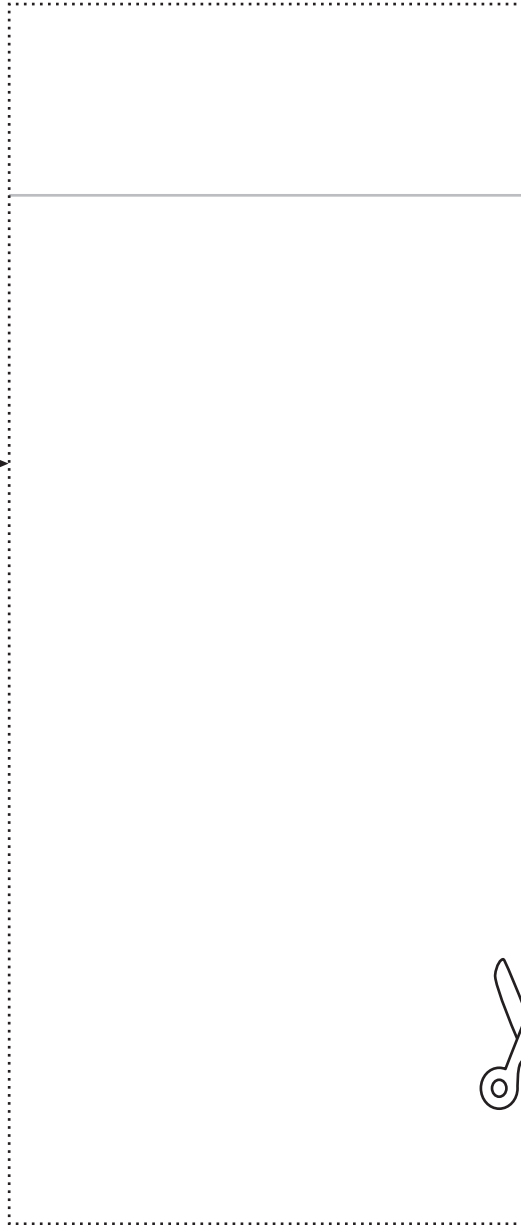


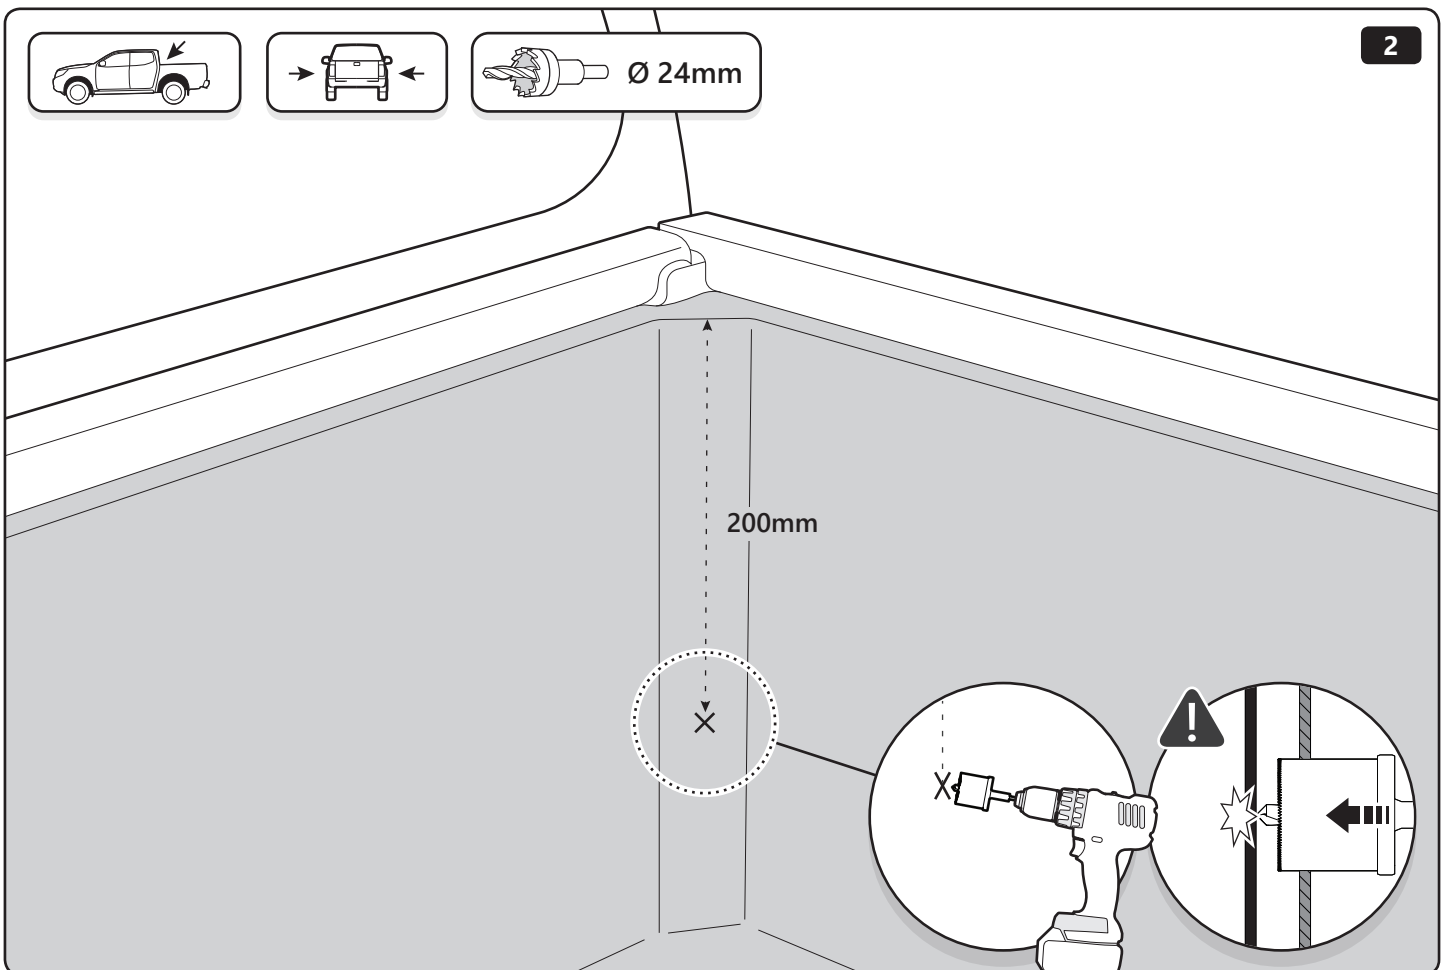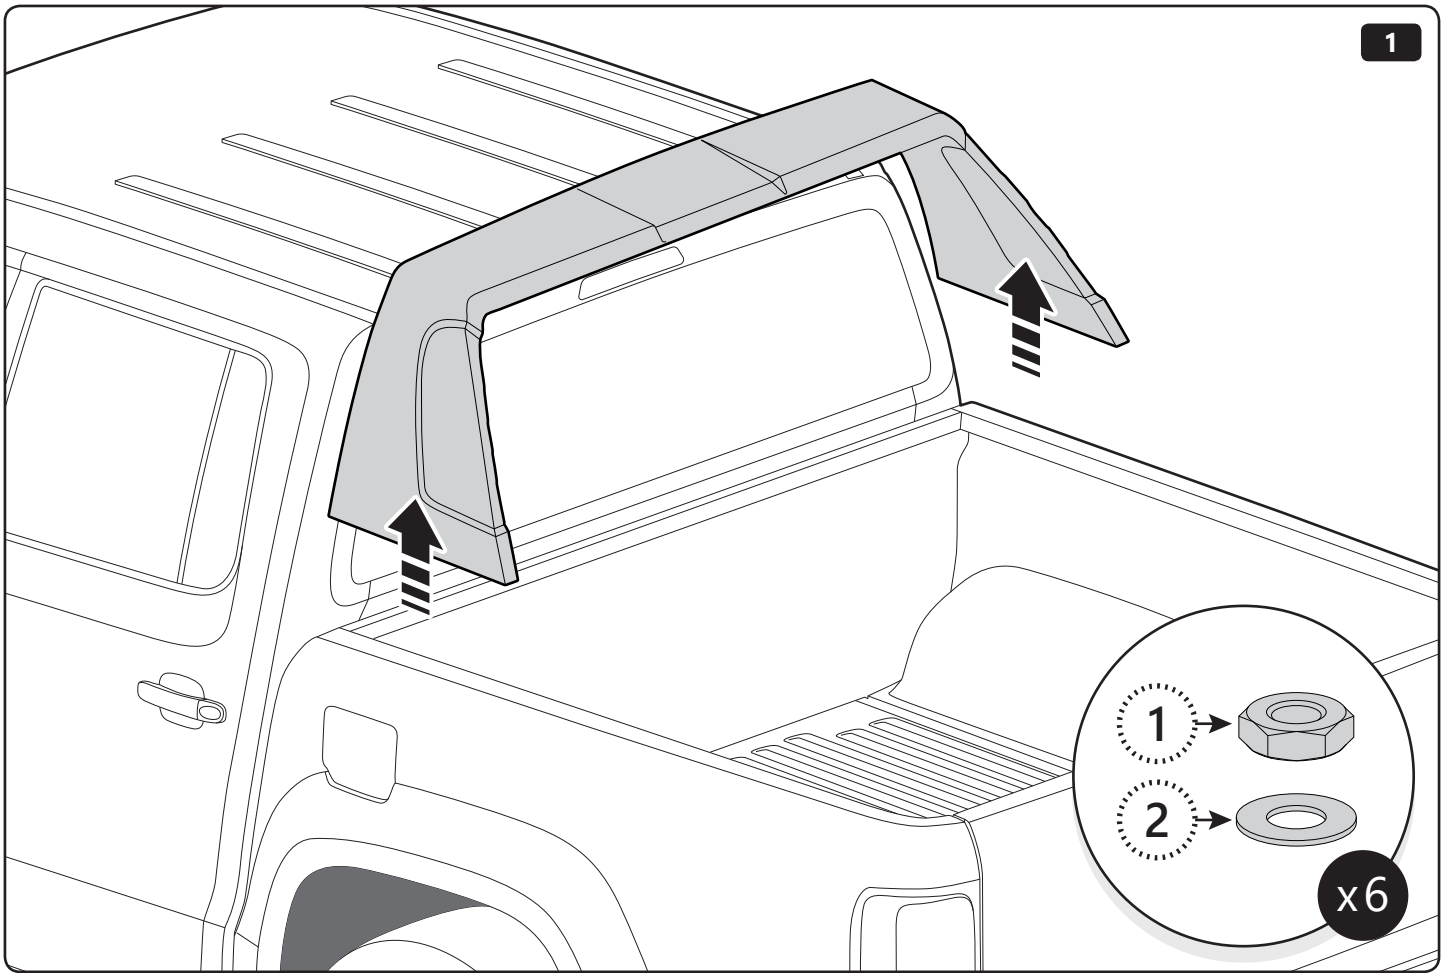

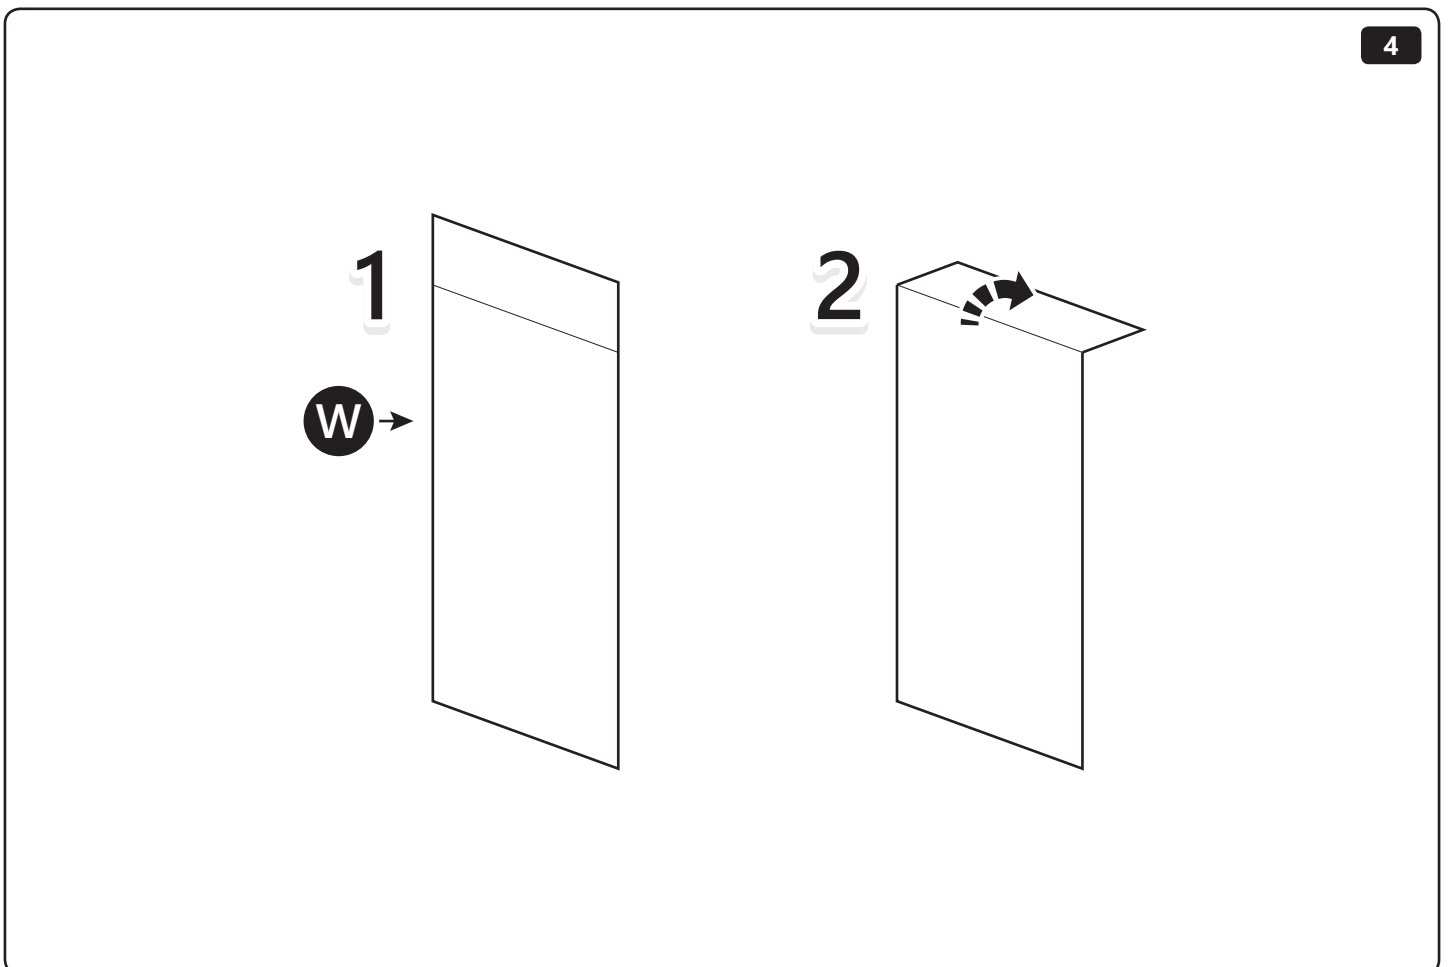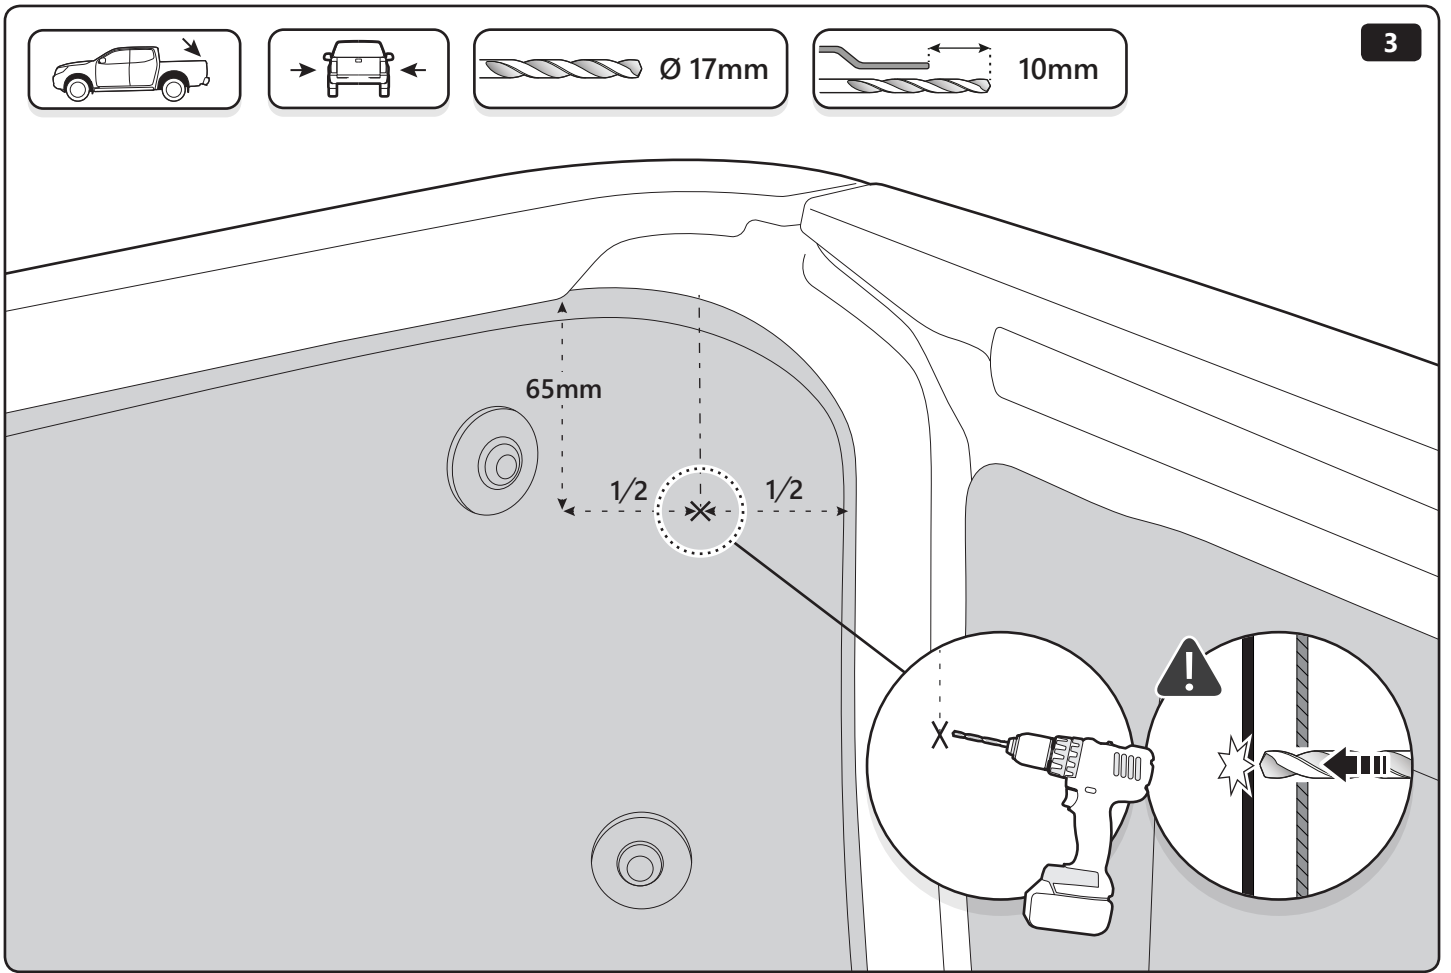

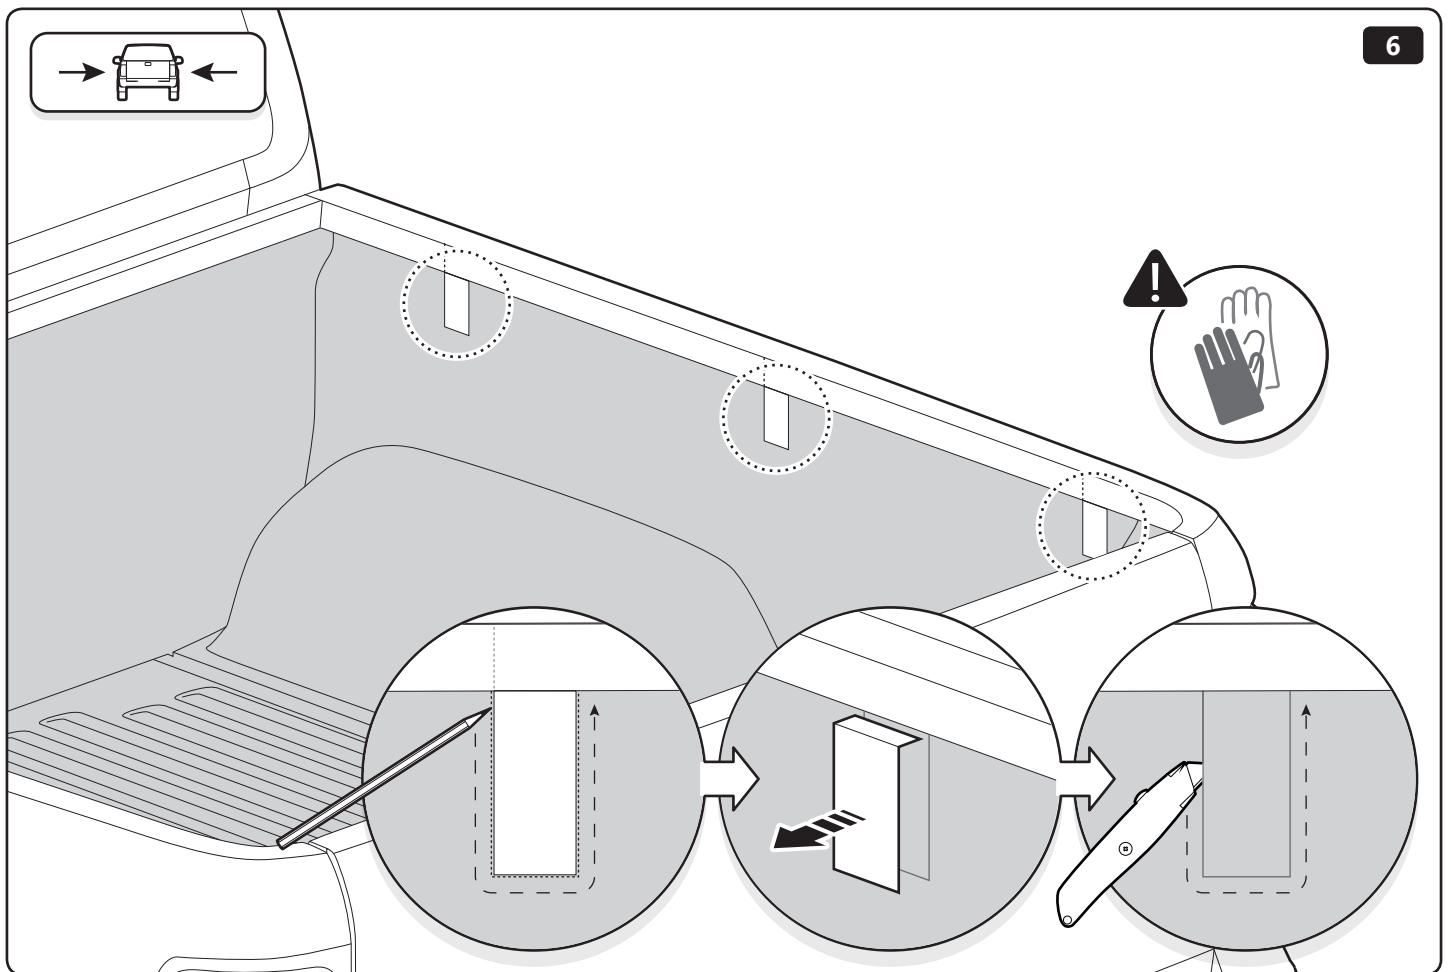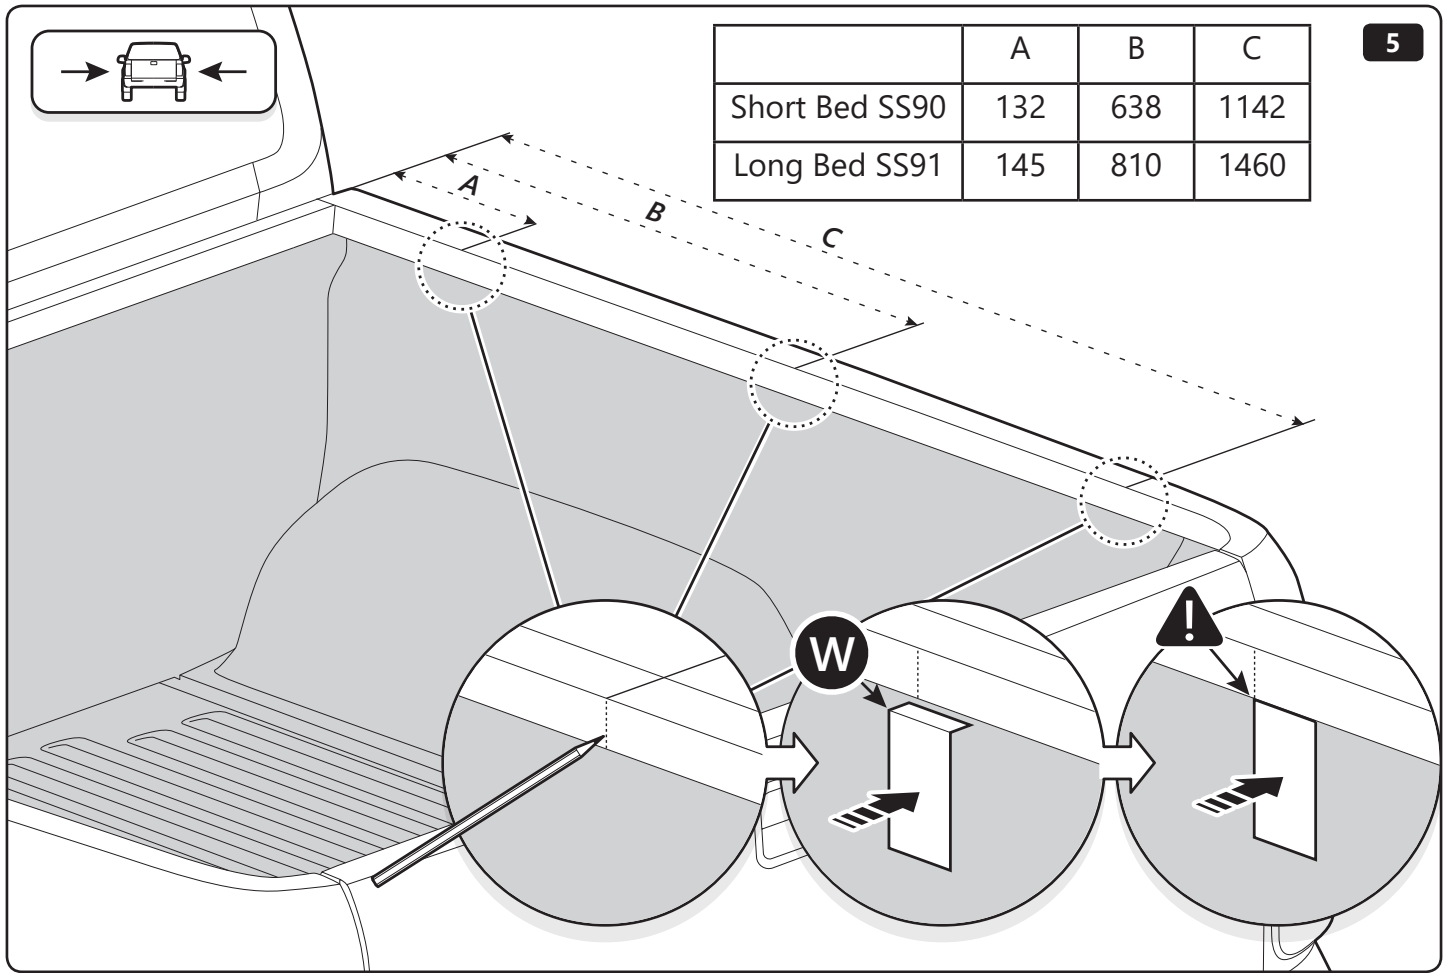


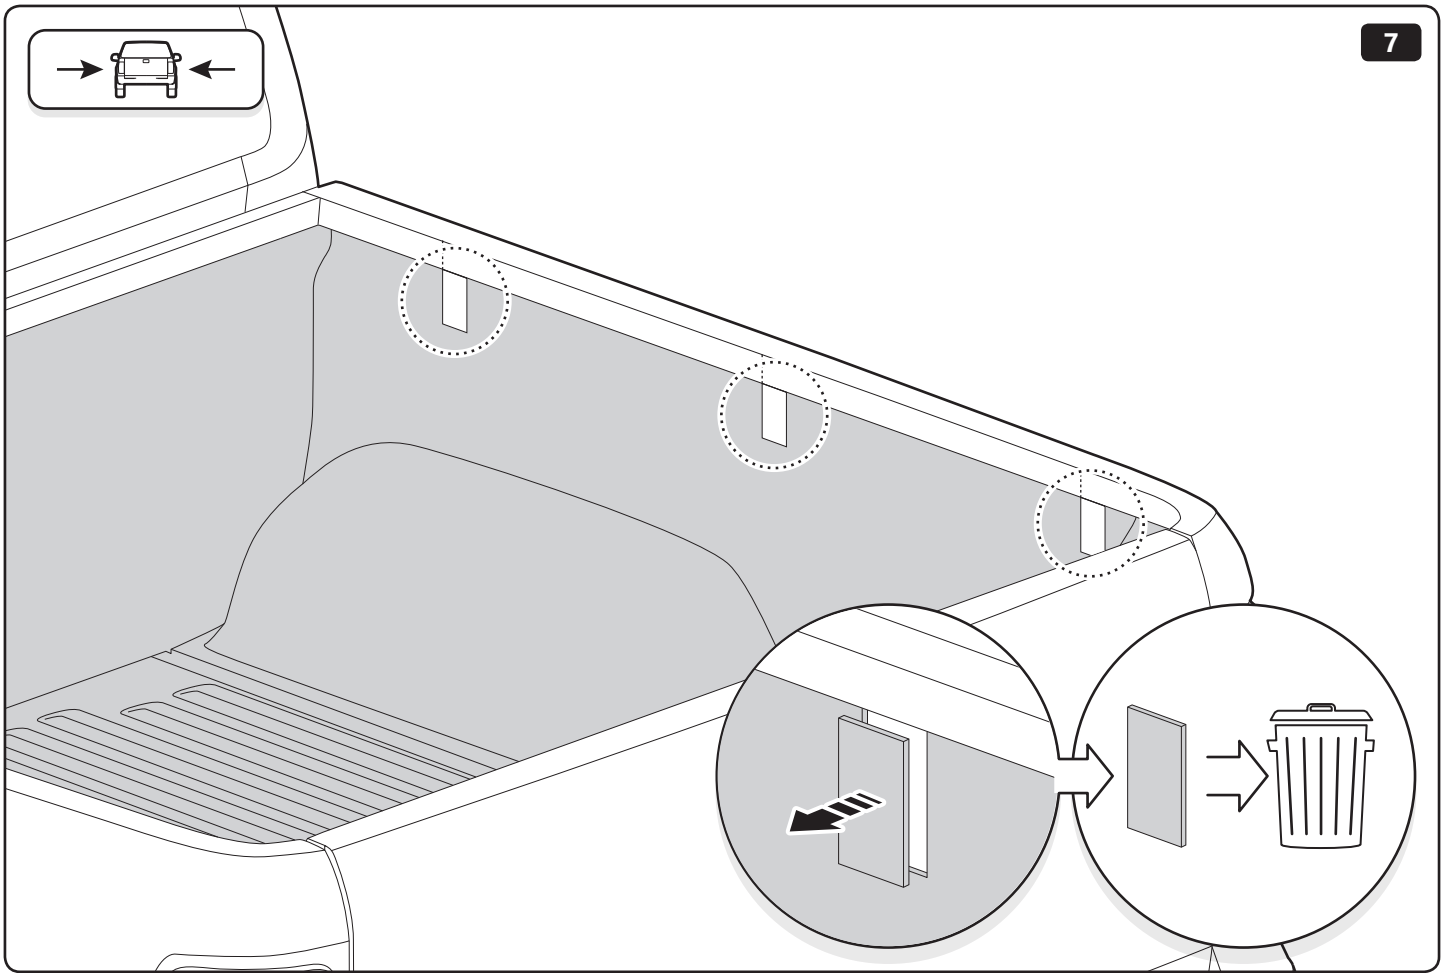

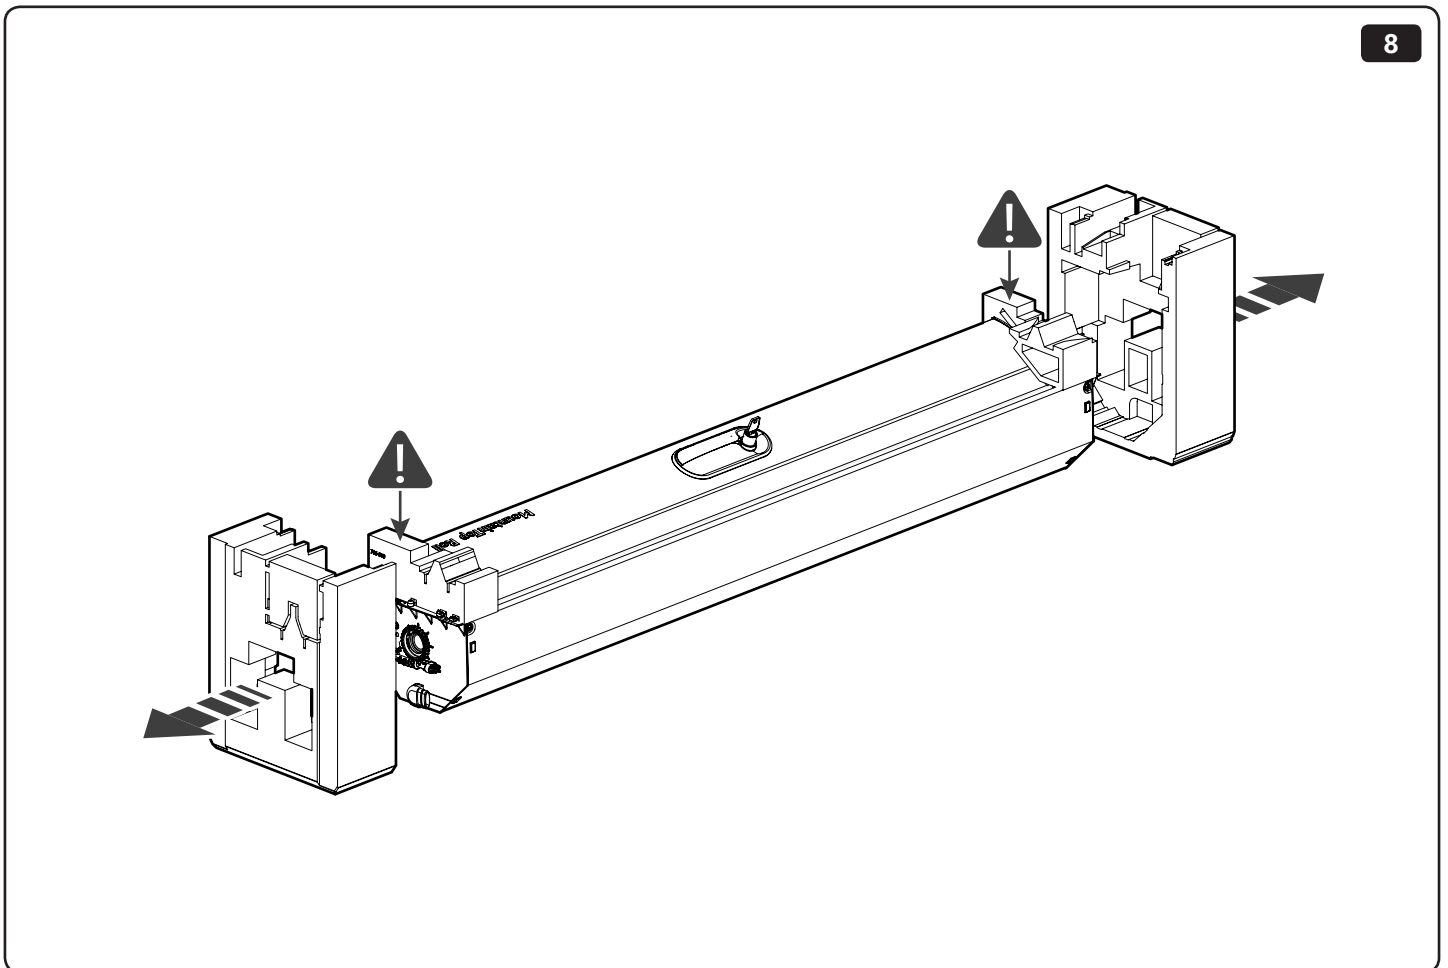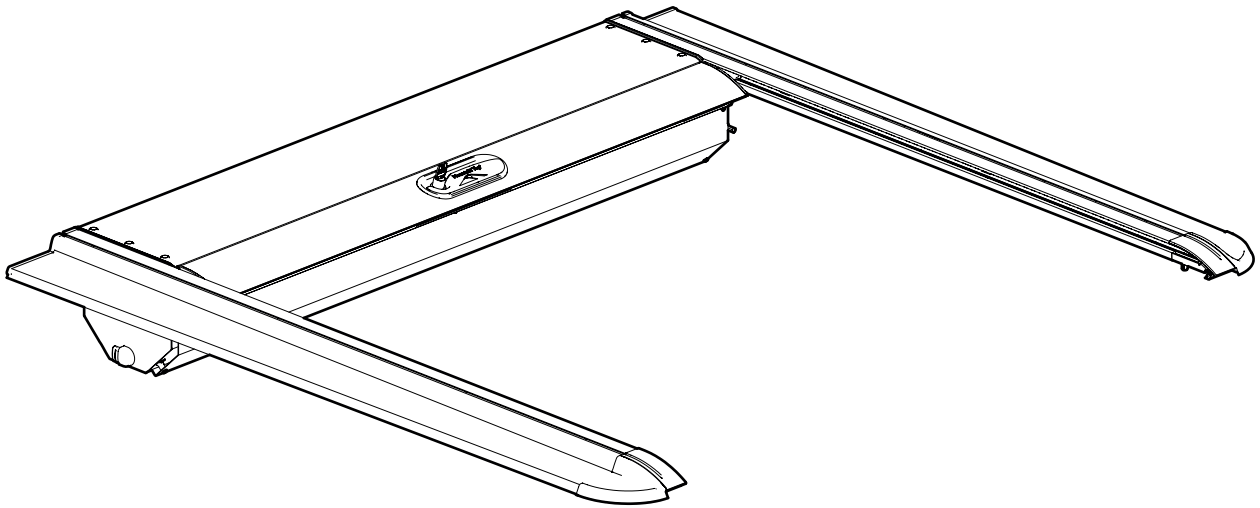



8



9


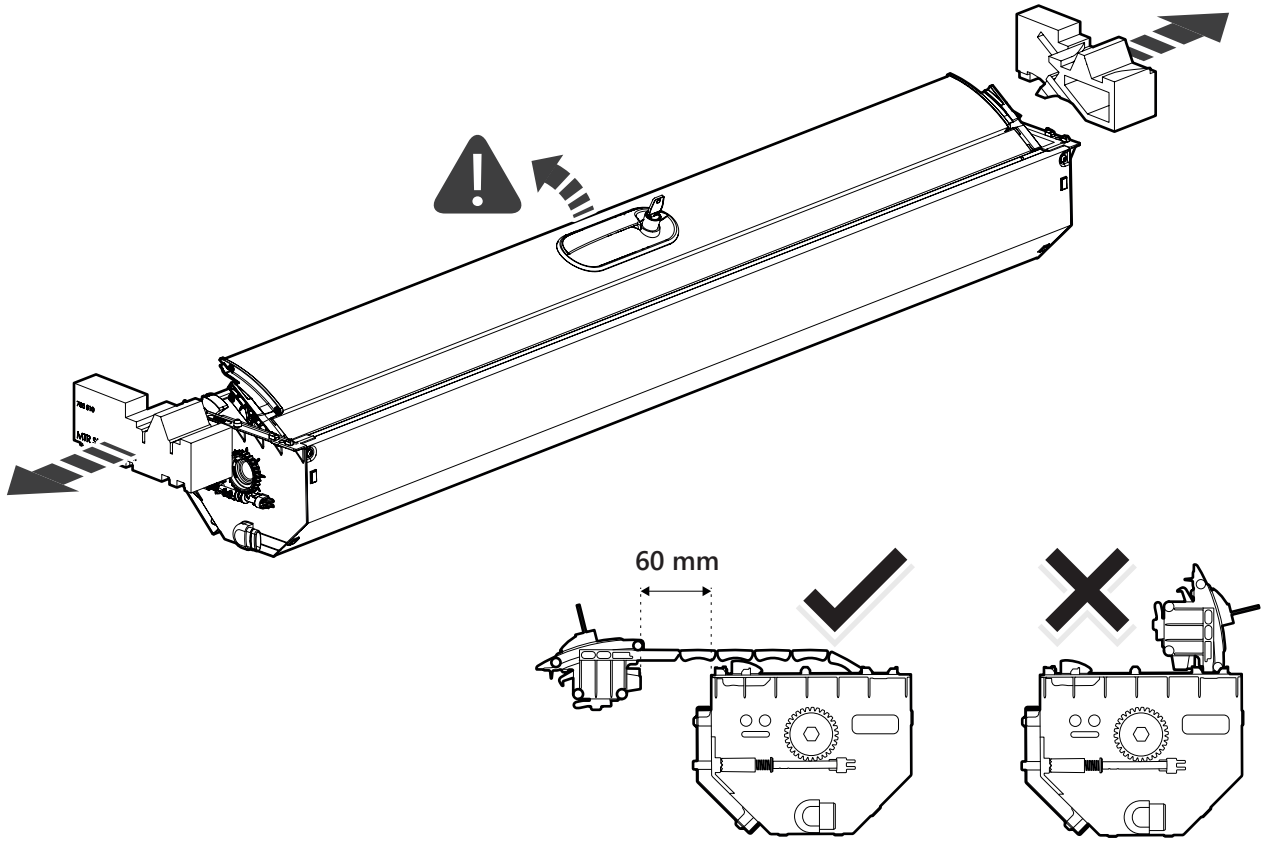


10

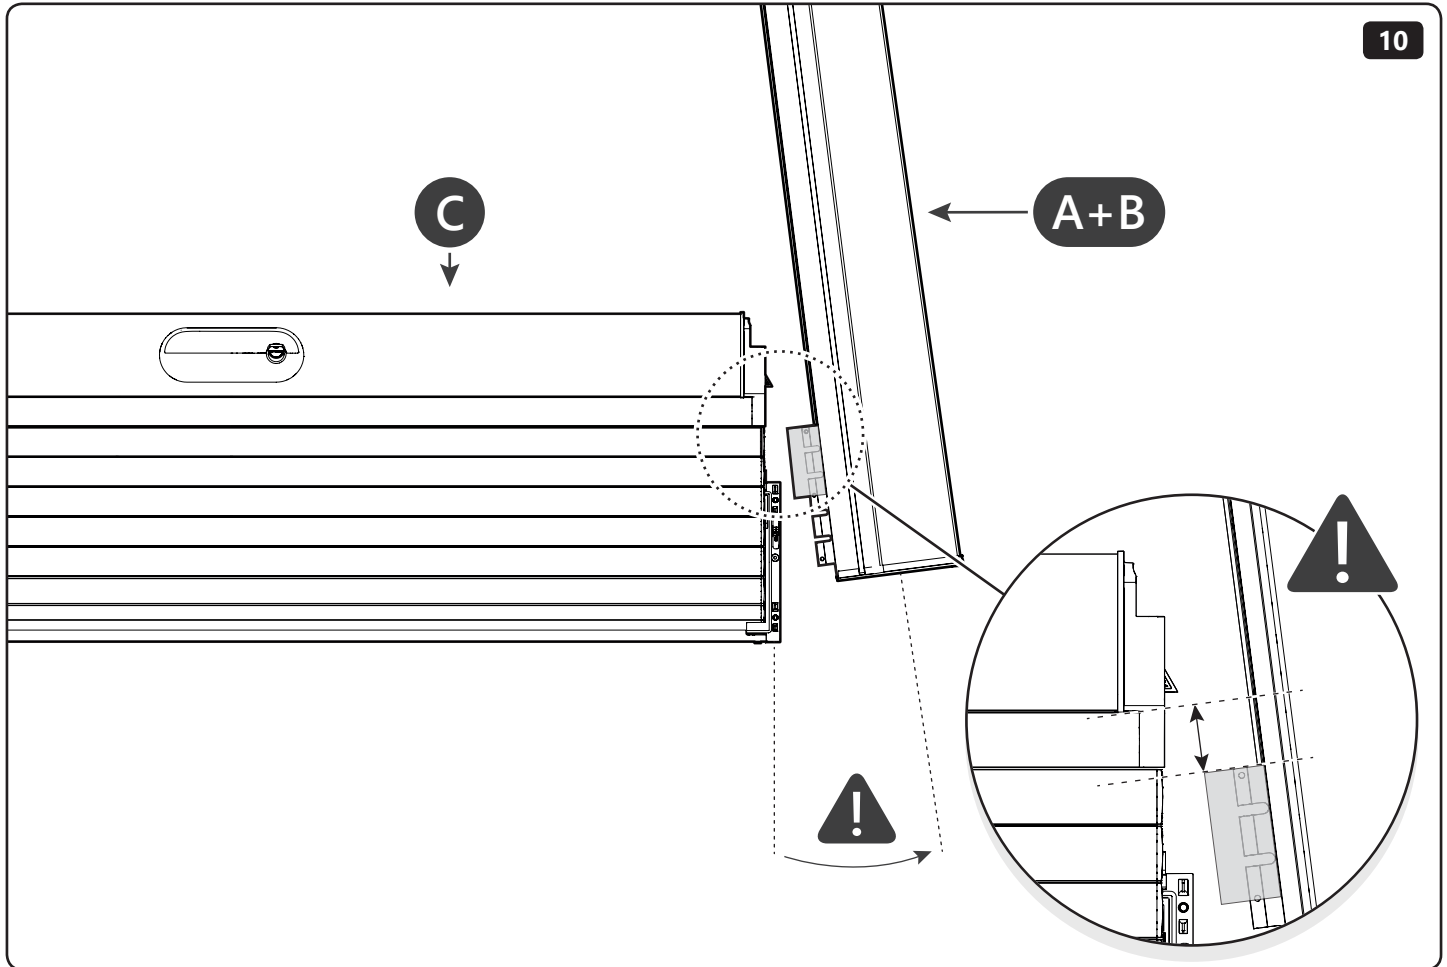




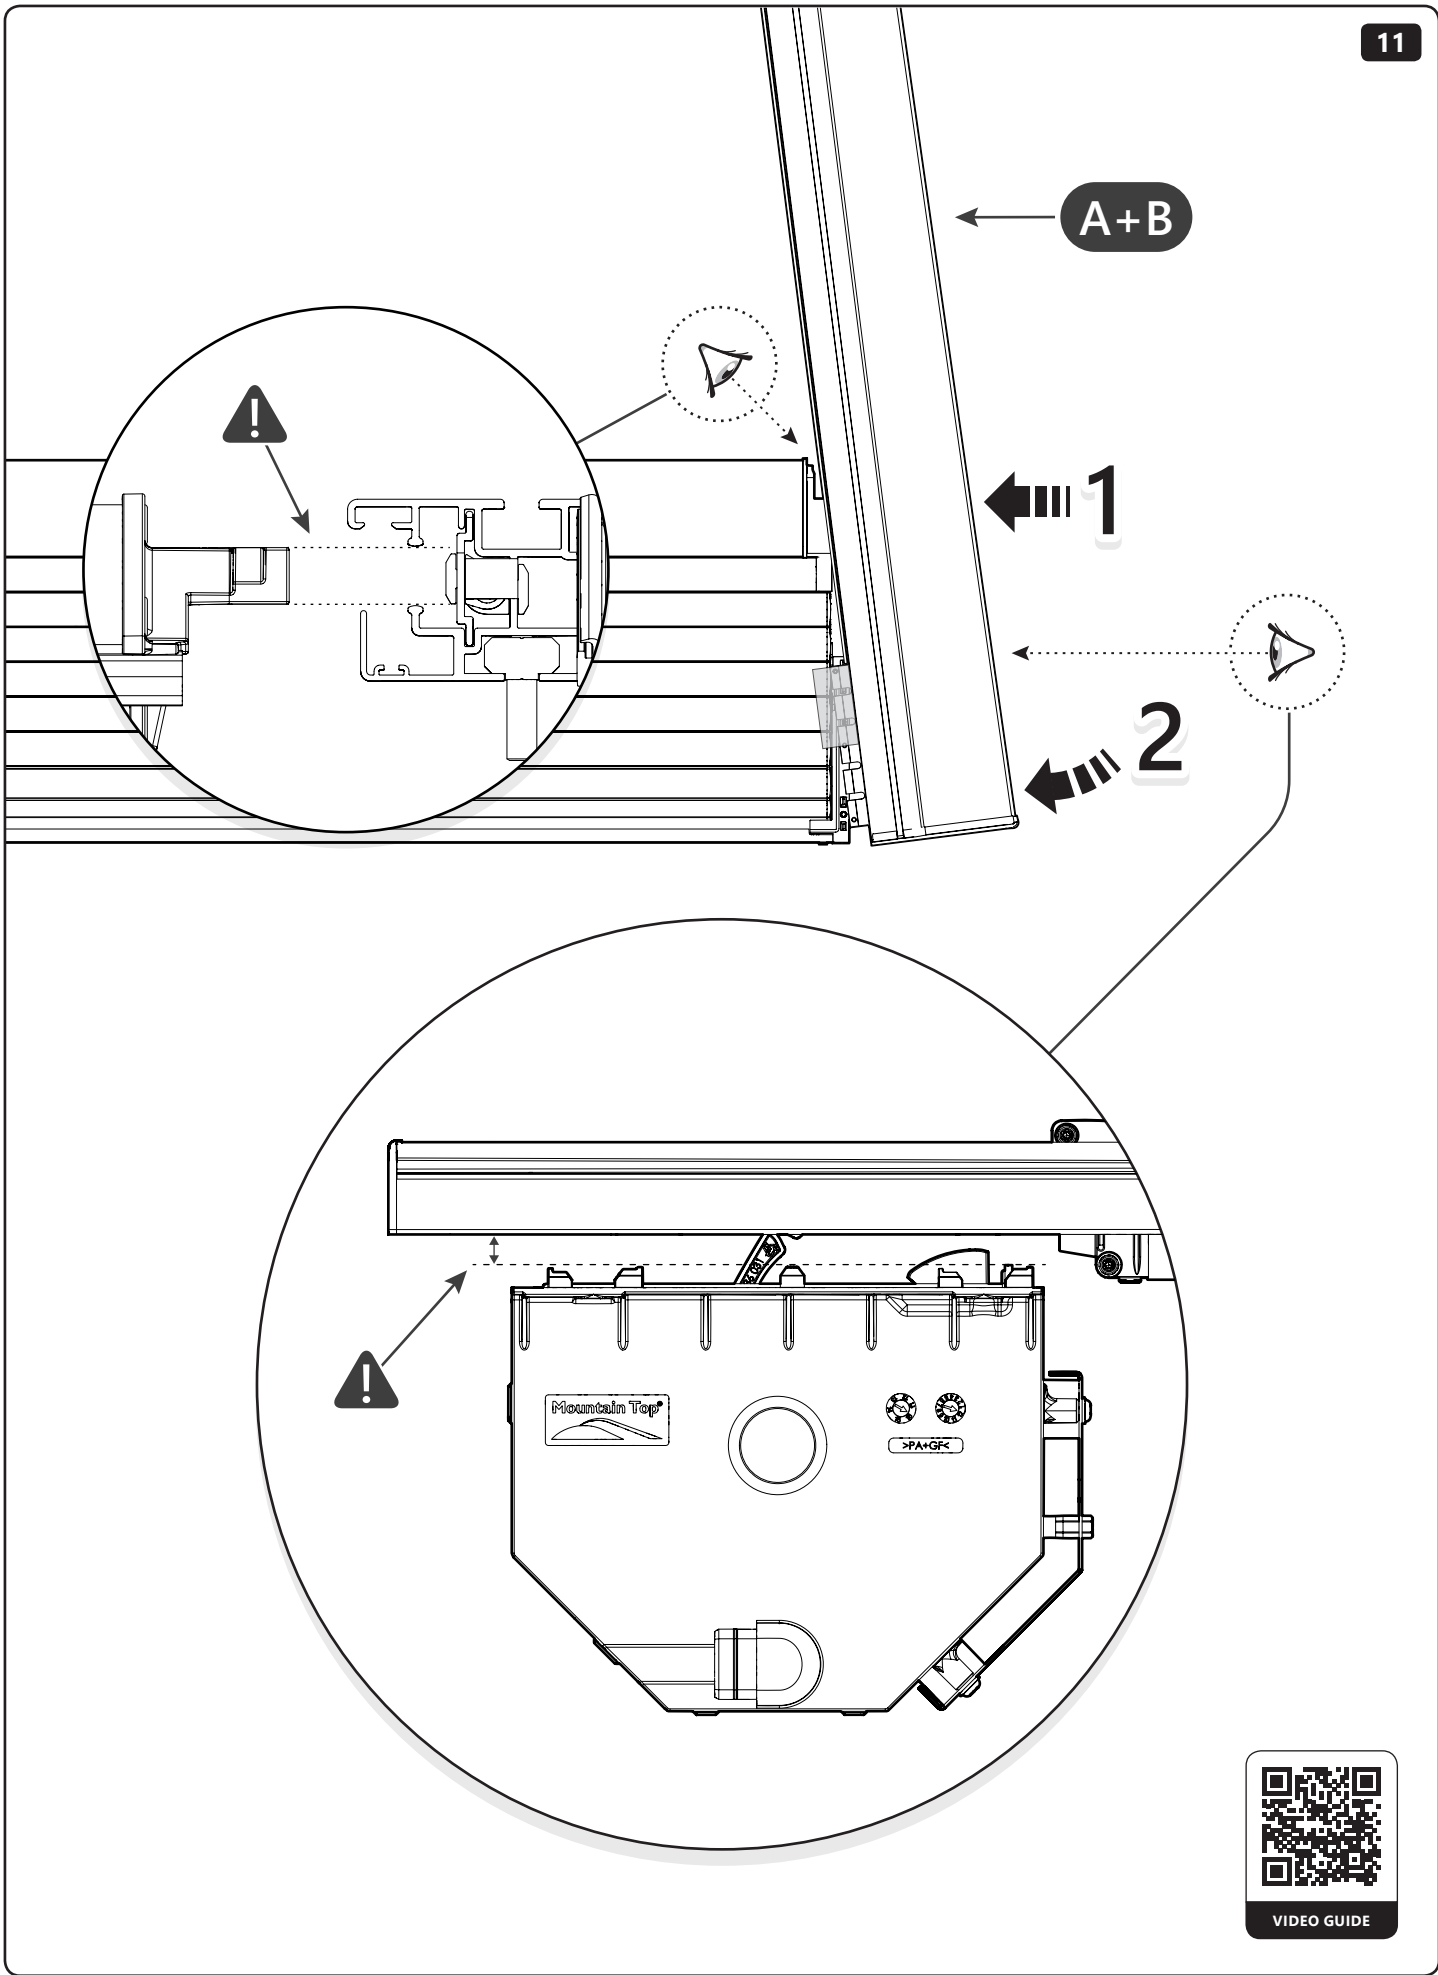



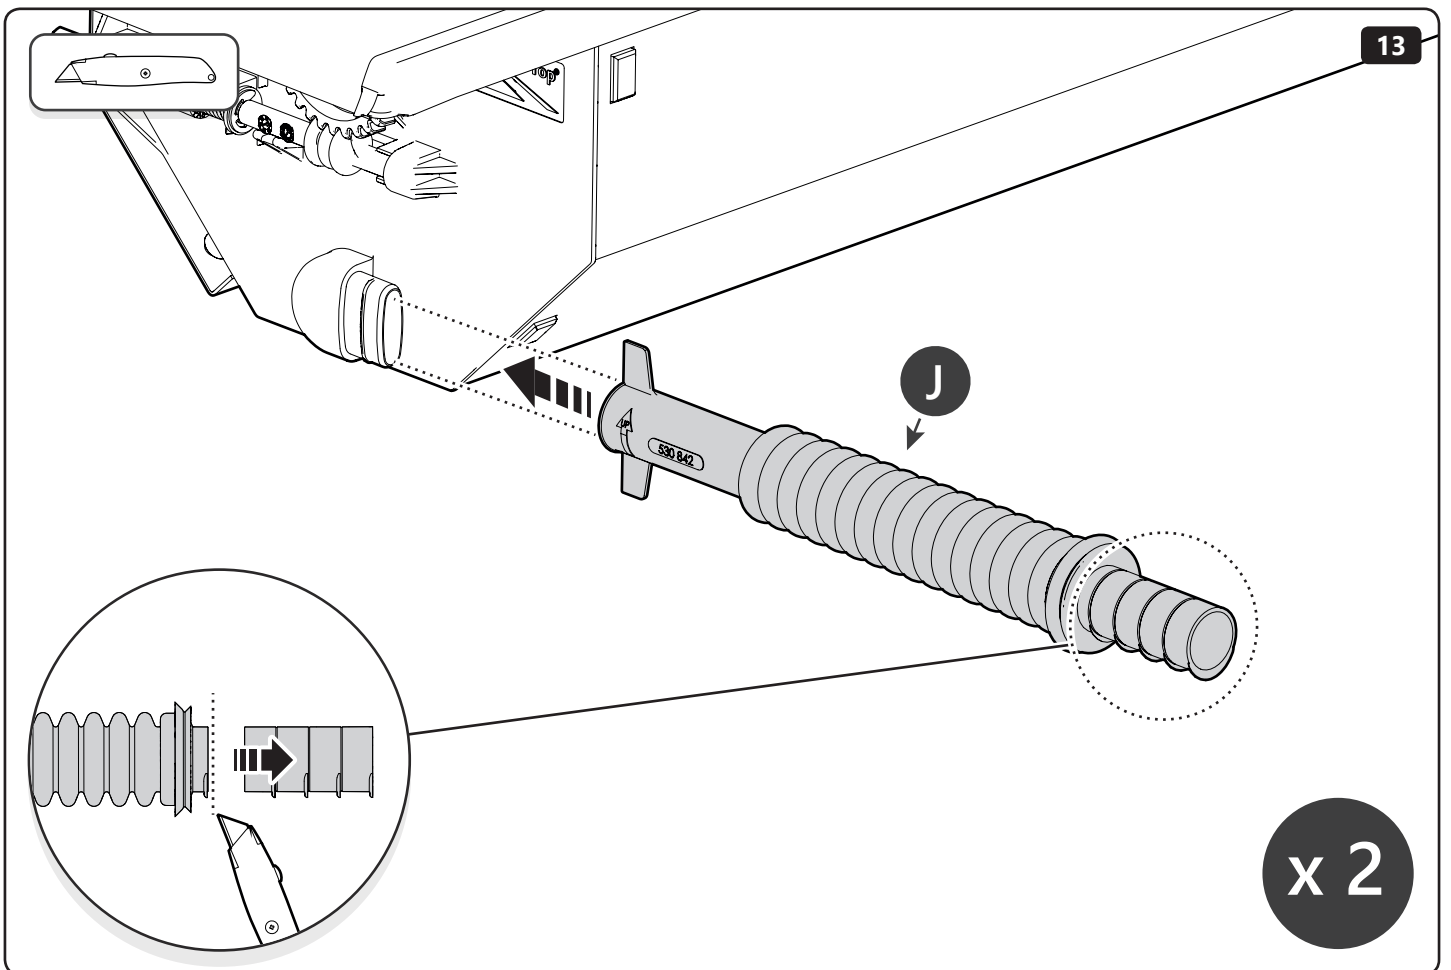
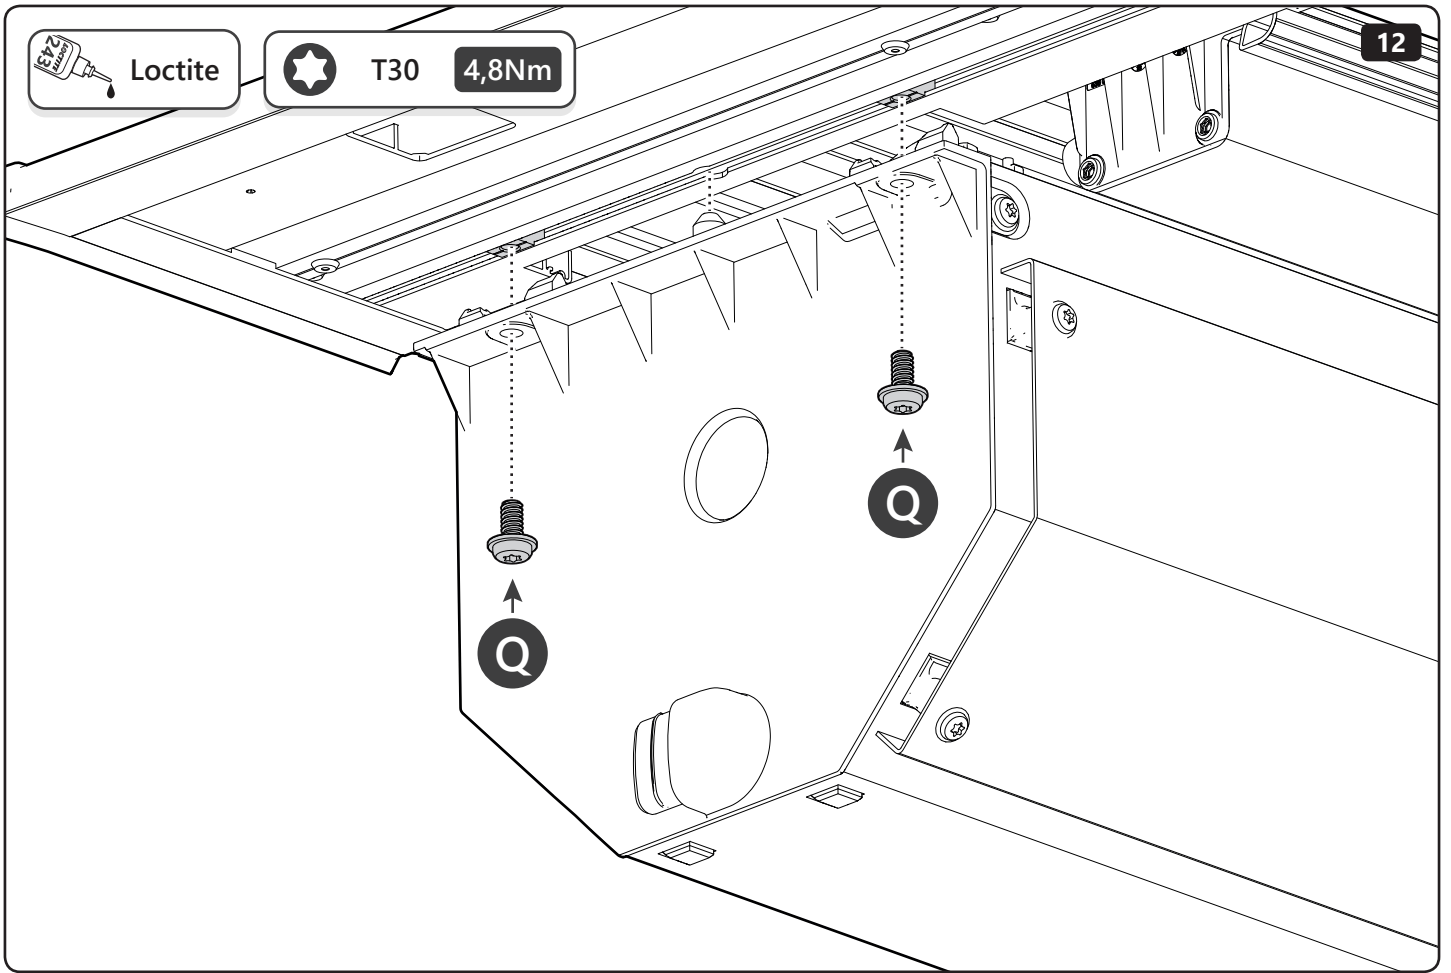


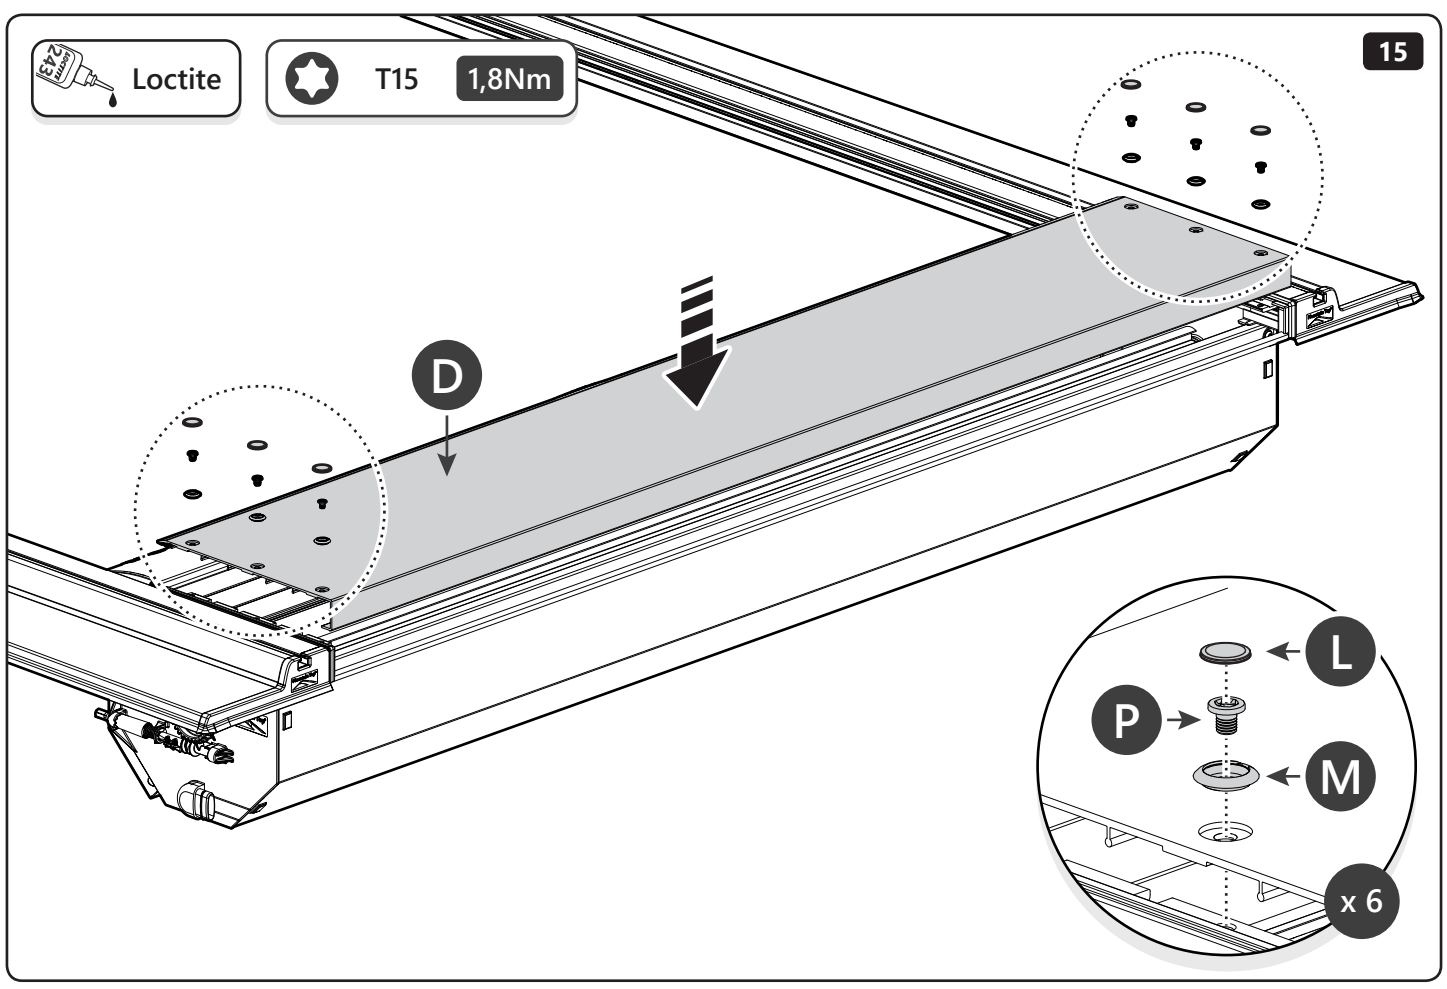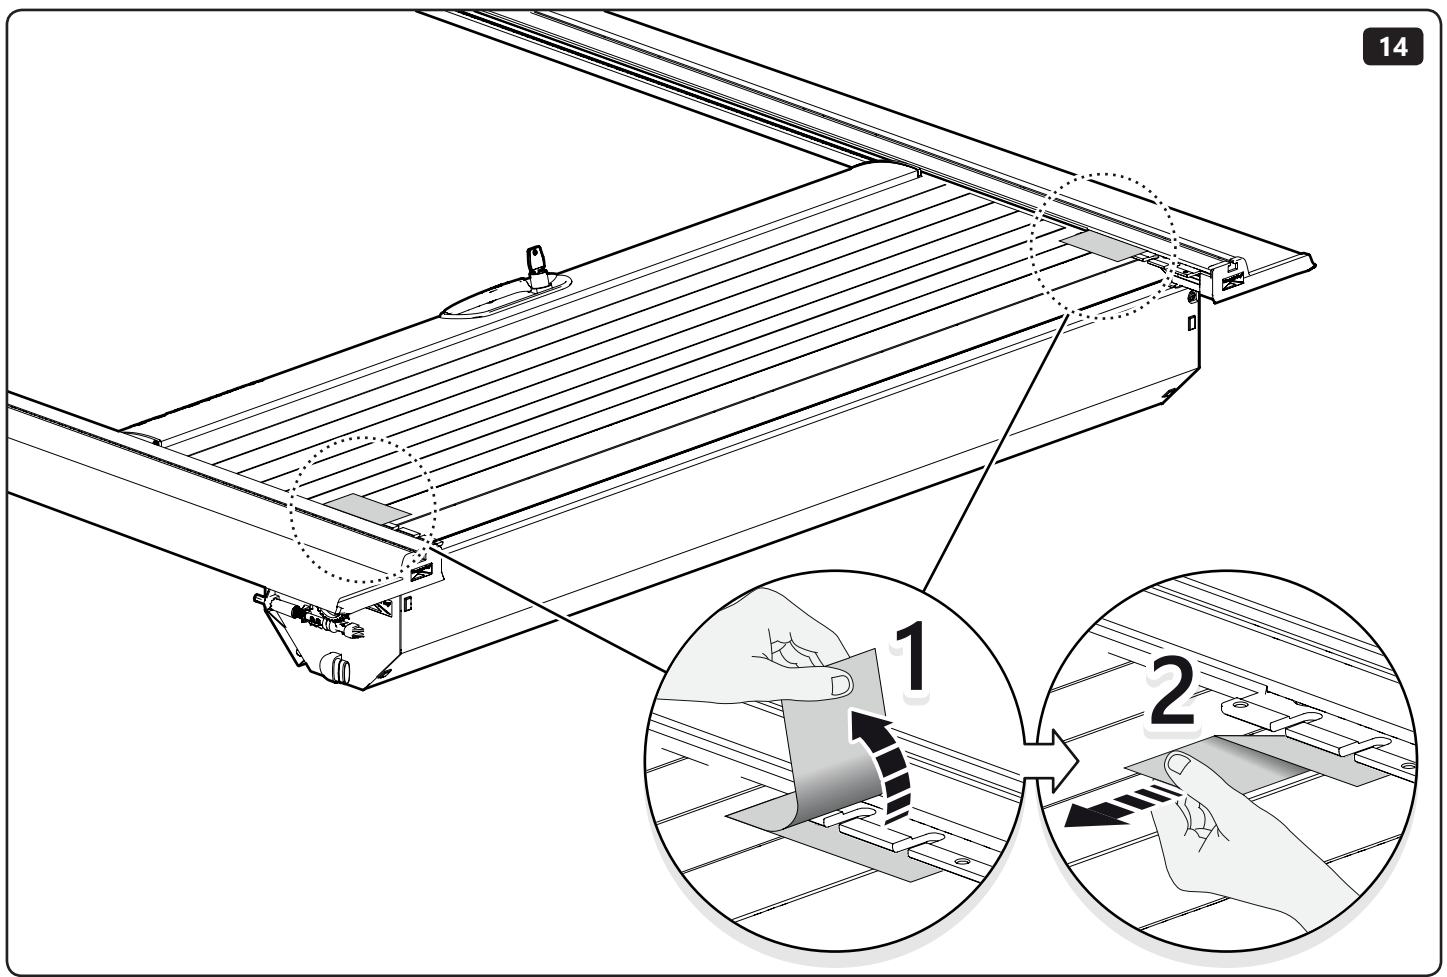



Loctite


T15 1,8Nm

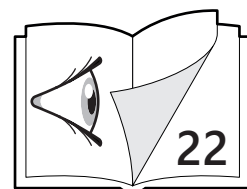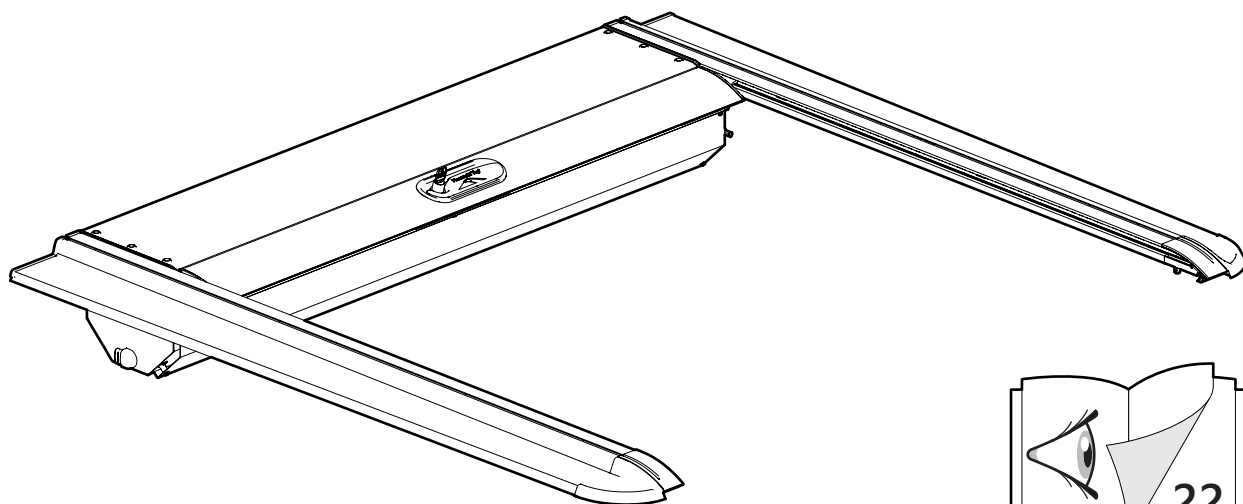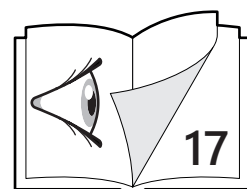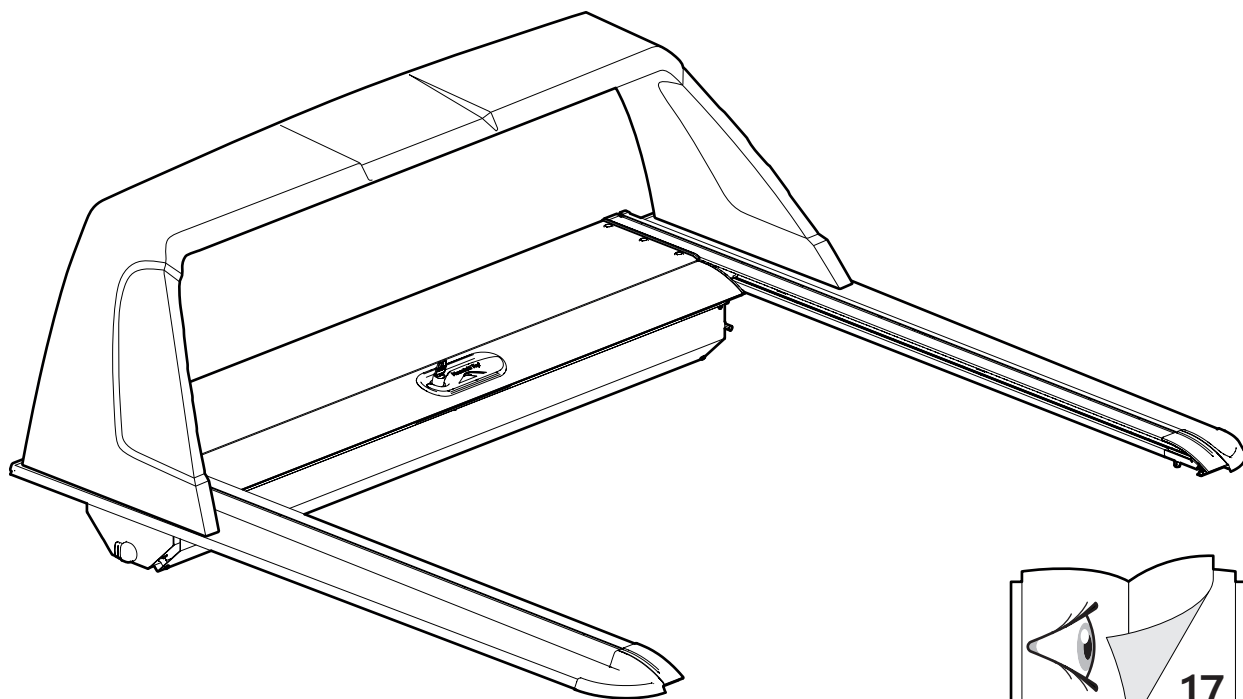

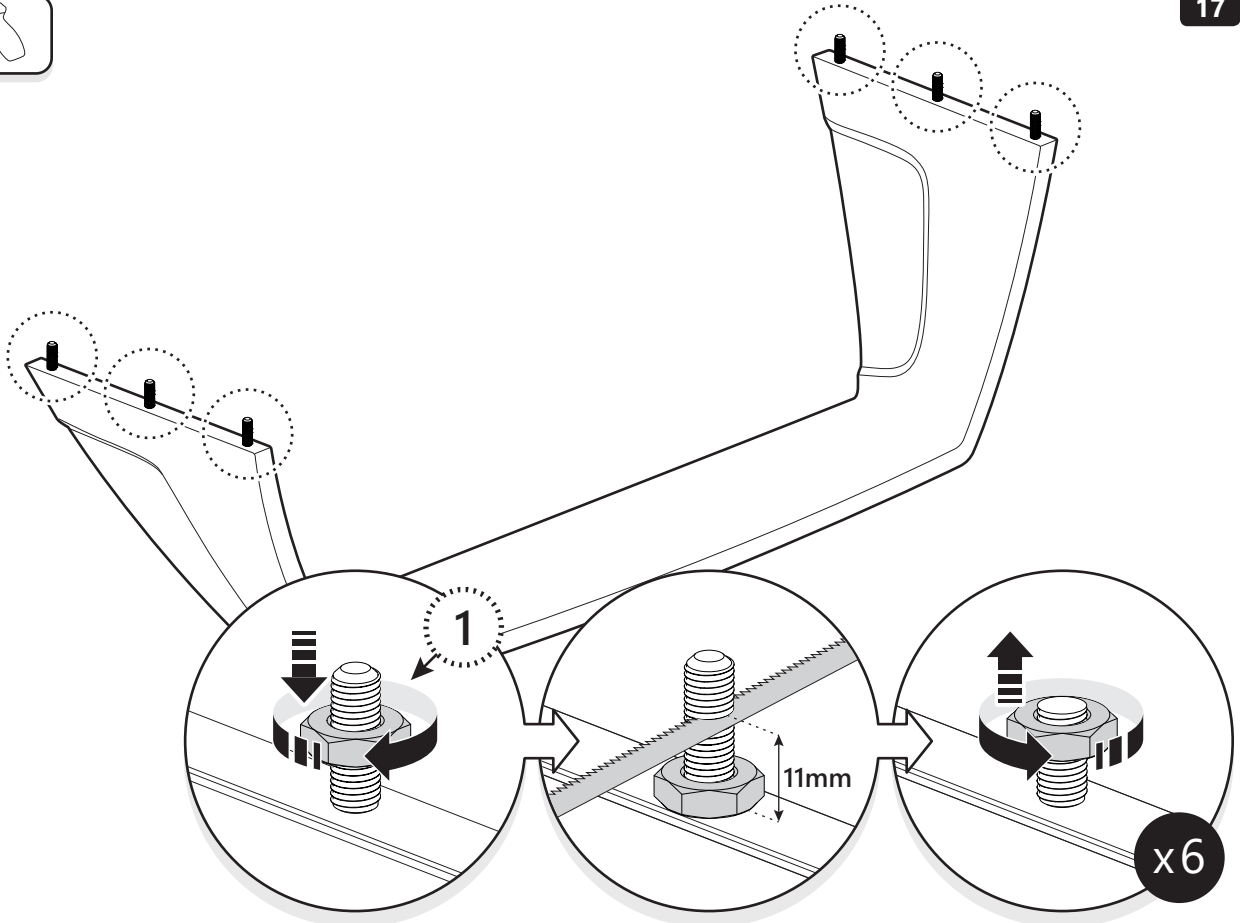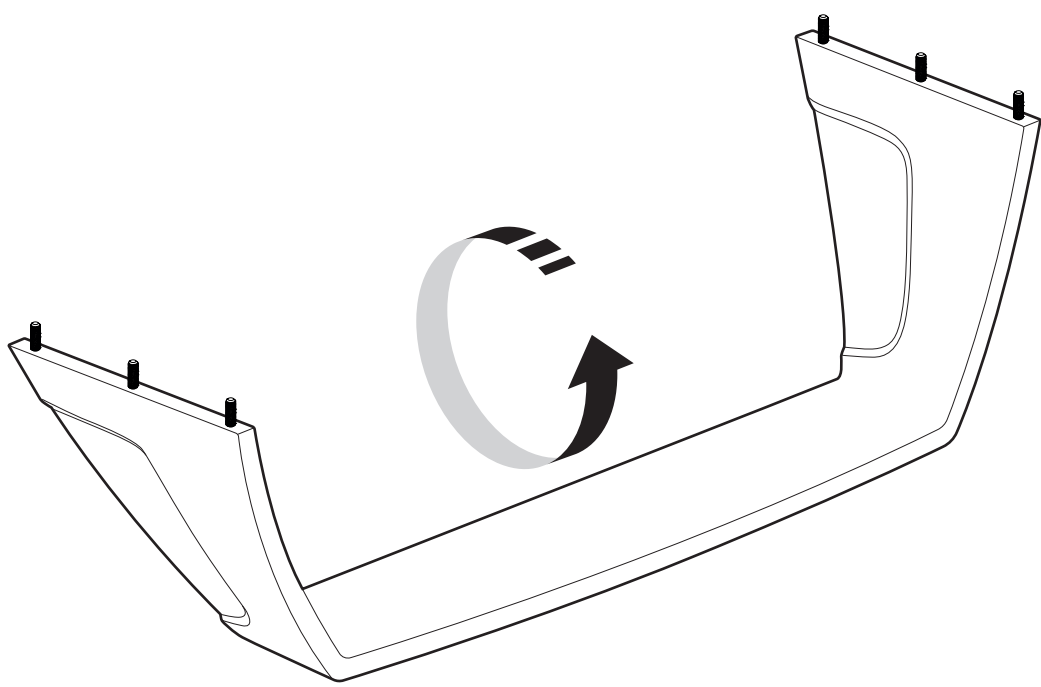


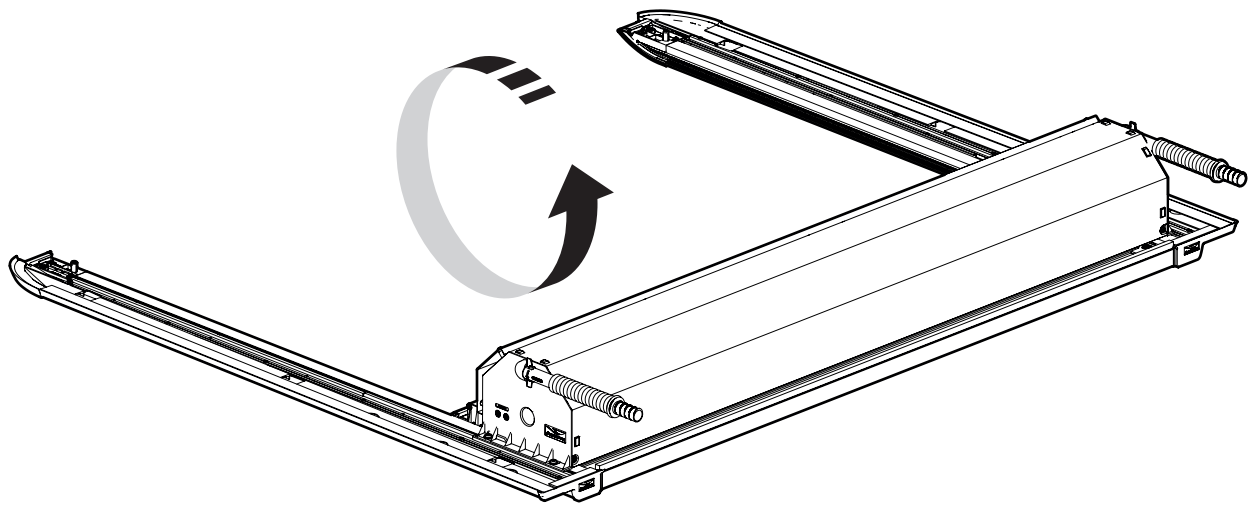


 Ø 10mm

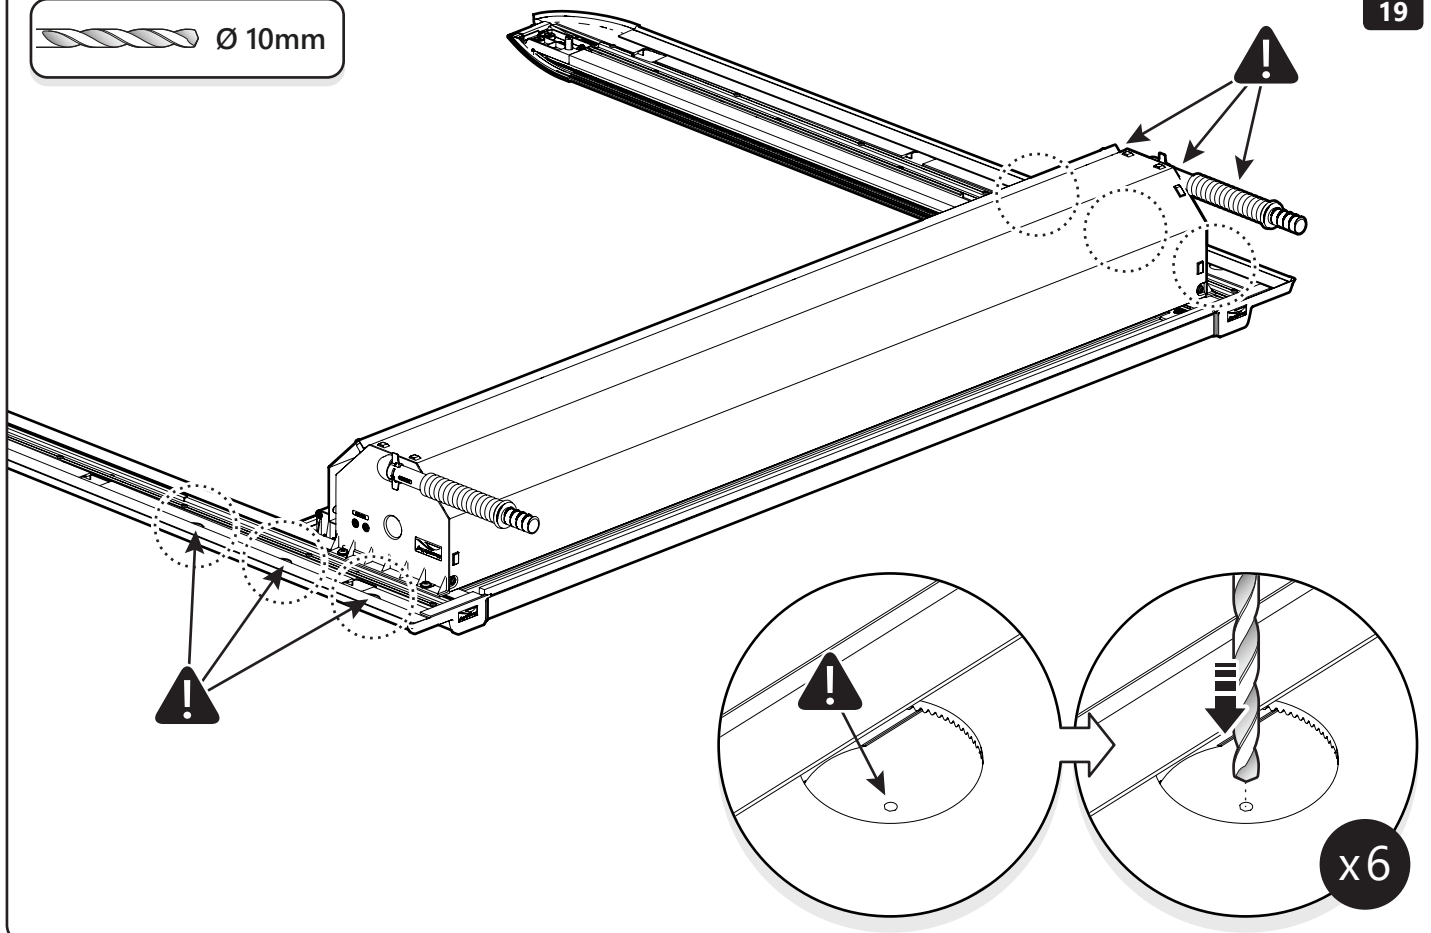


20

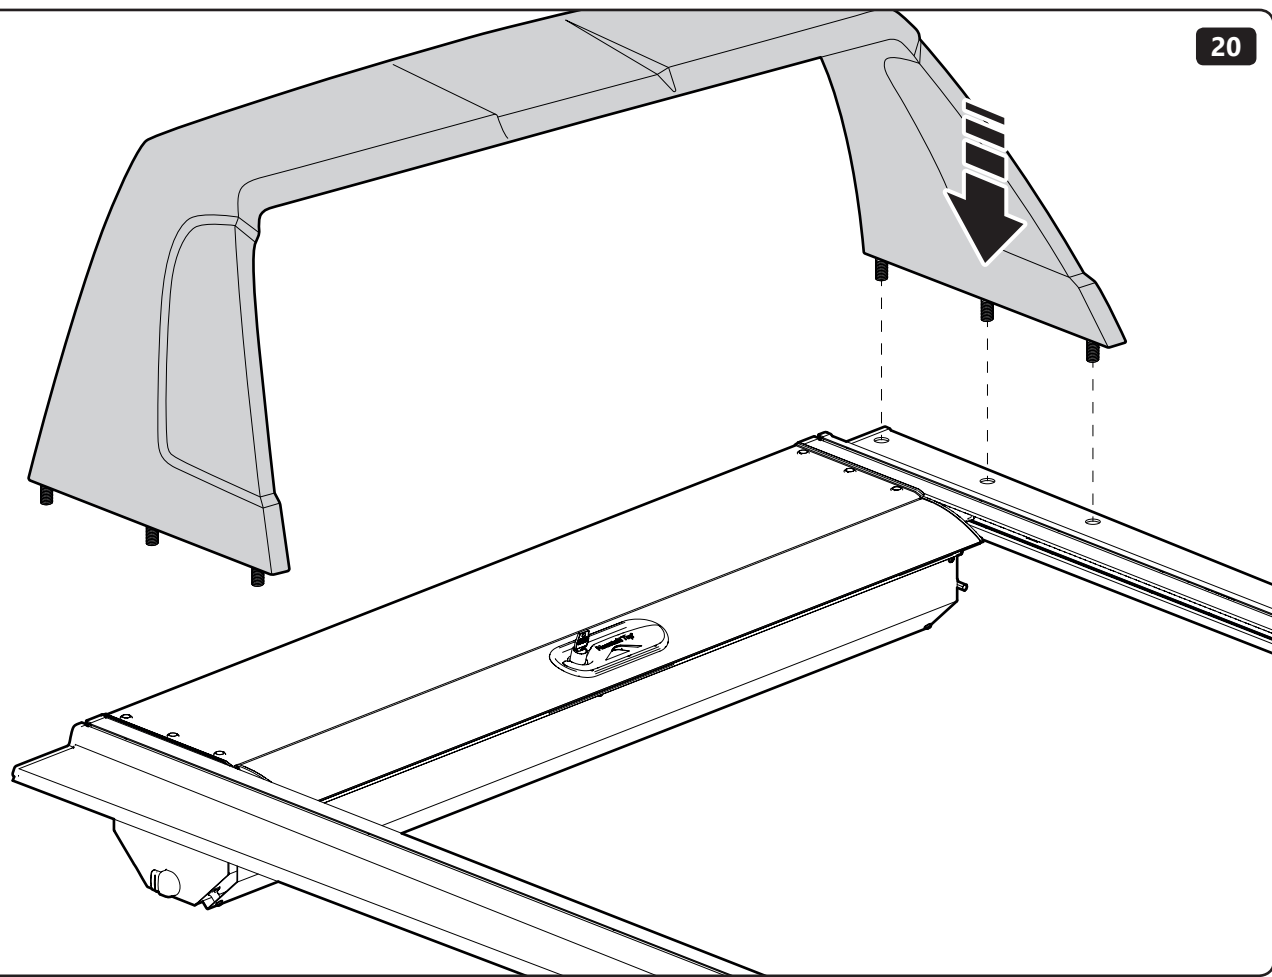



21


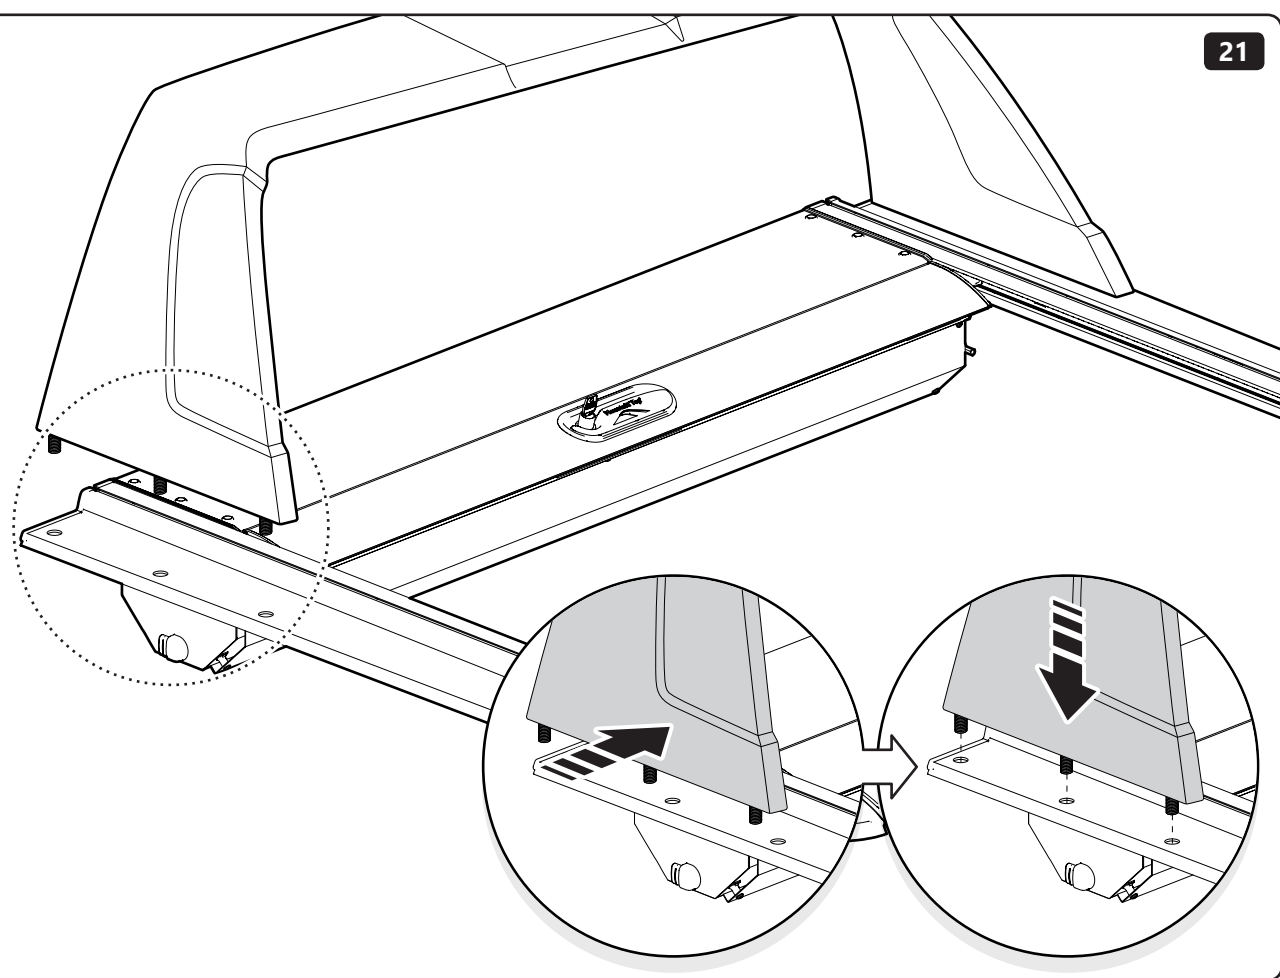




 LOCTITE 243



 13mm **10Nm**


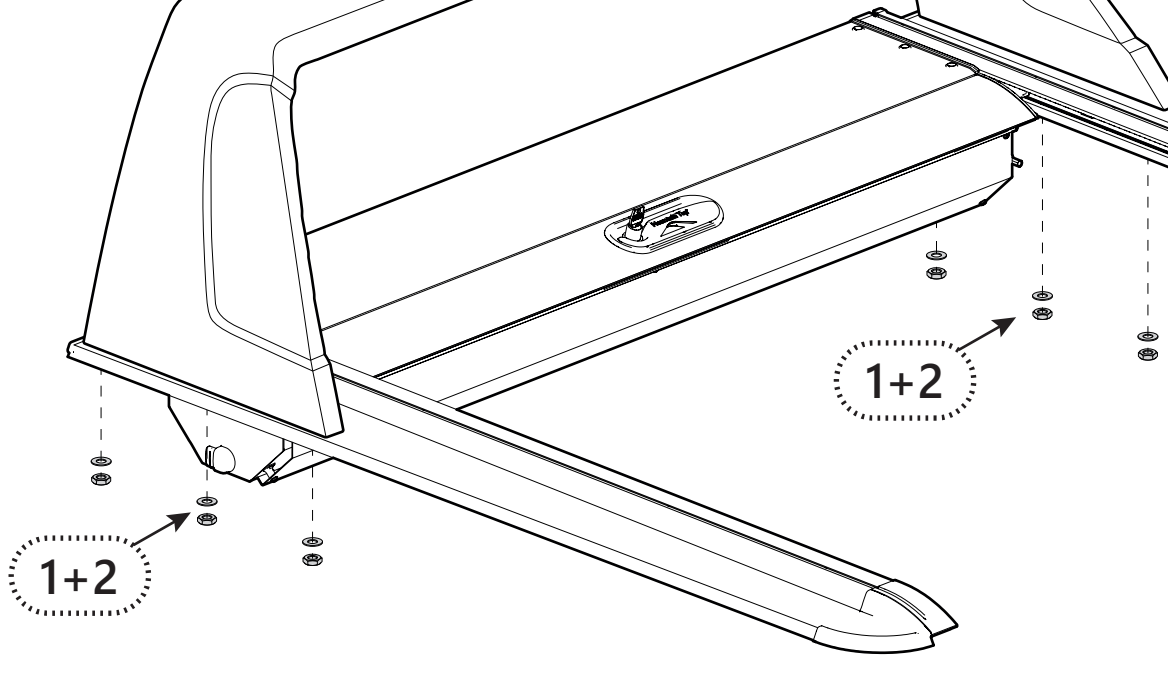



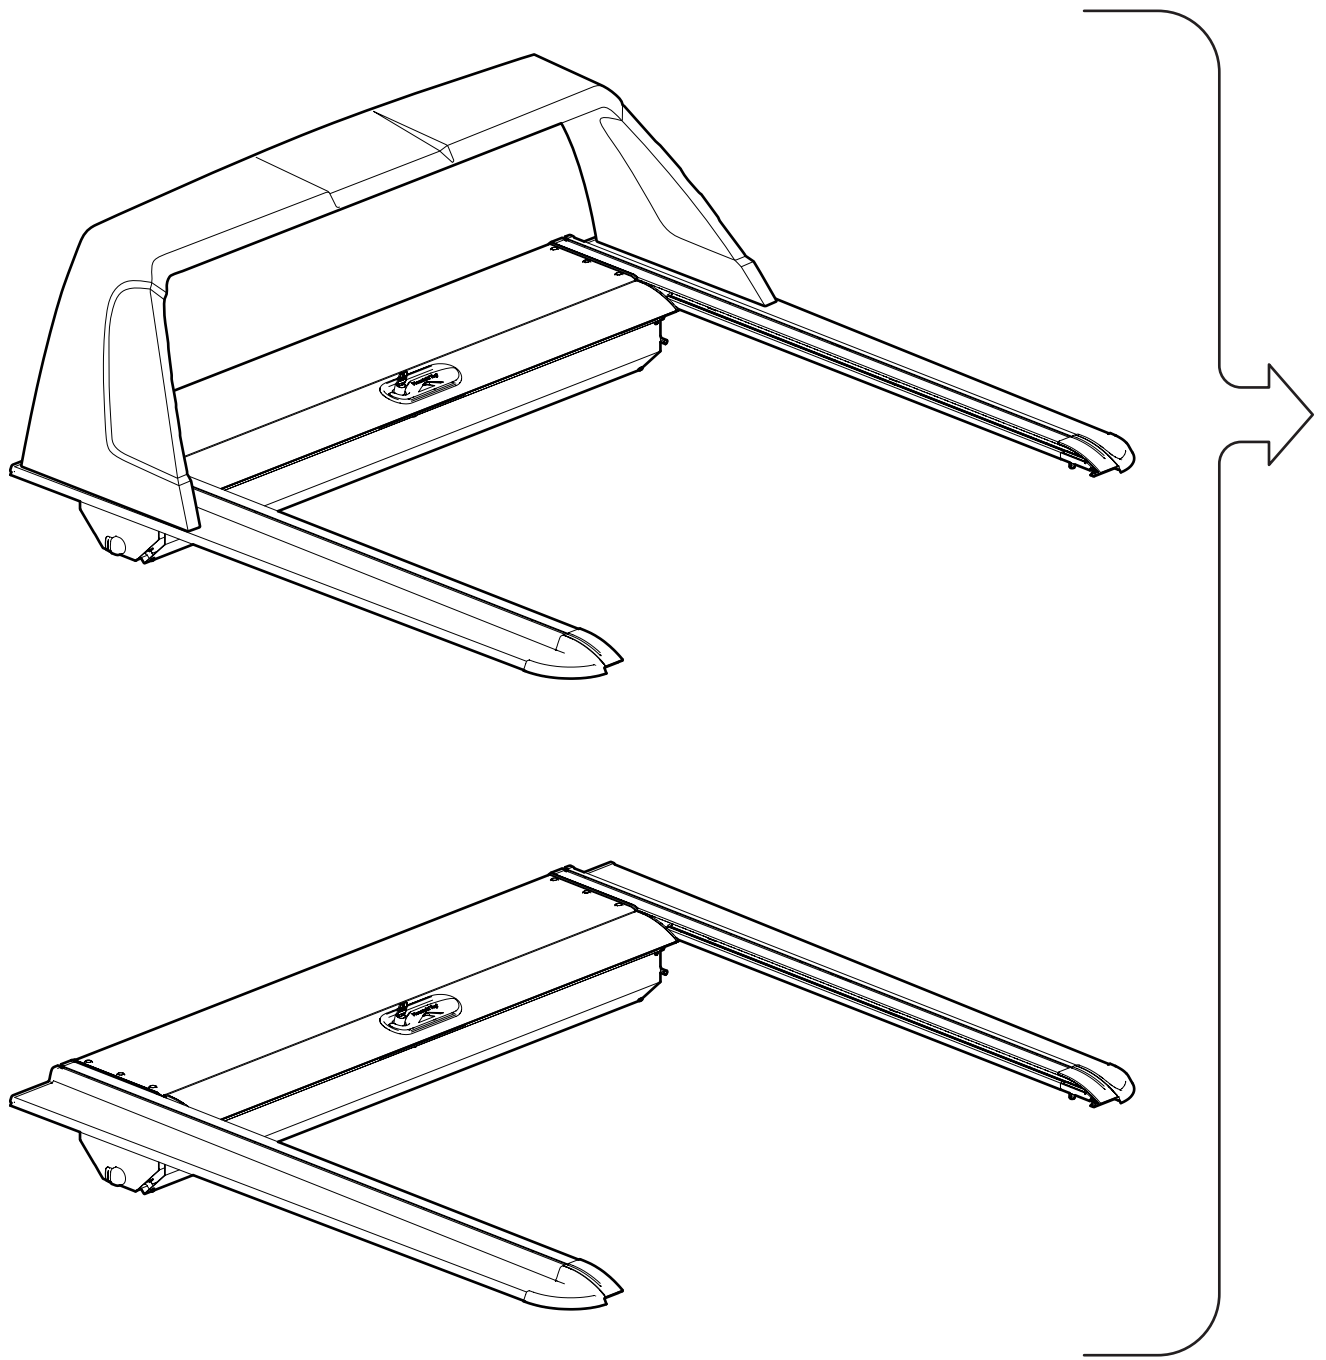


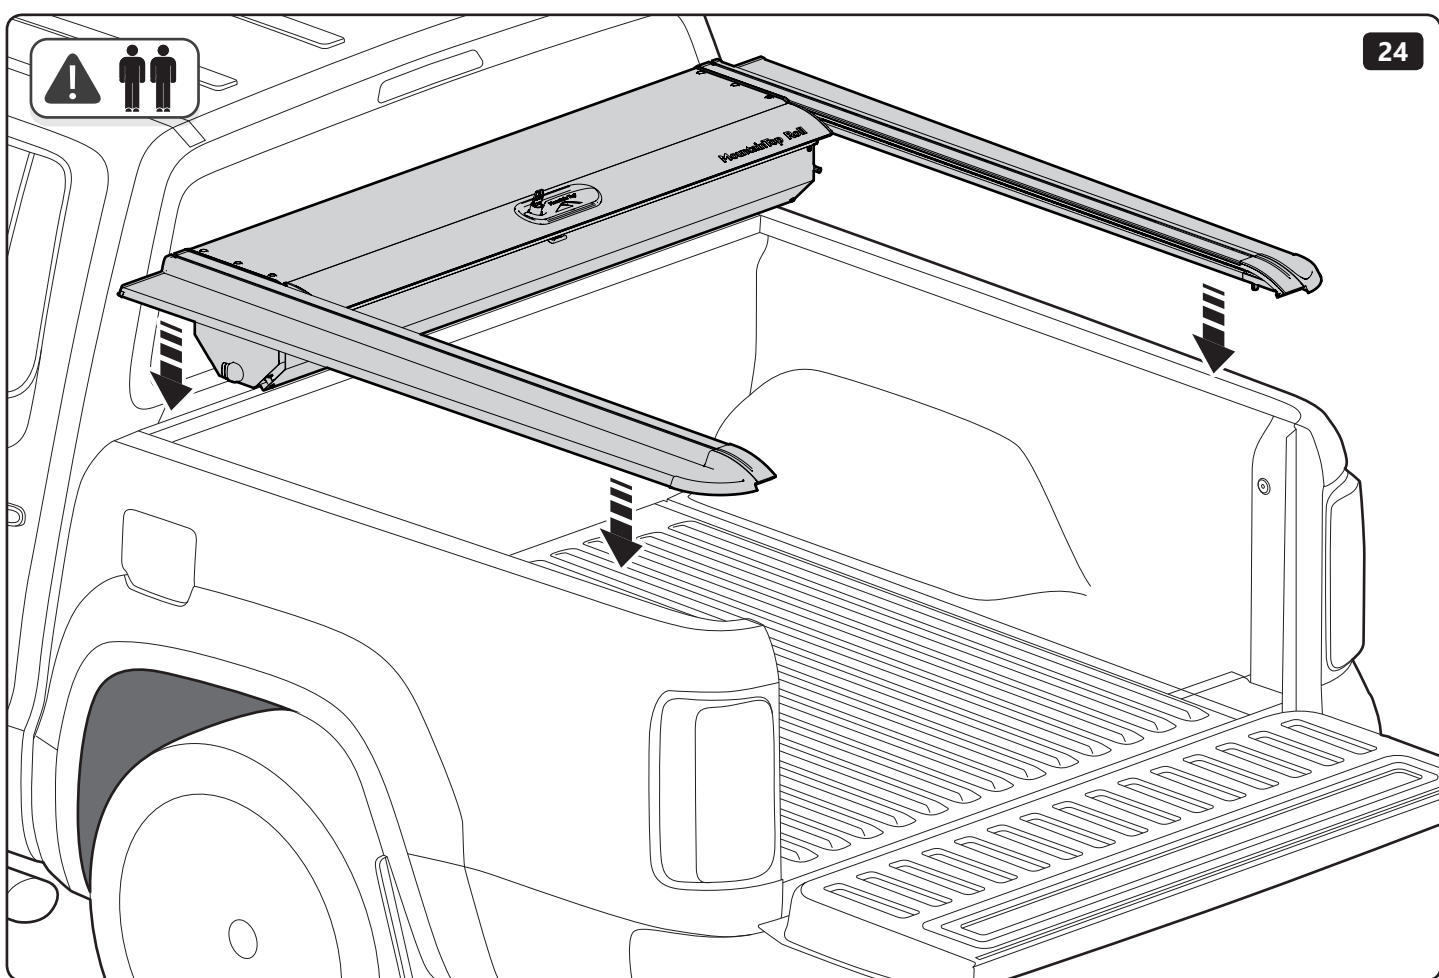
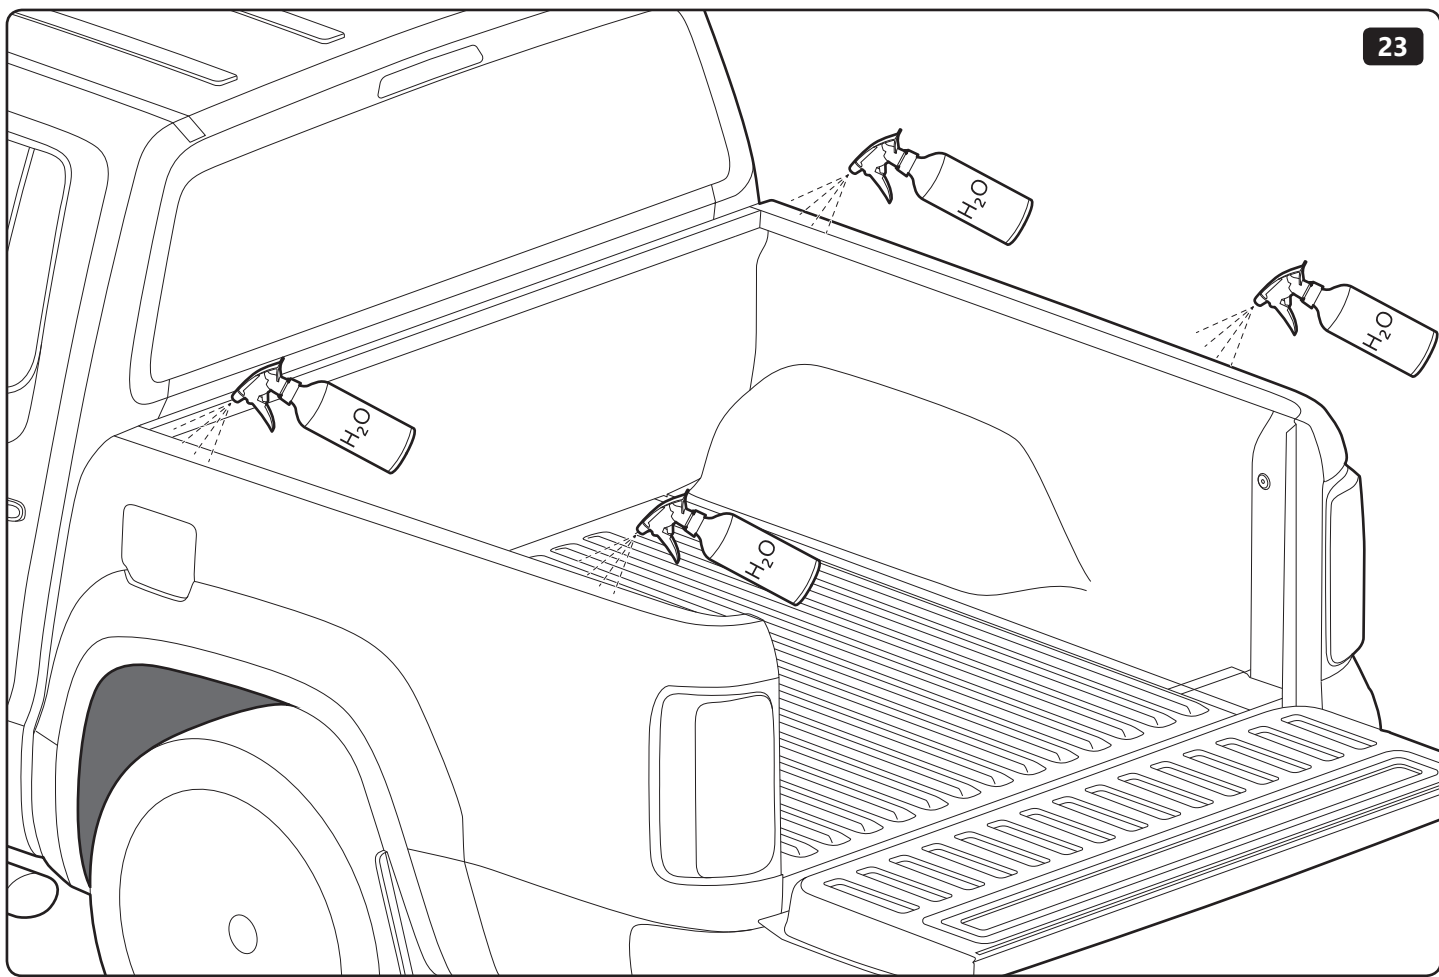


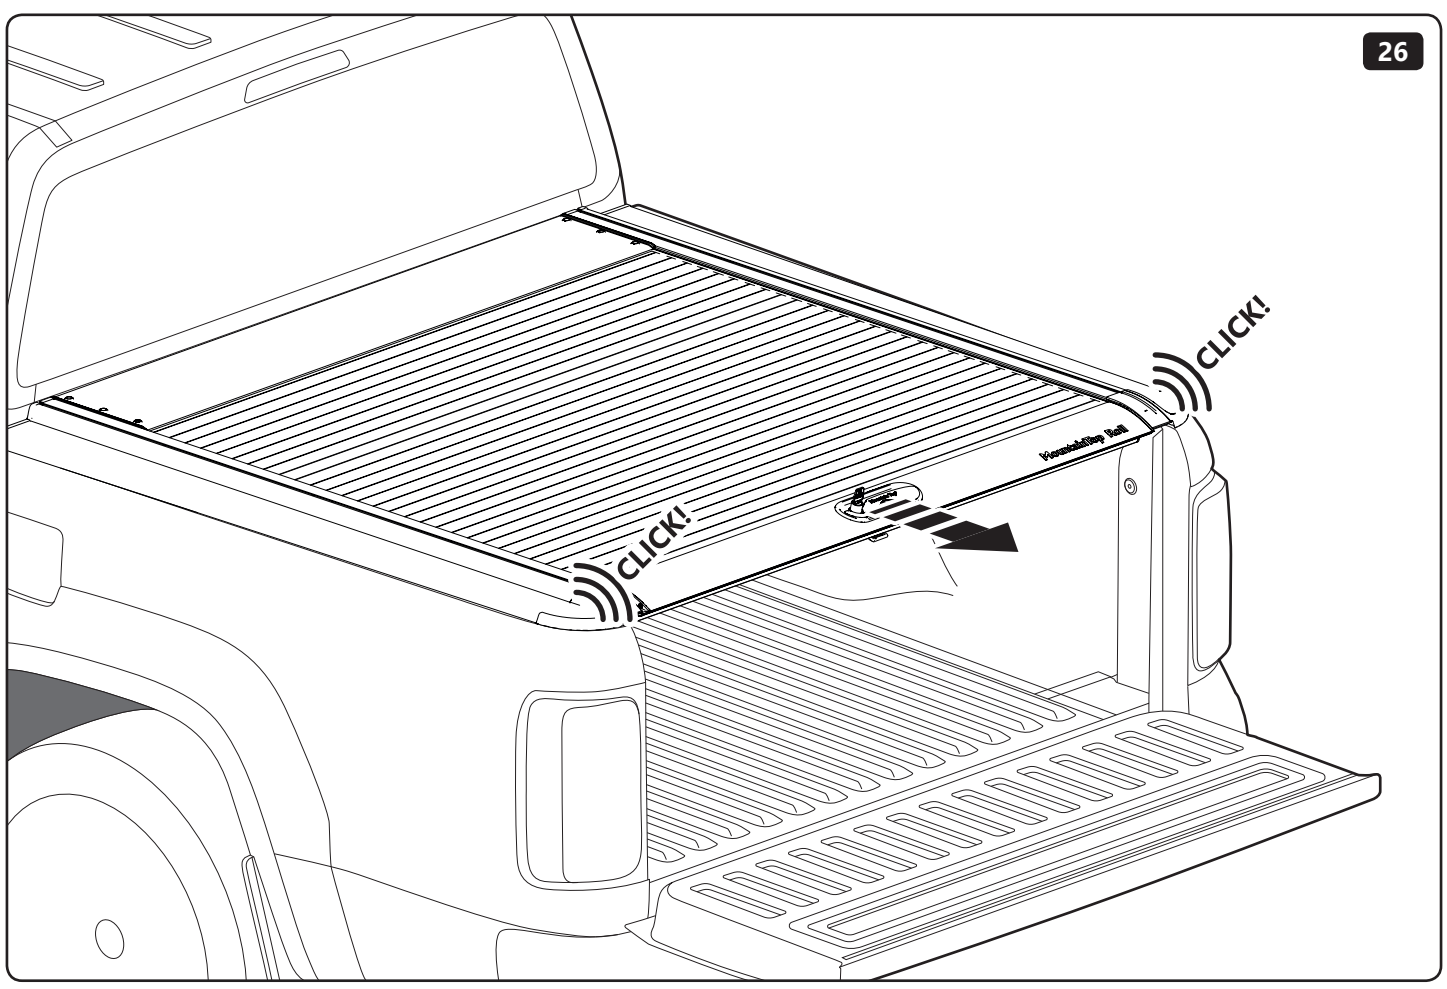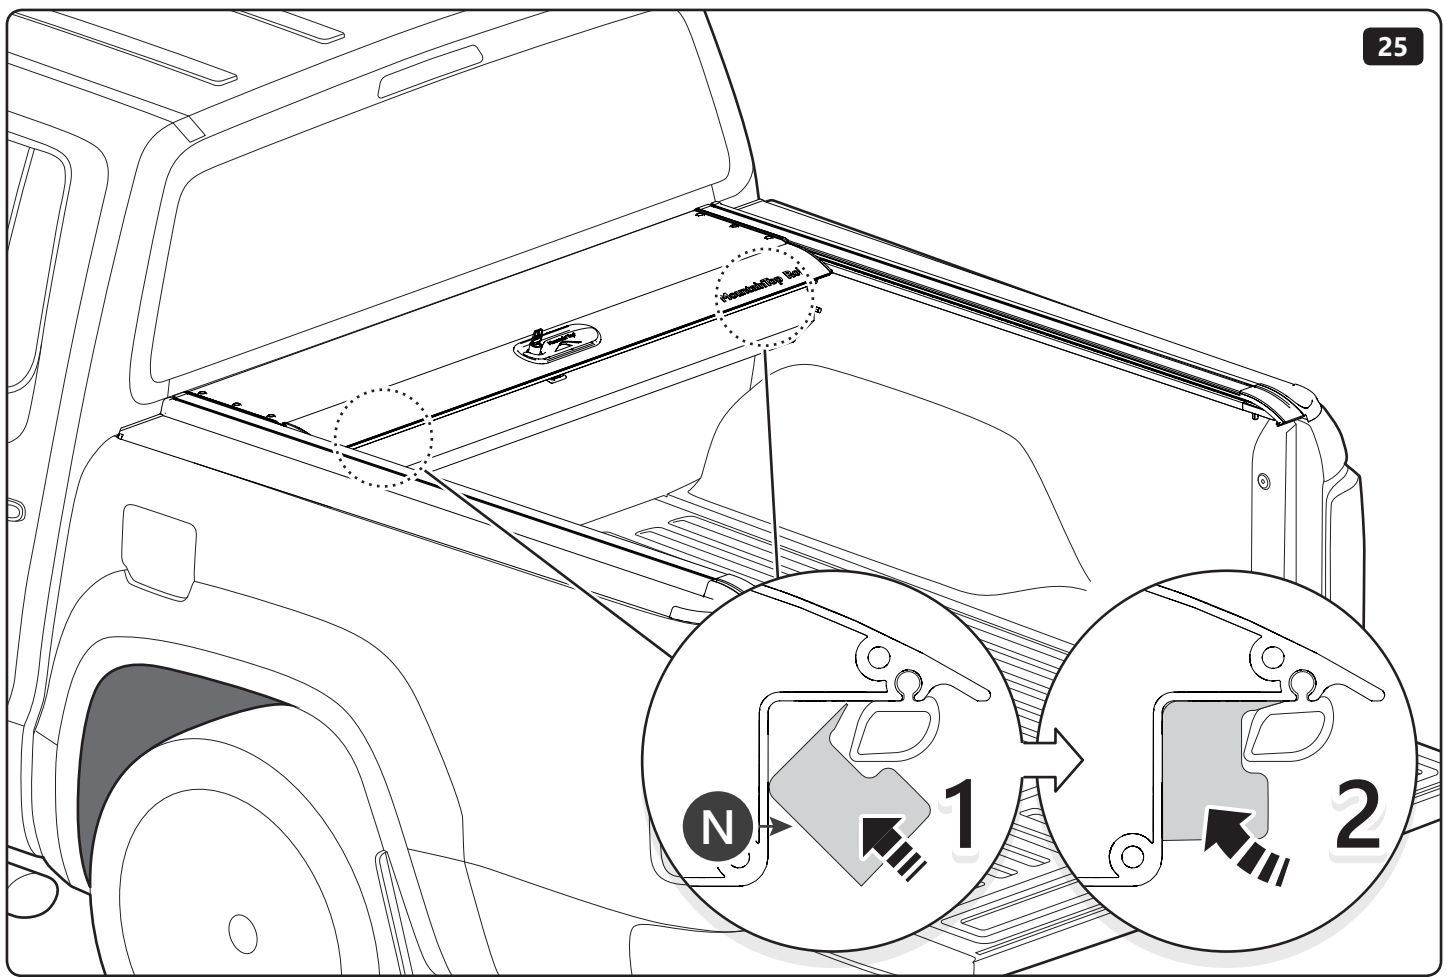

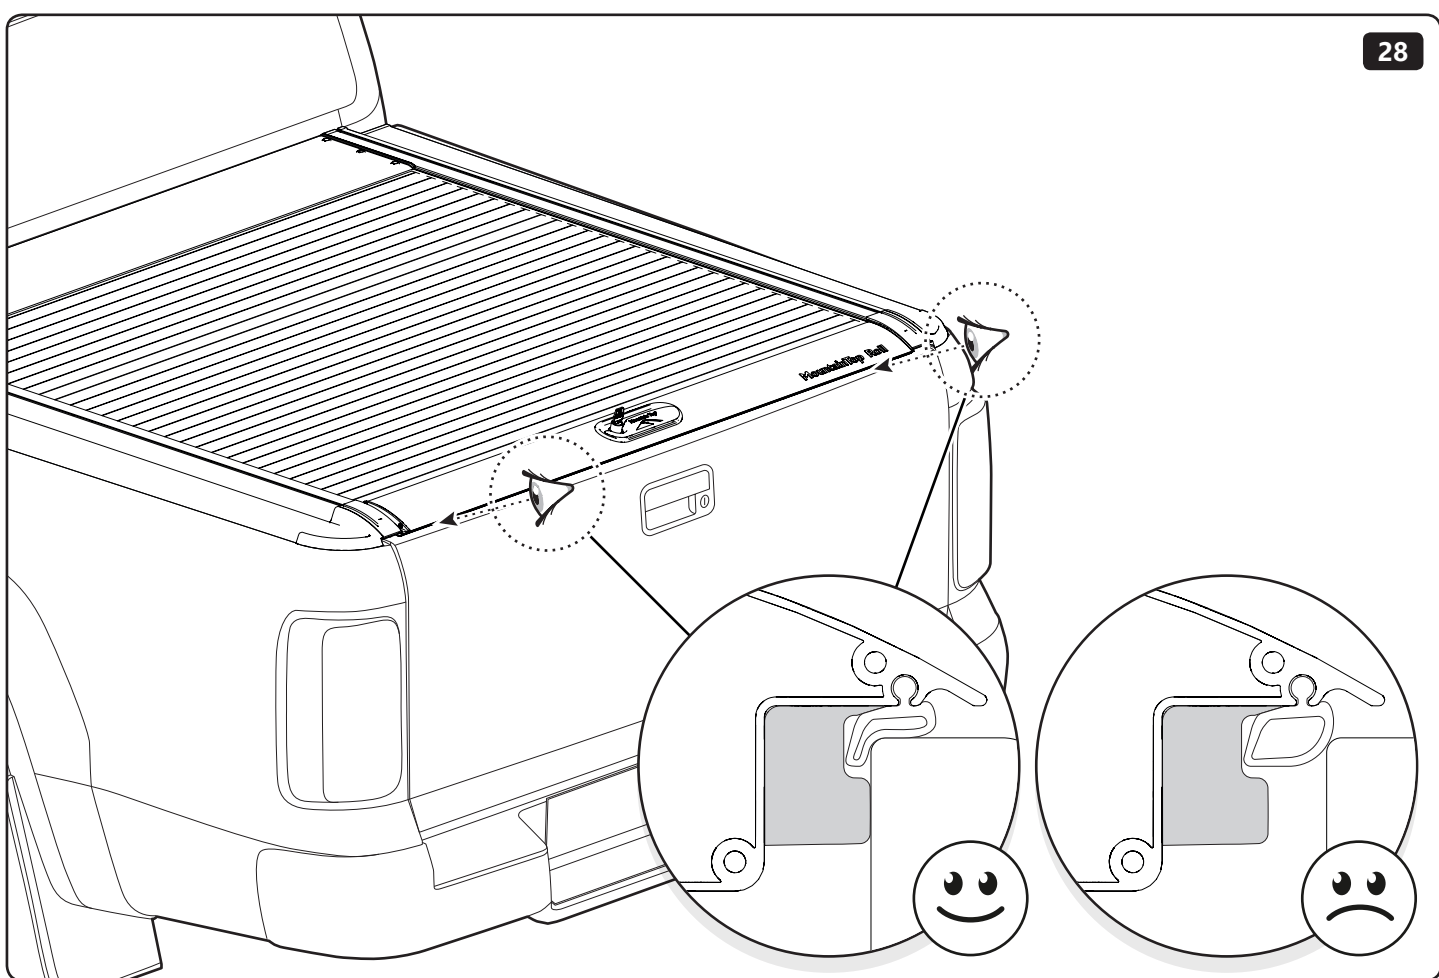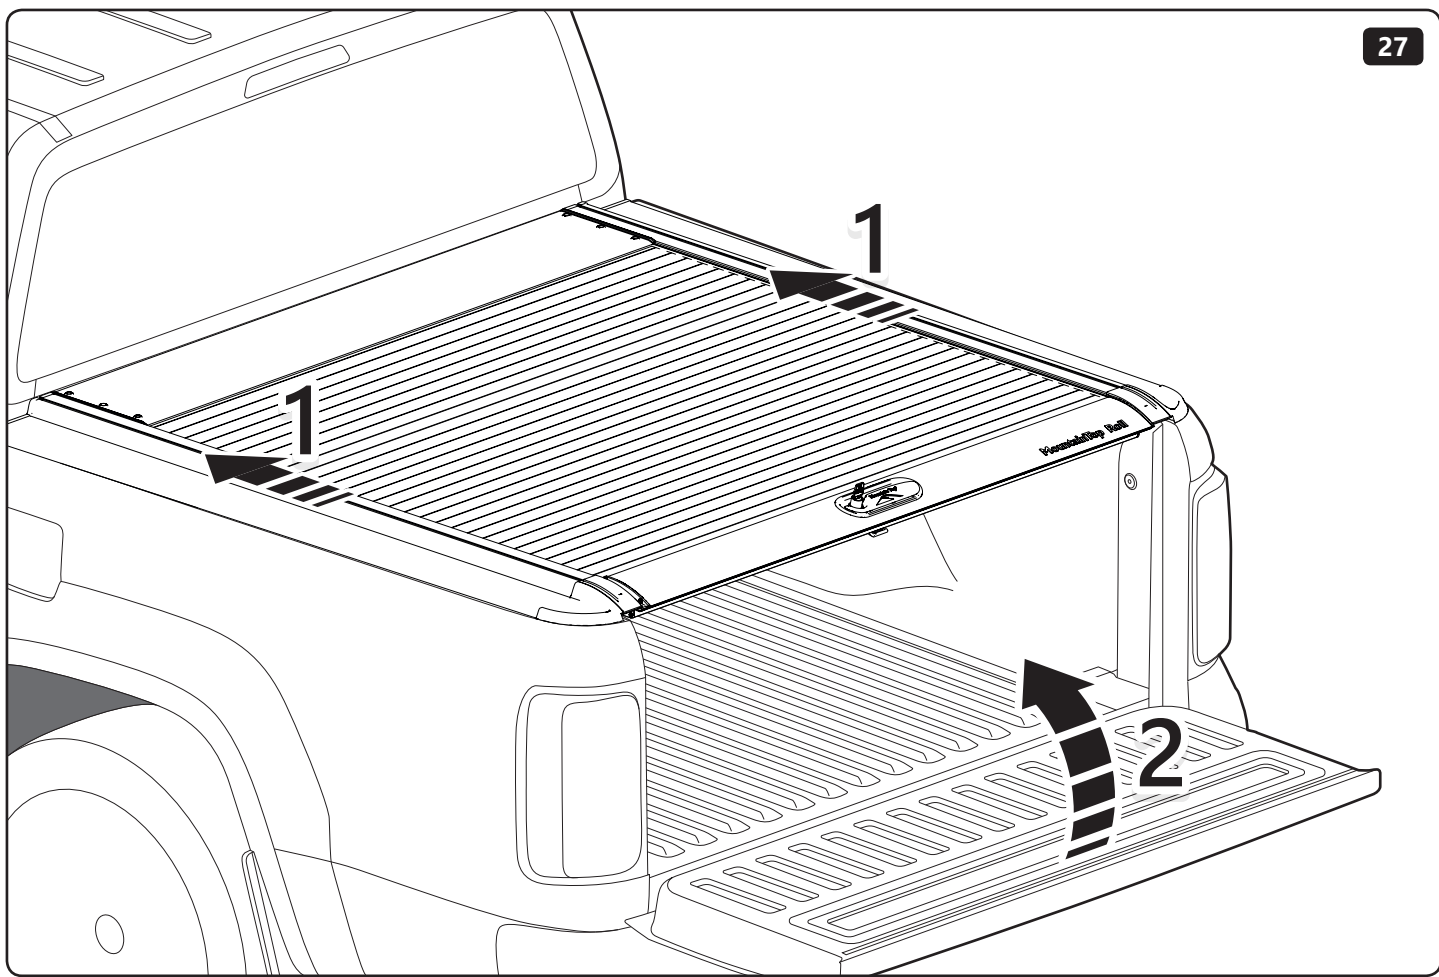


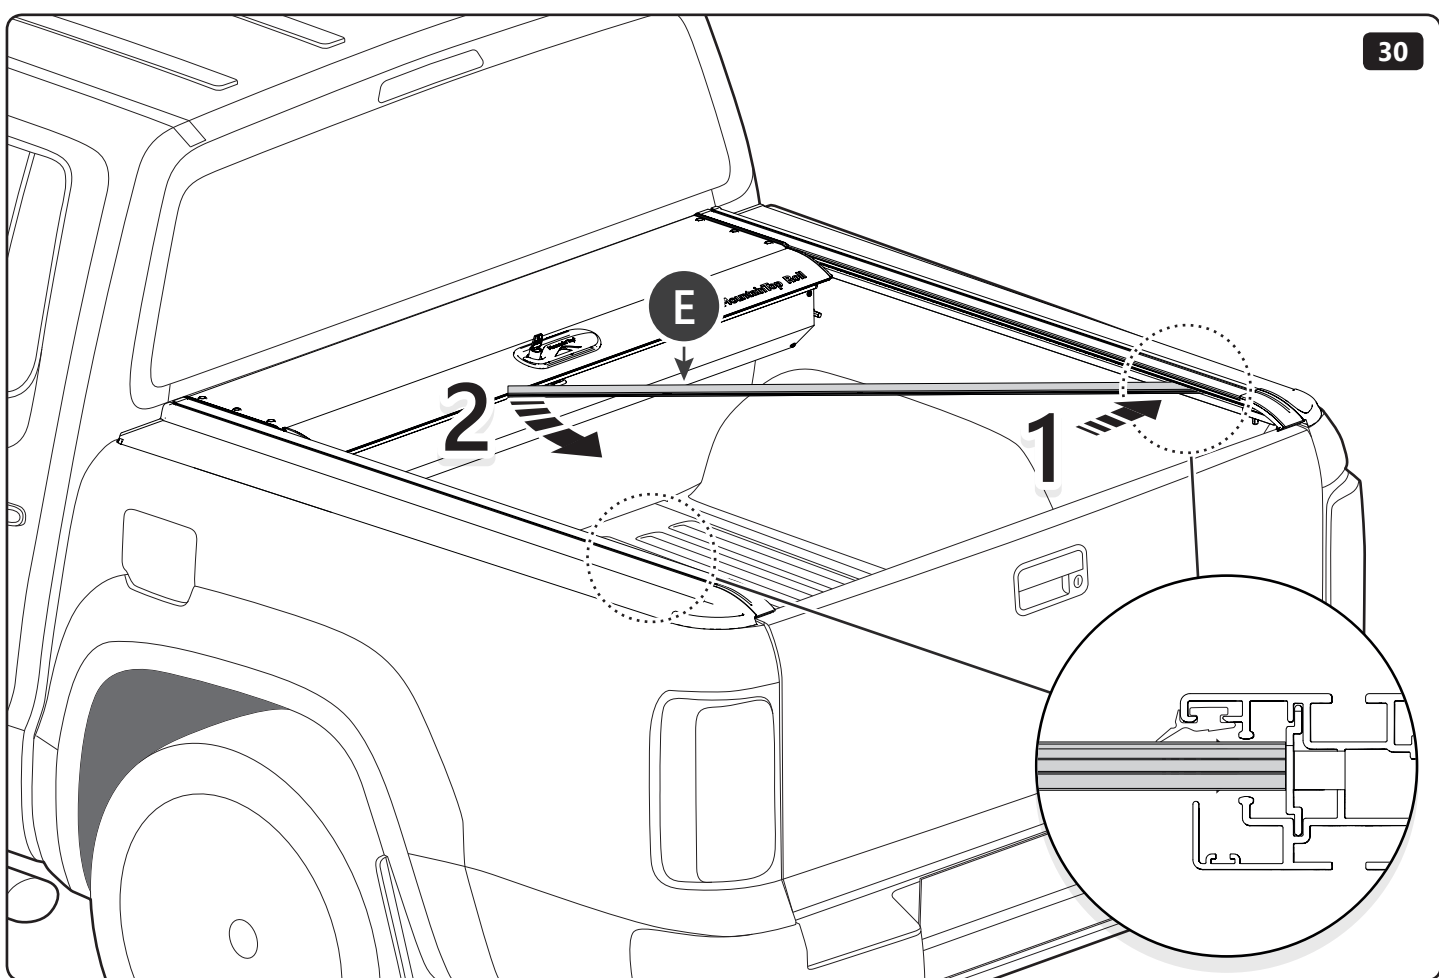
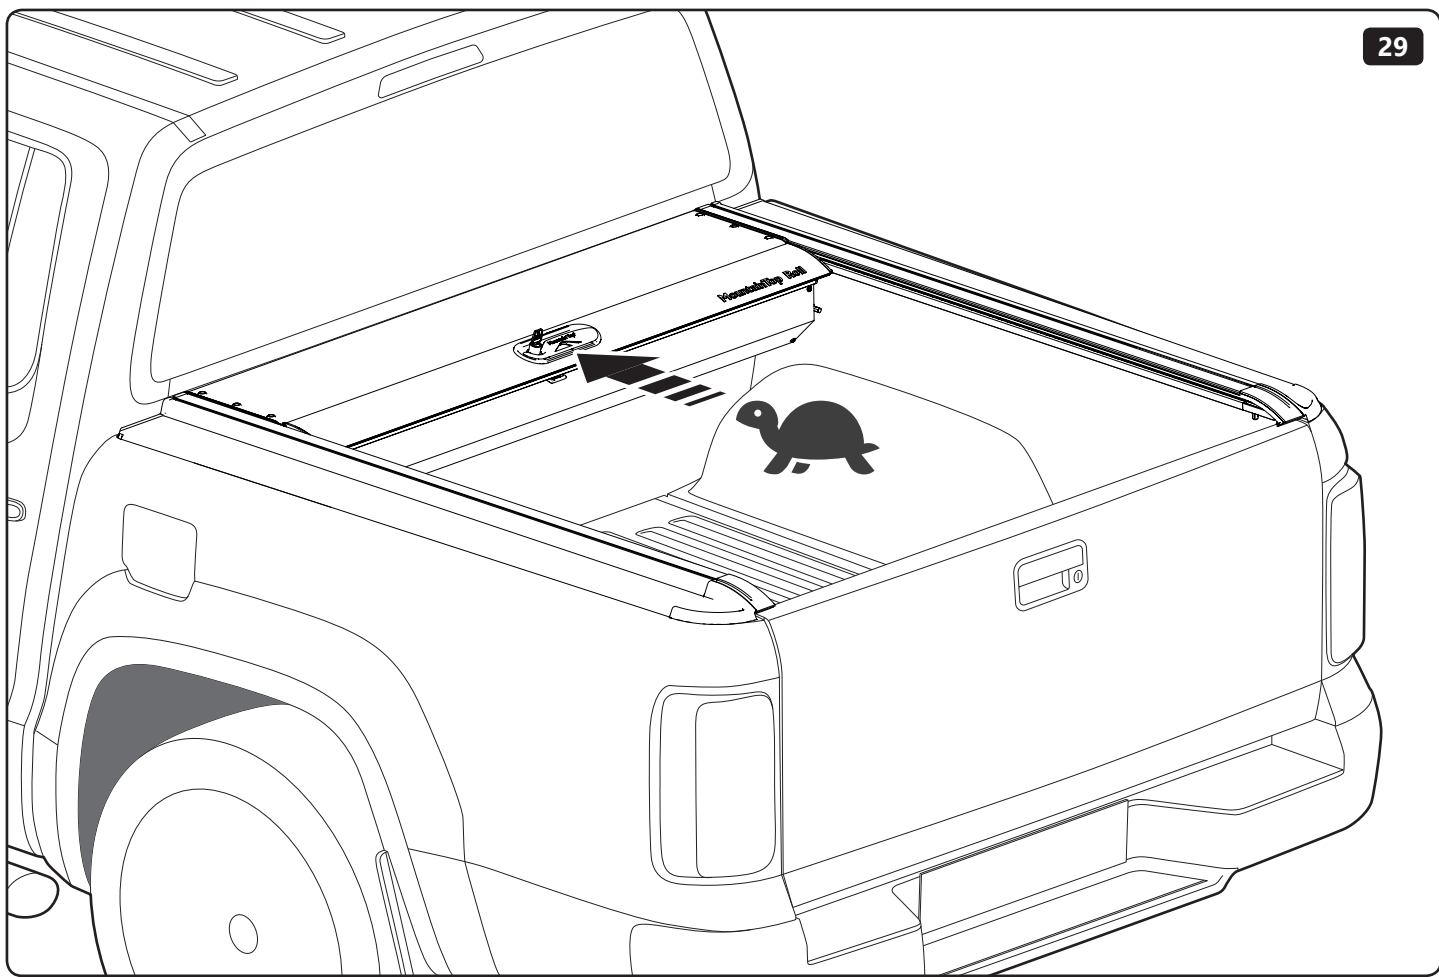


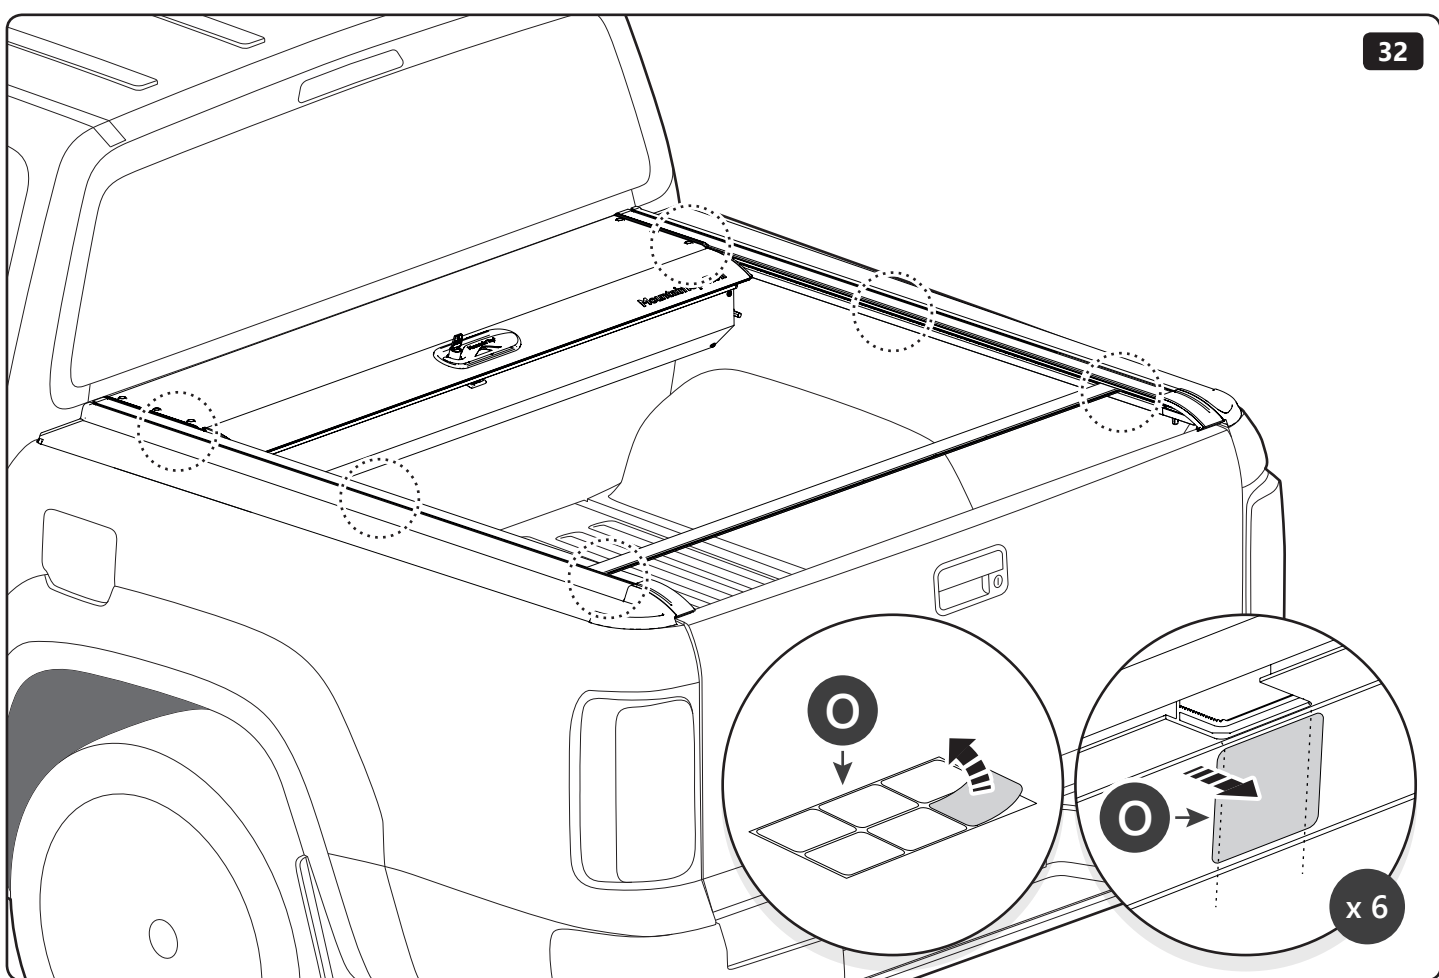
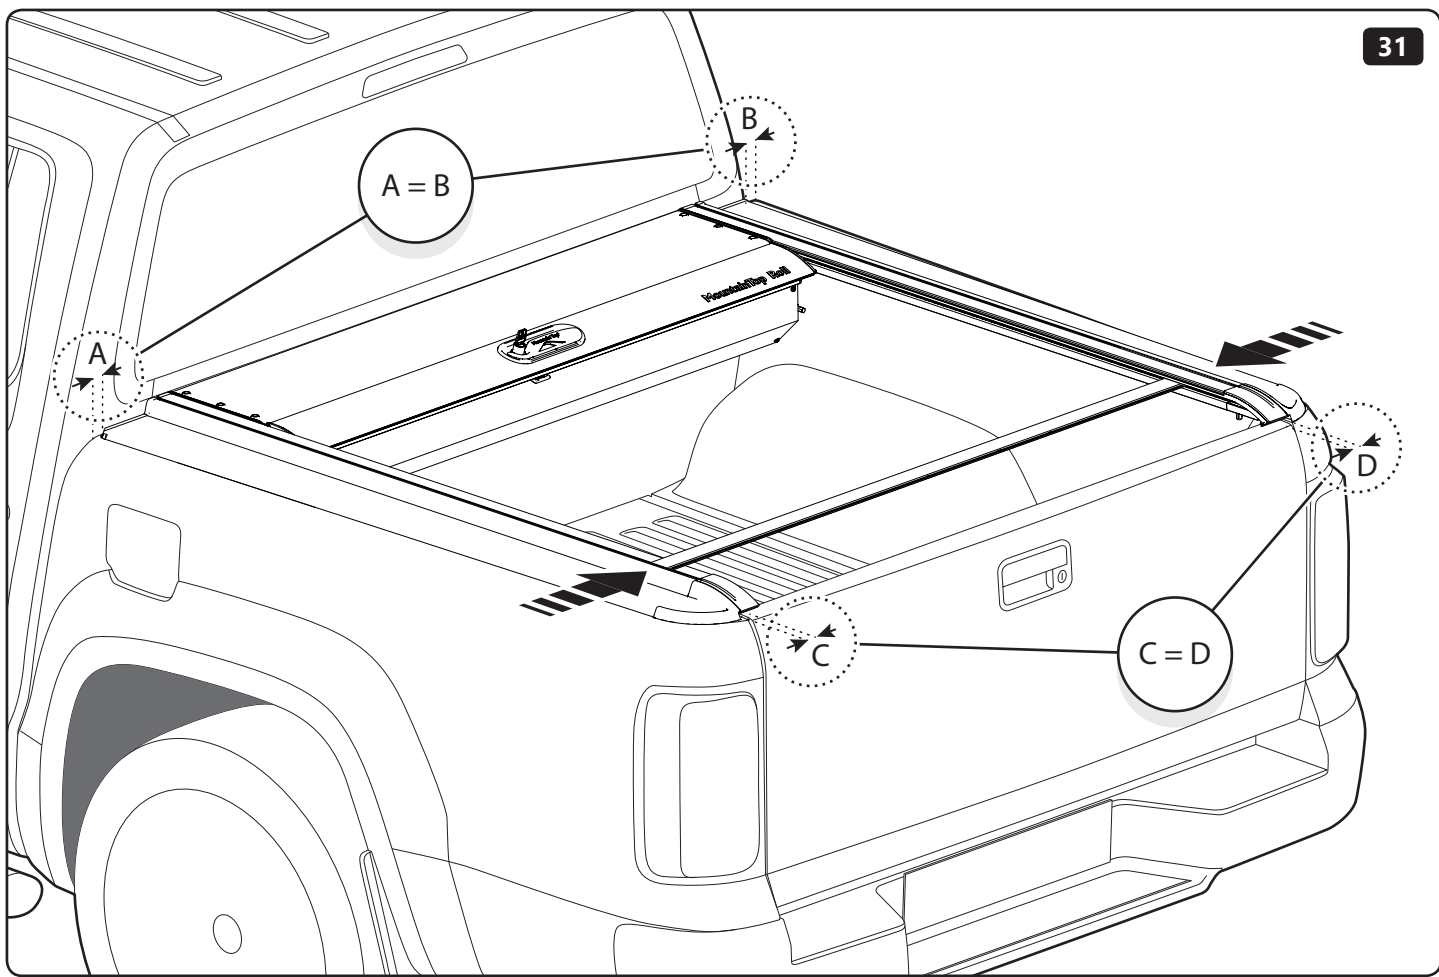


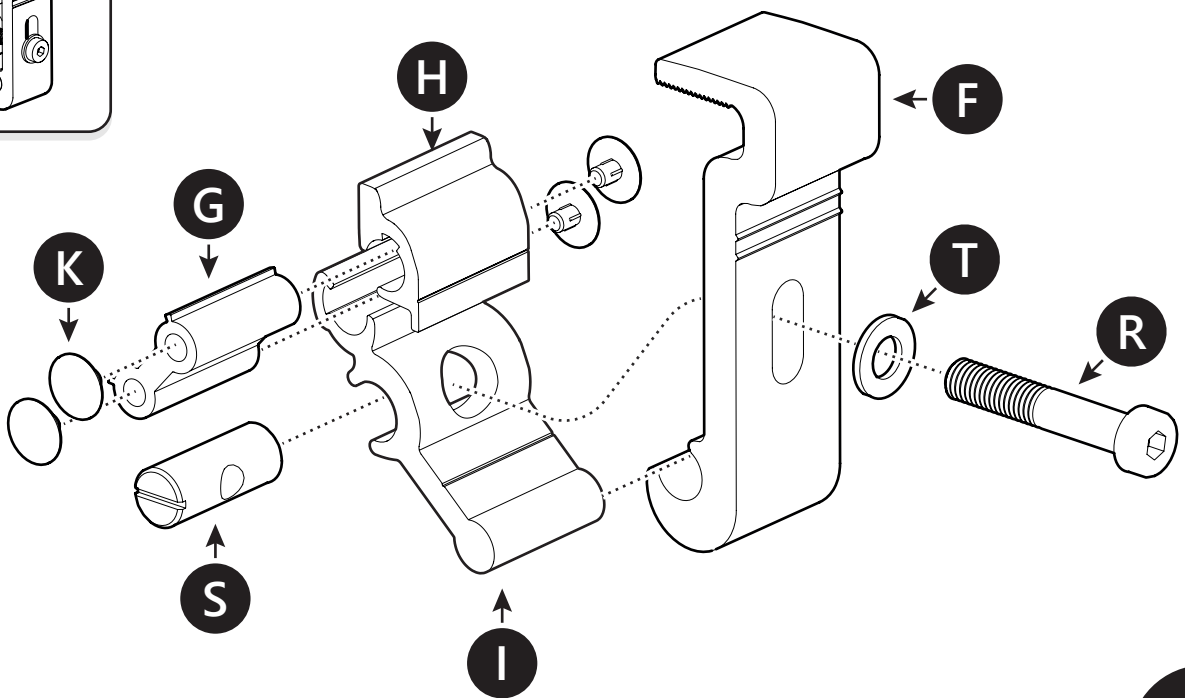
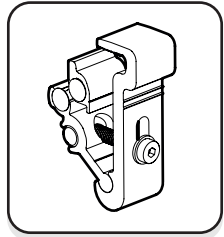




x 6


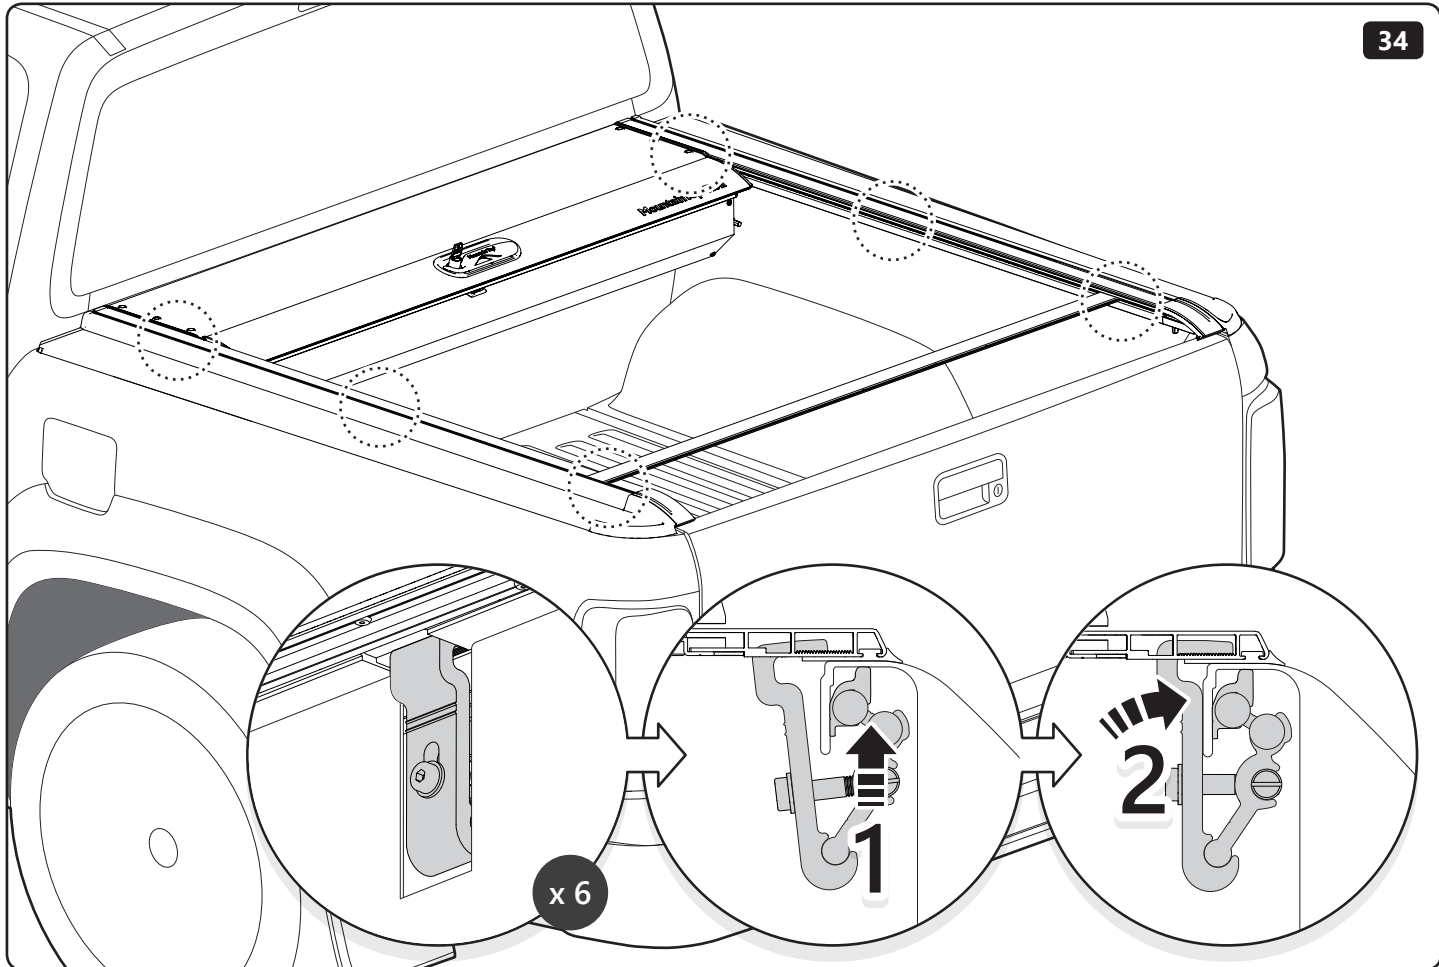


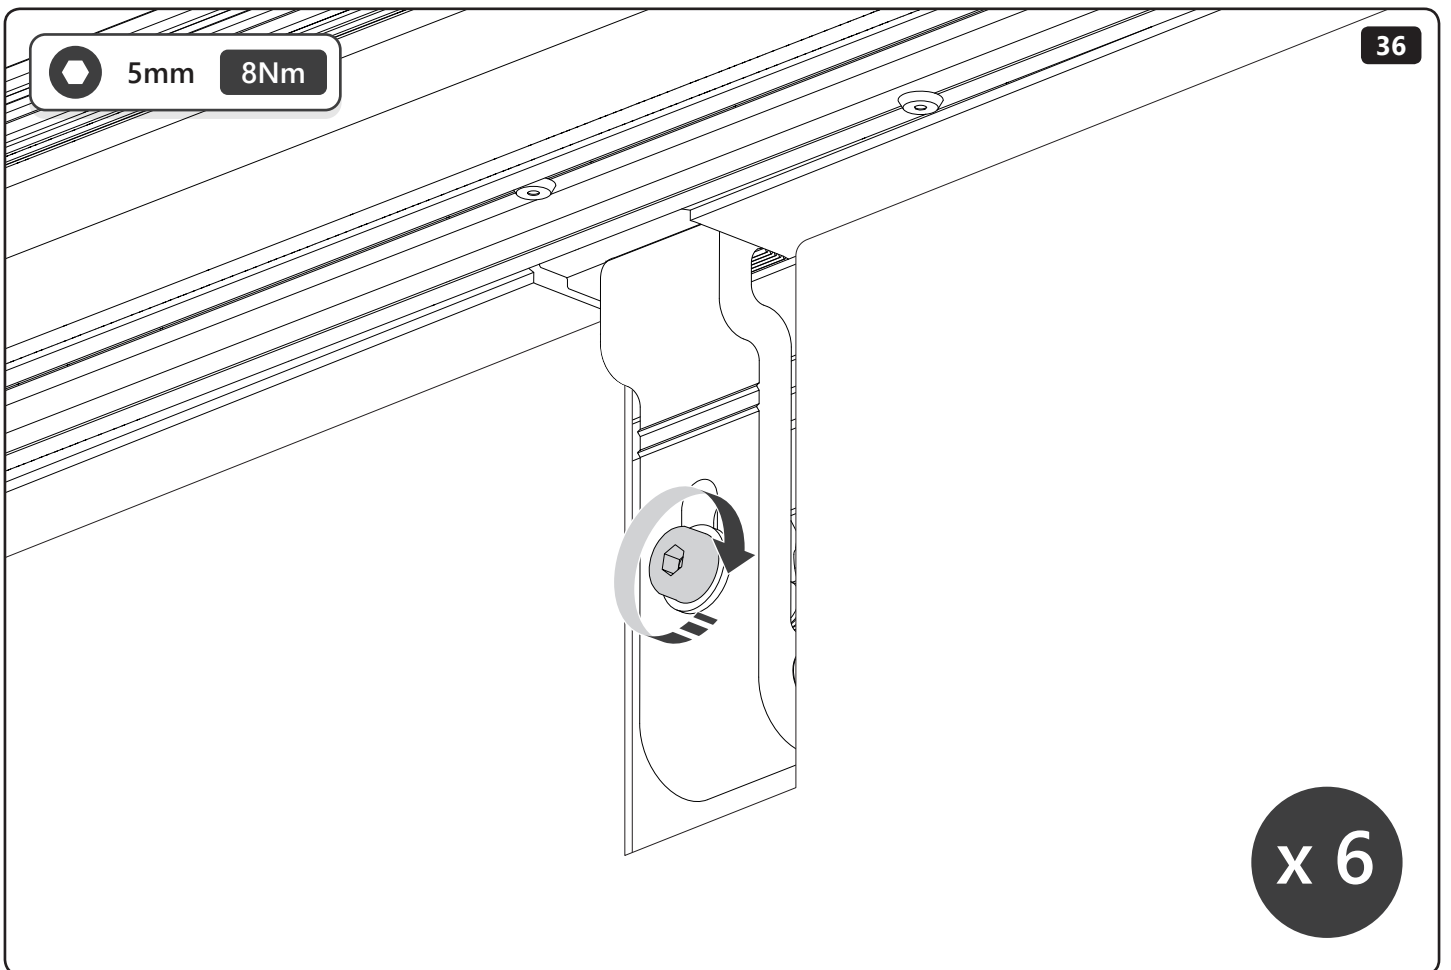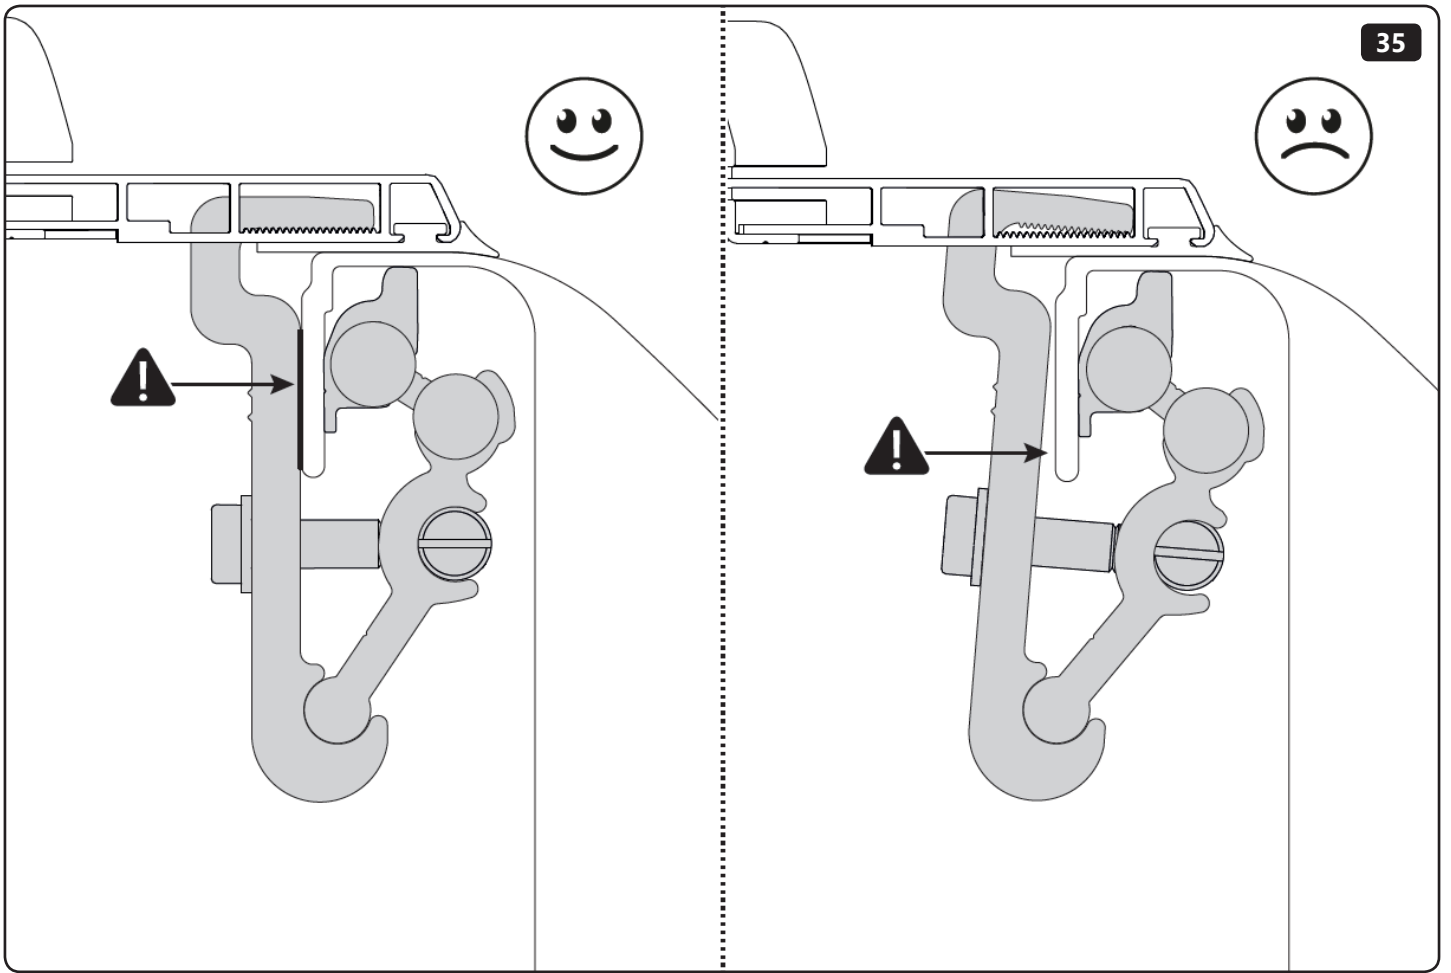

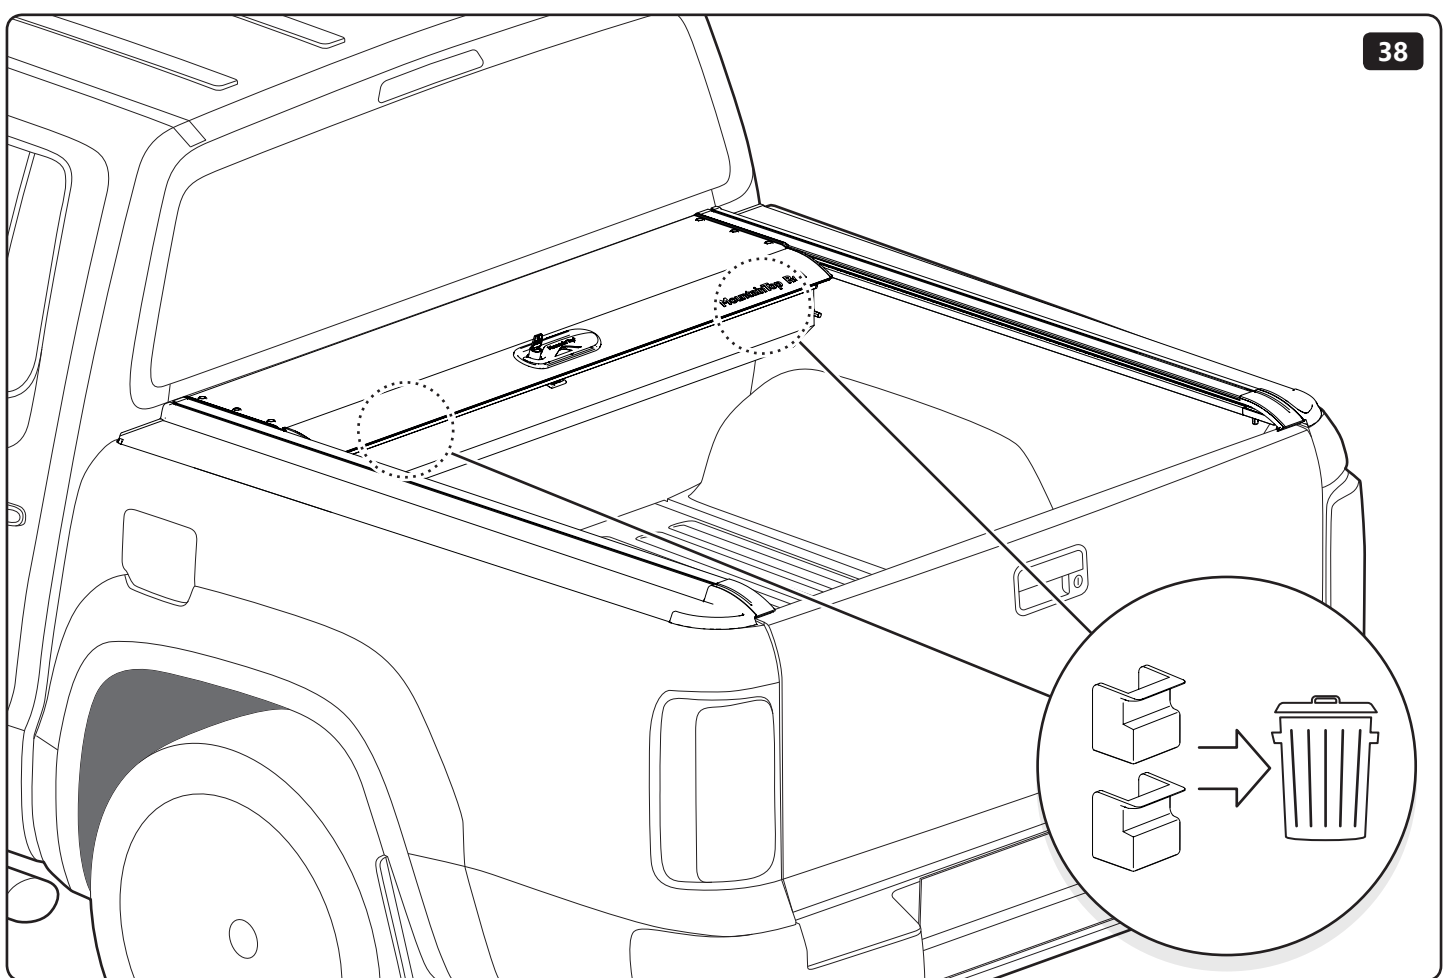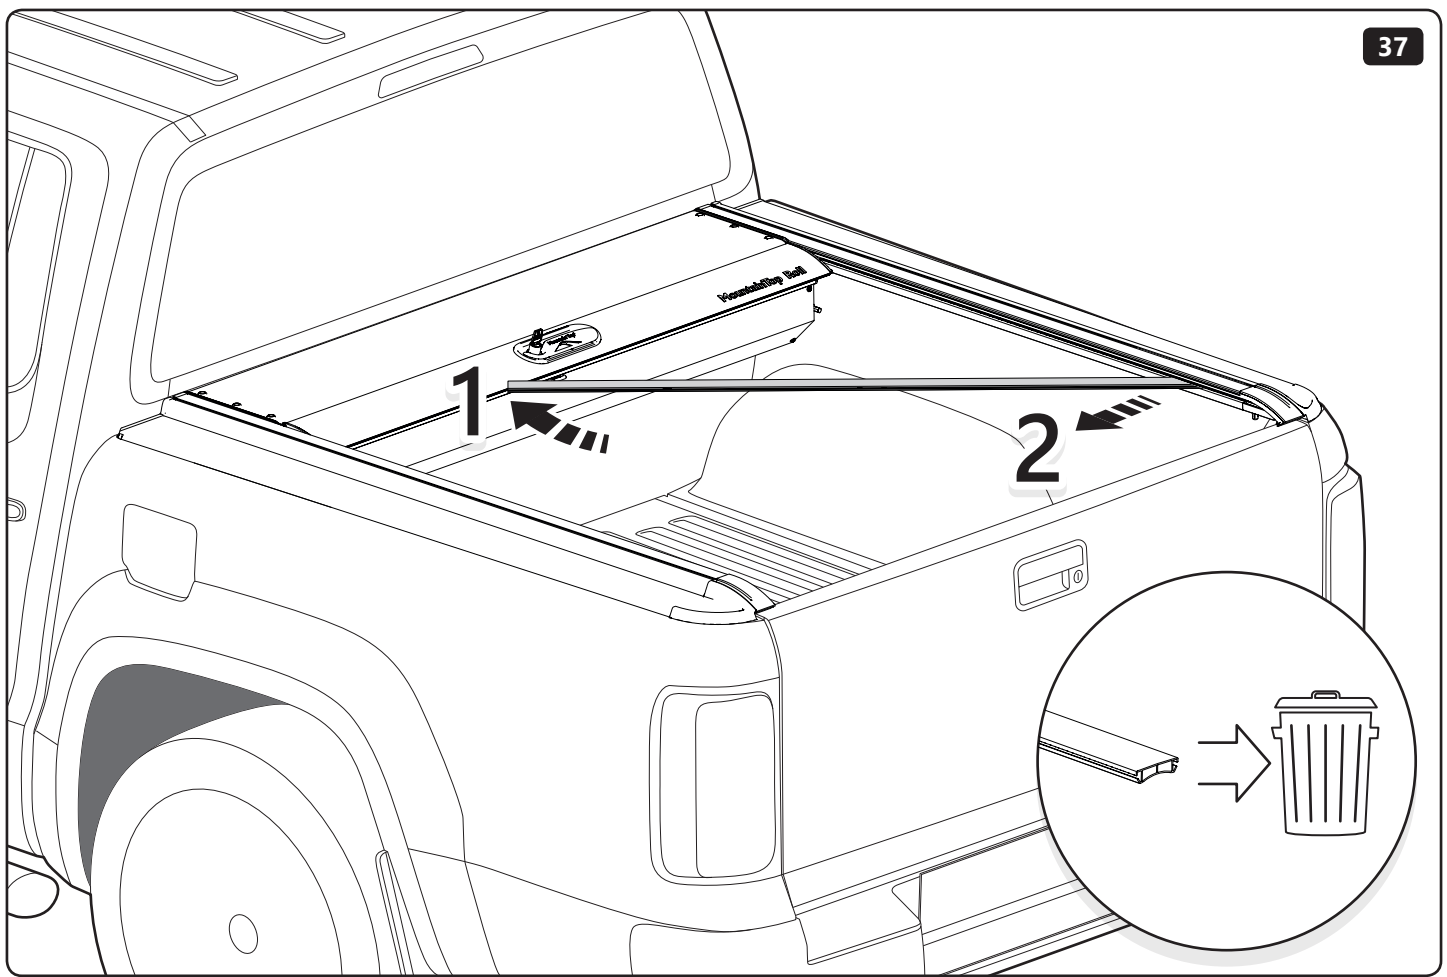

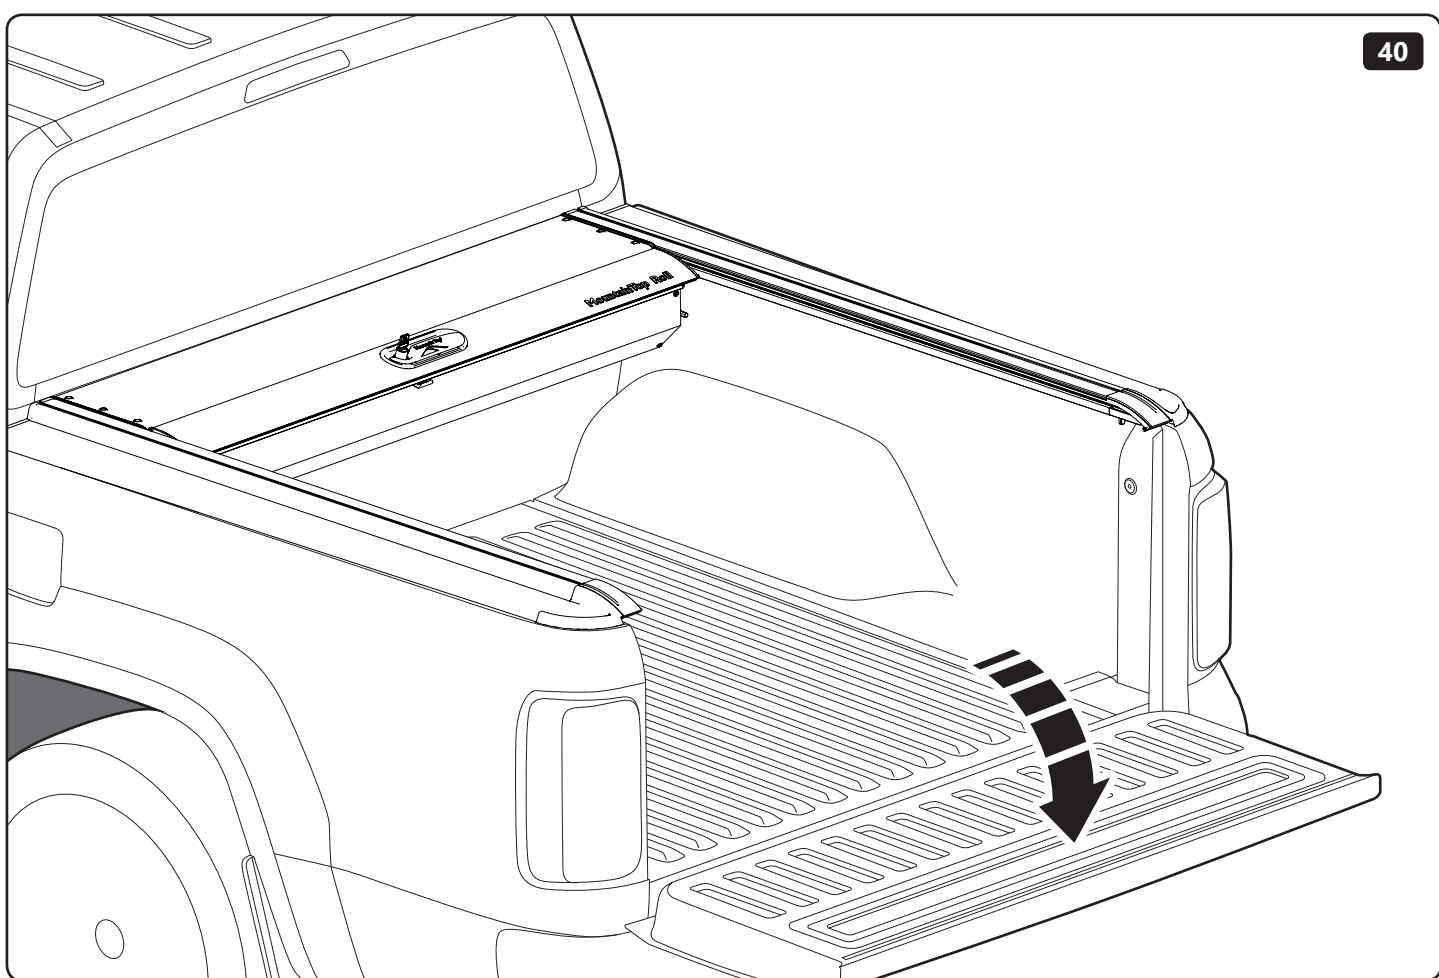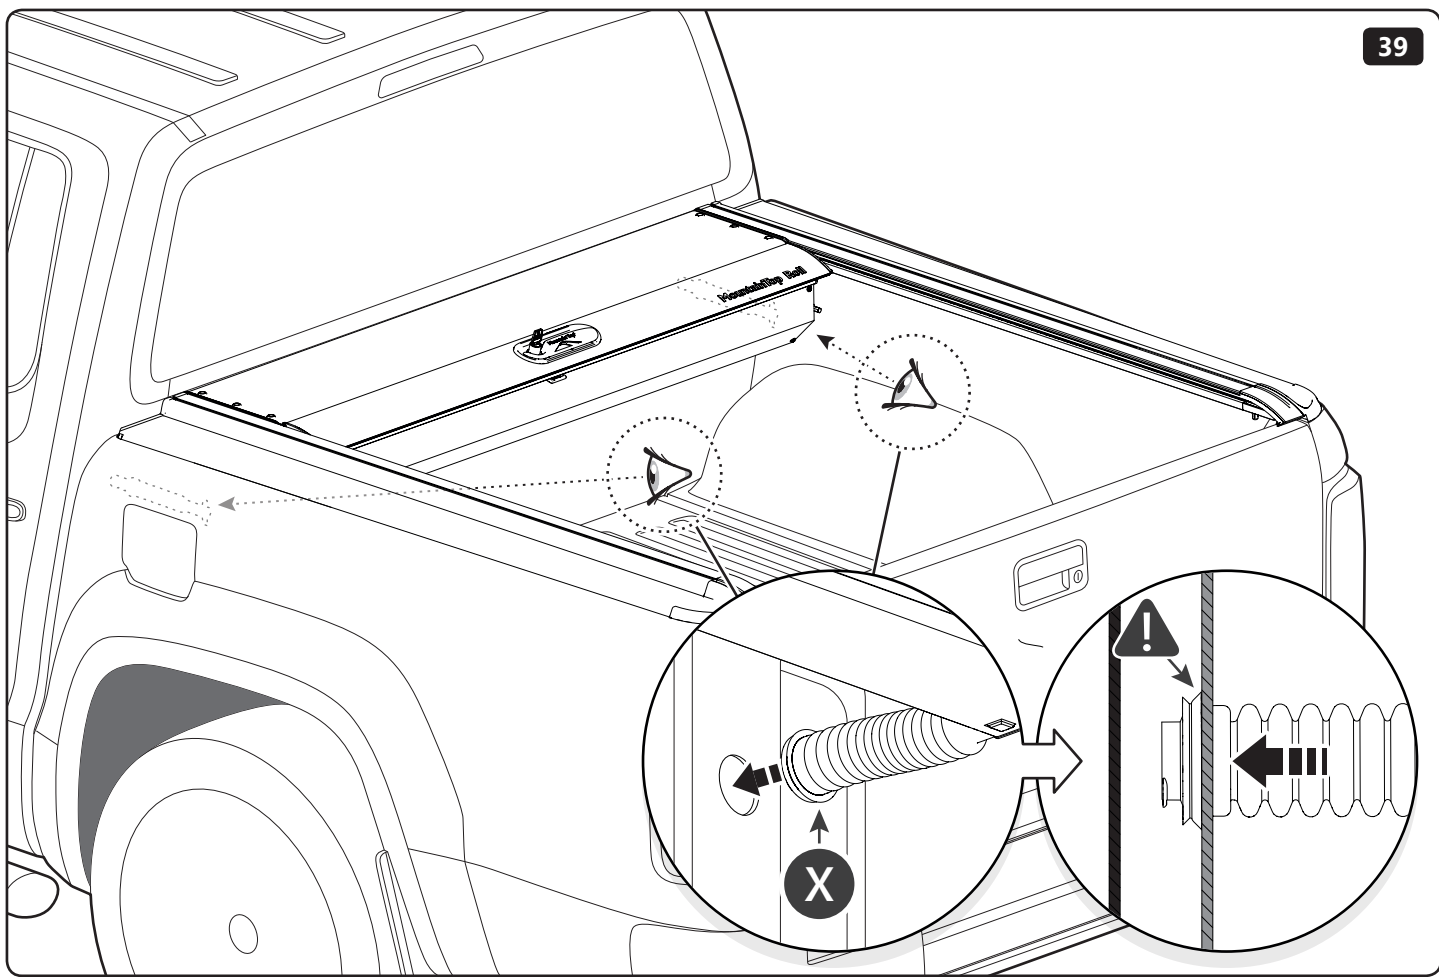


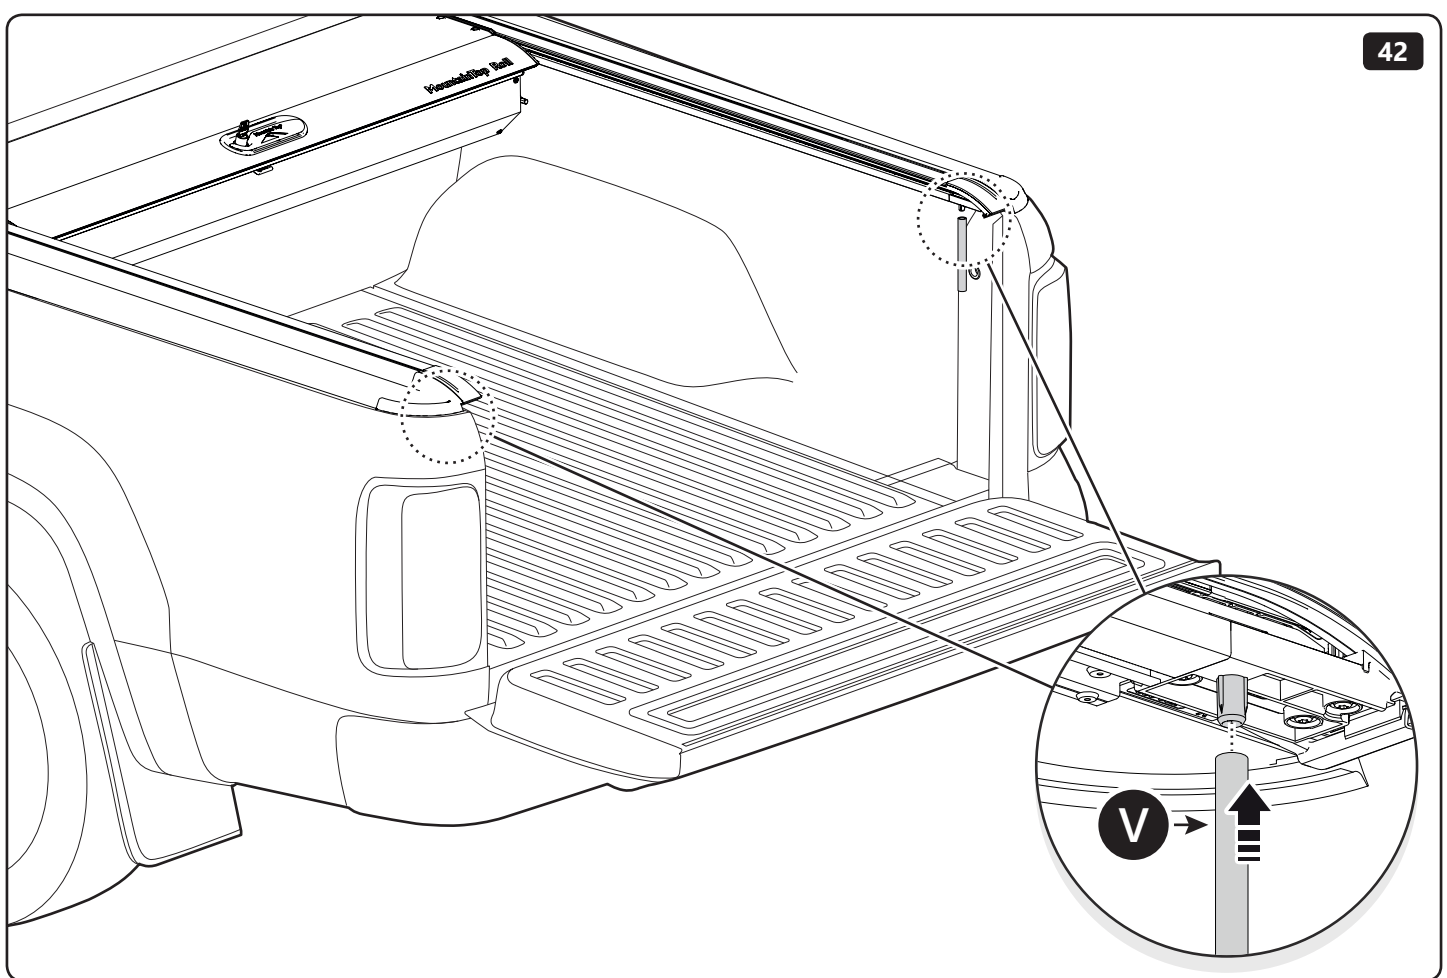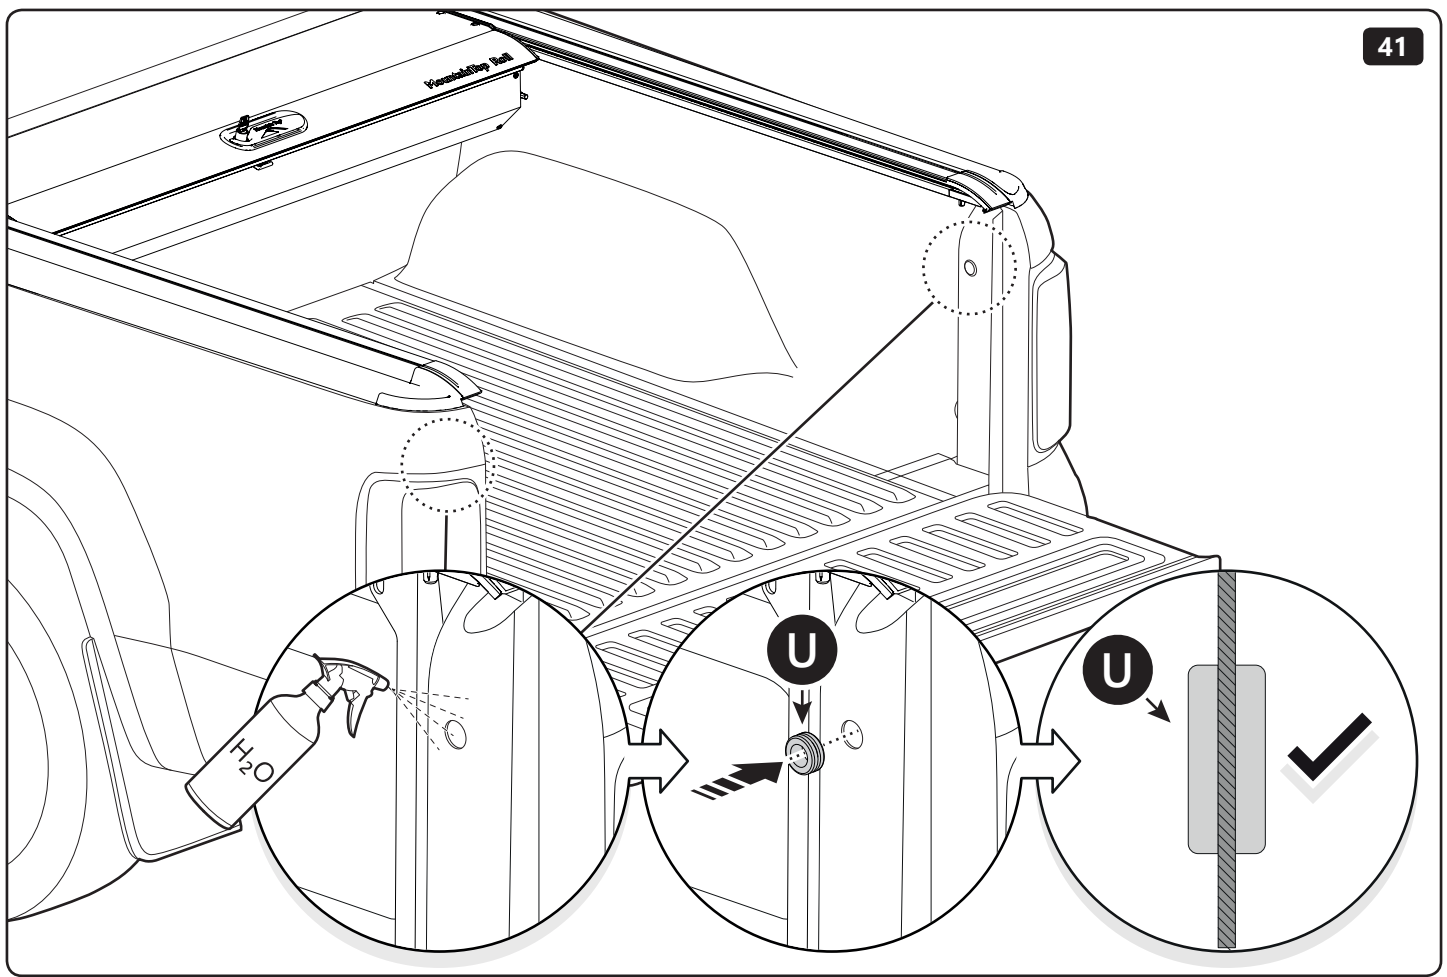

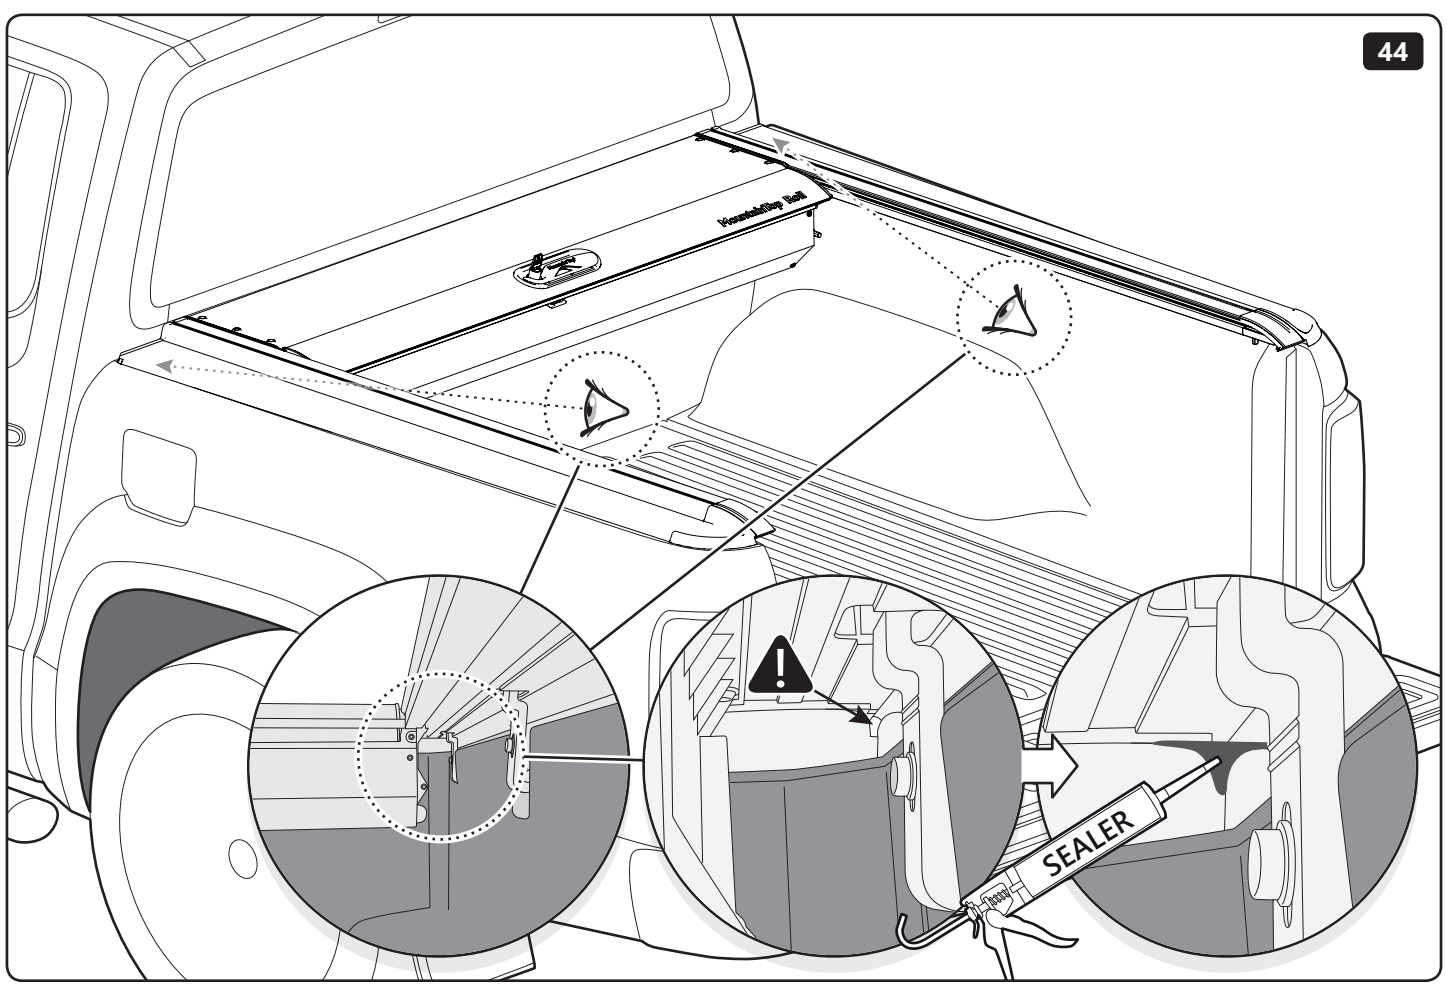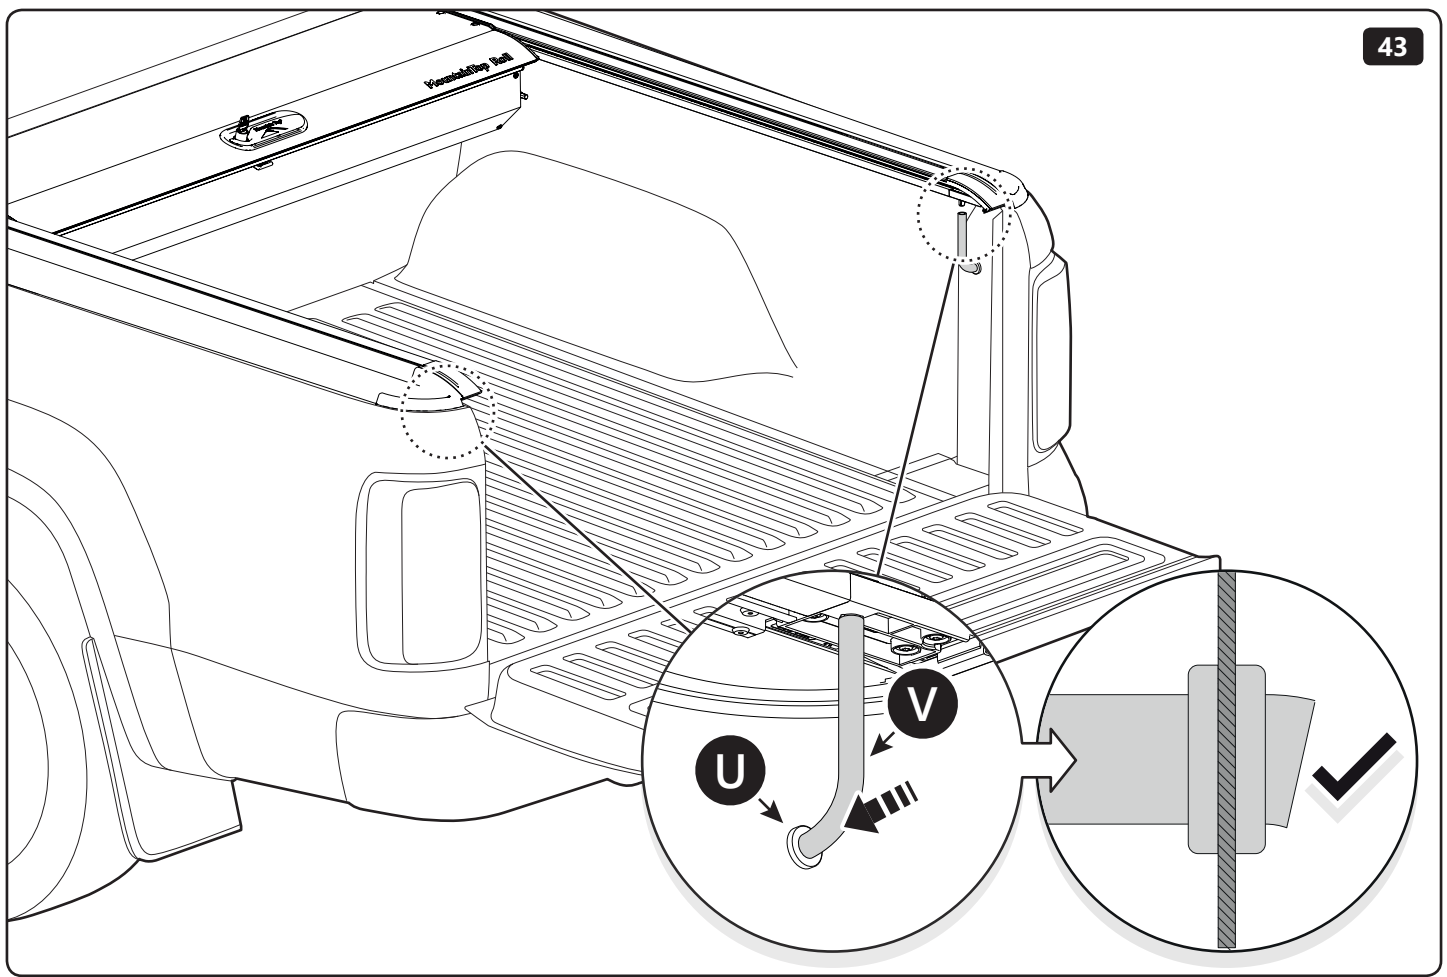


 Silicone oil


45

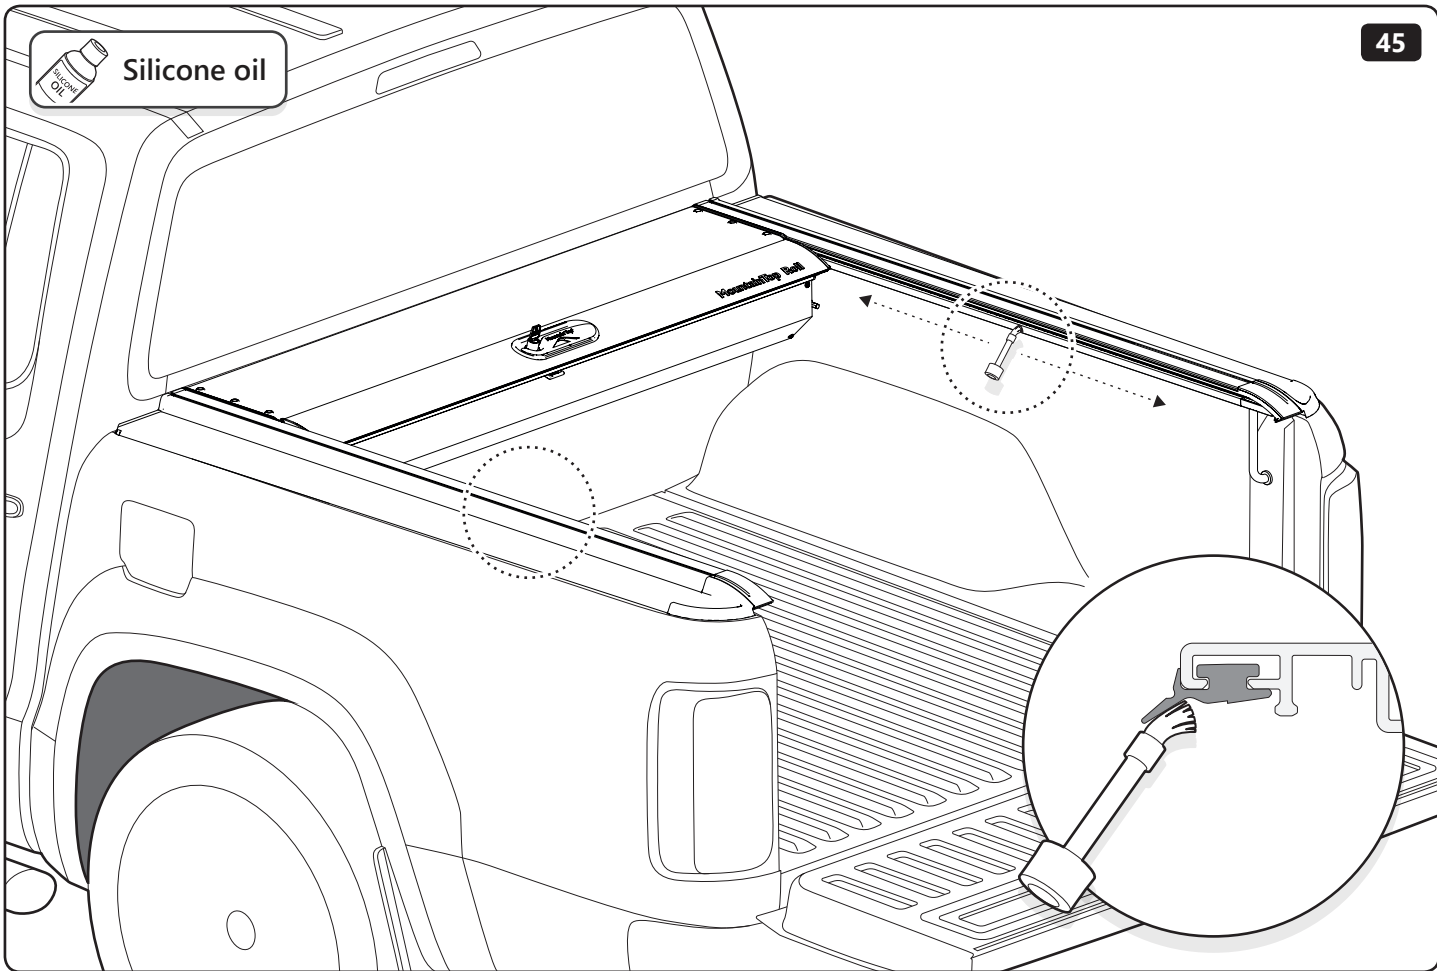


46

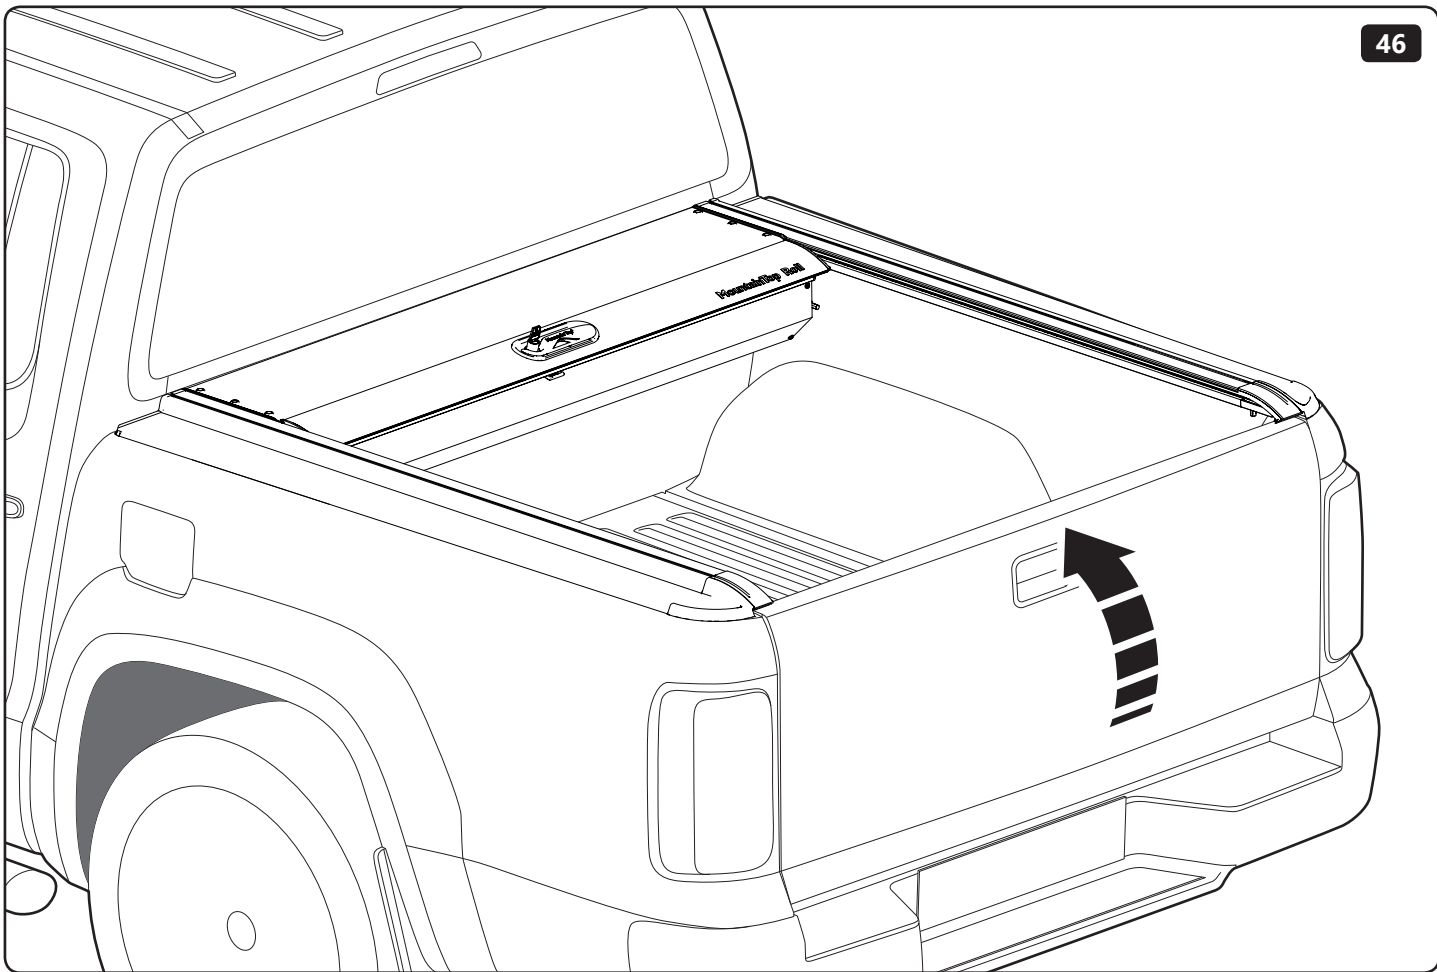


☰ ✓ Check function

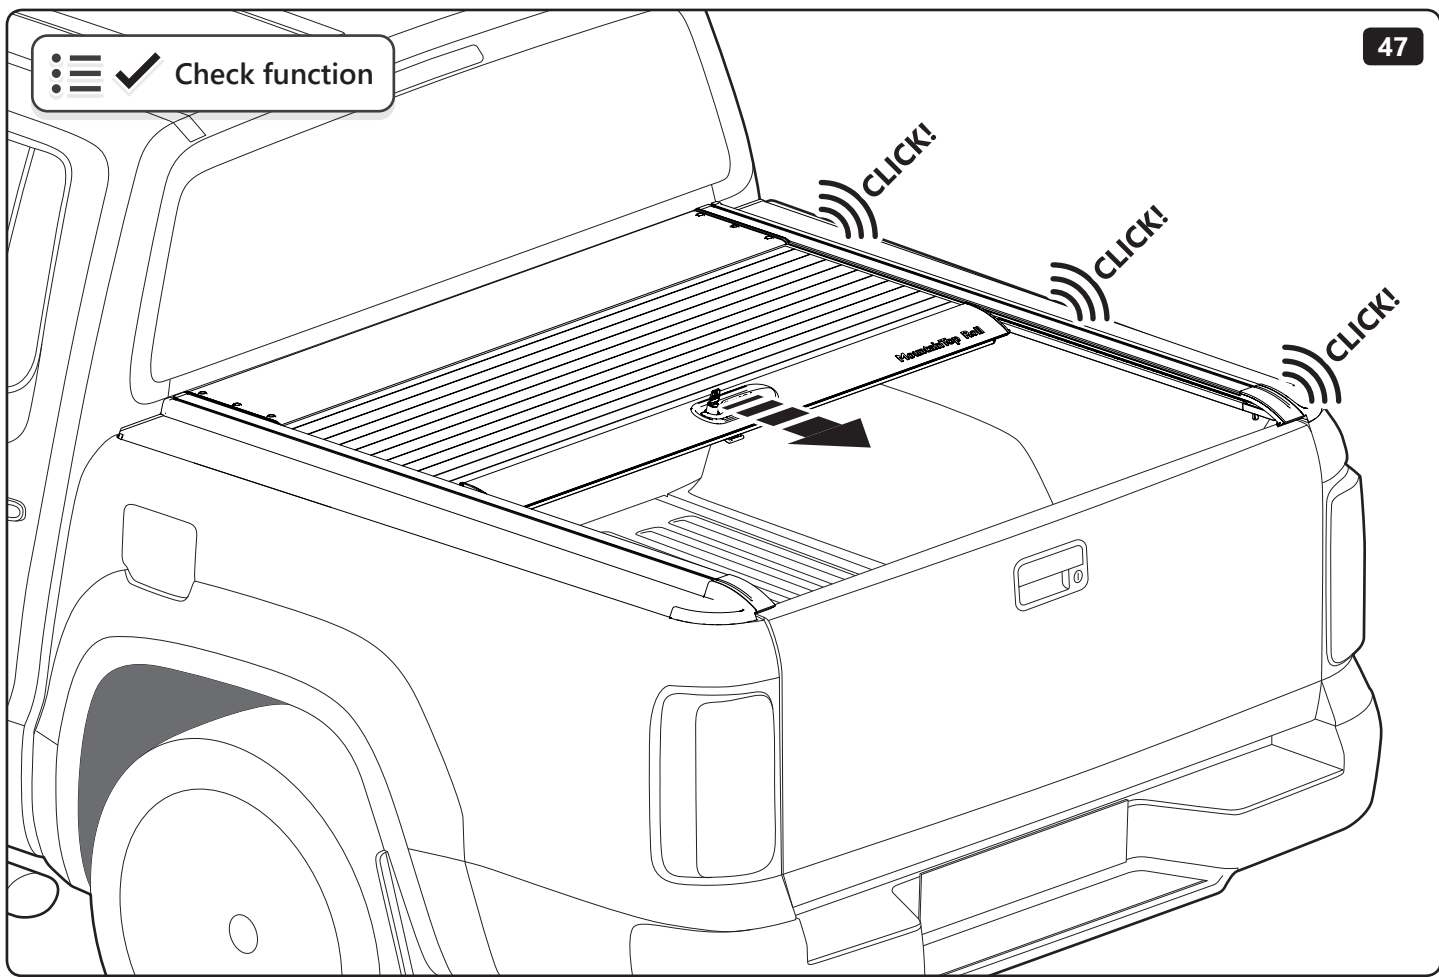


☰ ✓ Check function

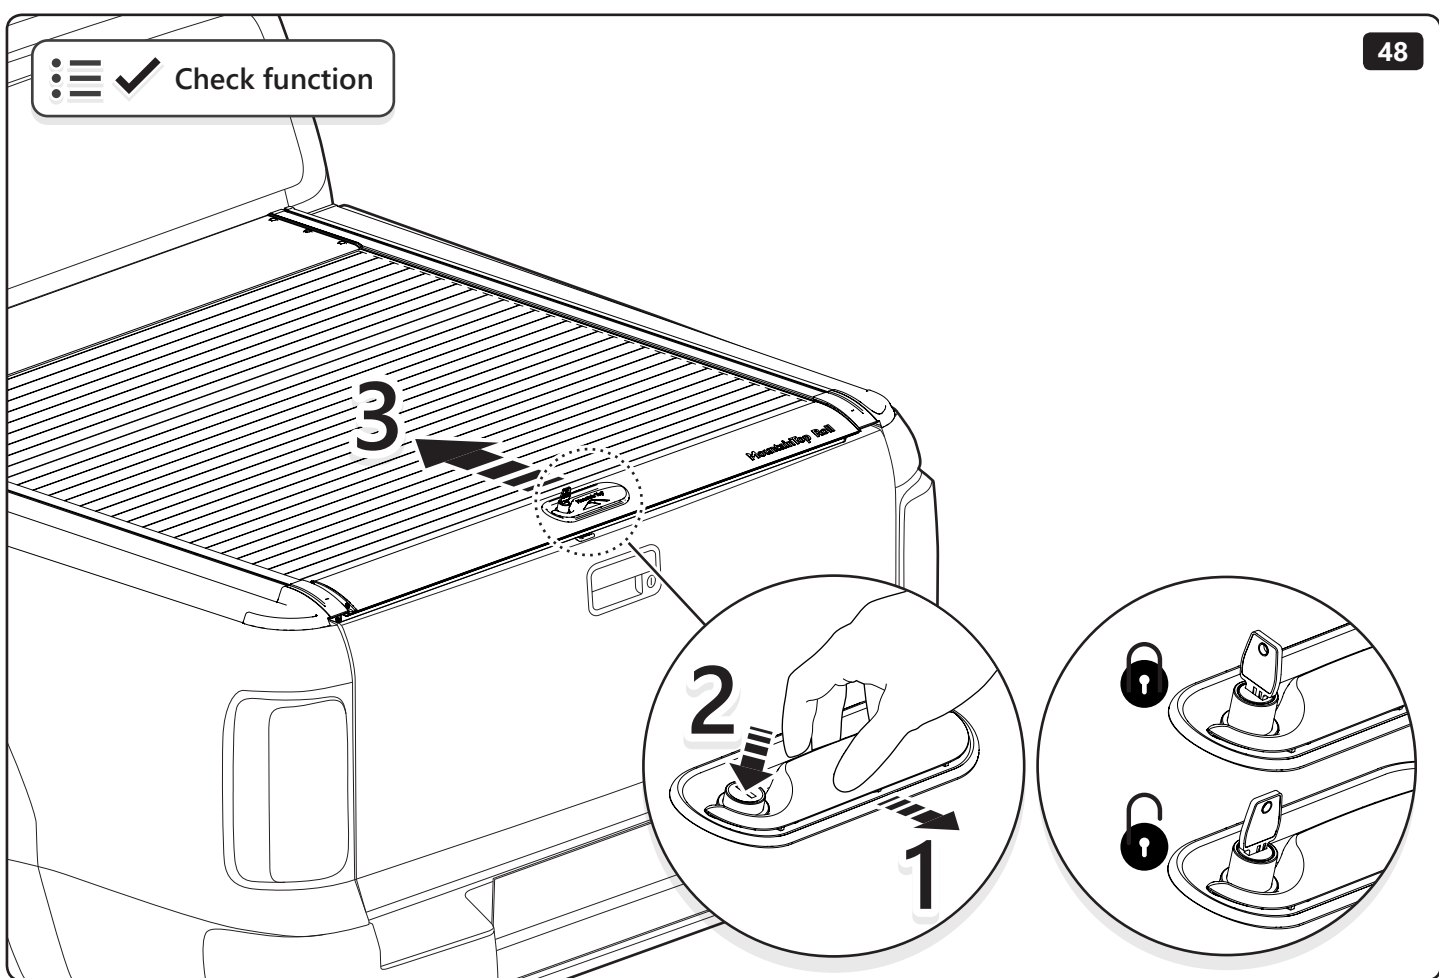

☰ ✓ Check function

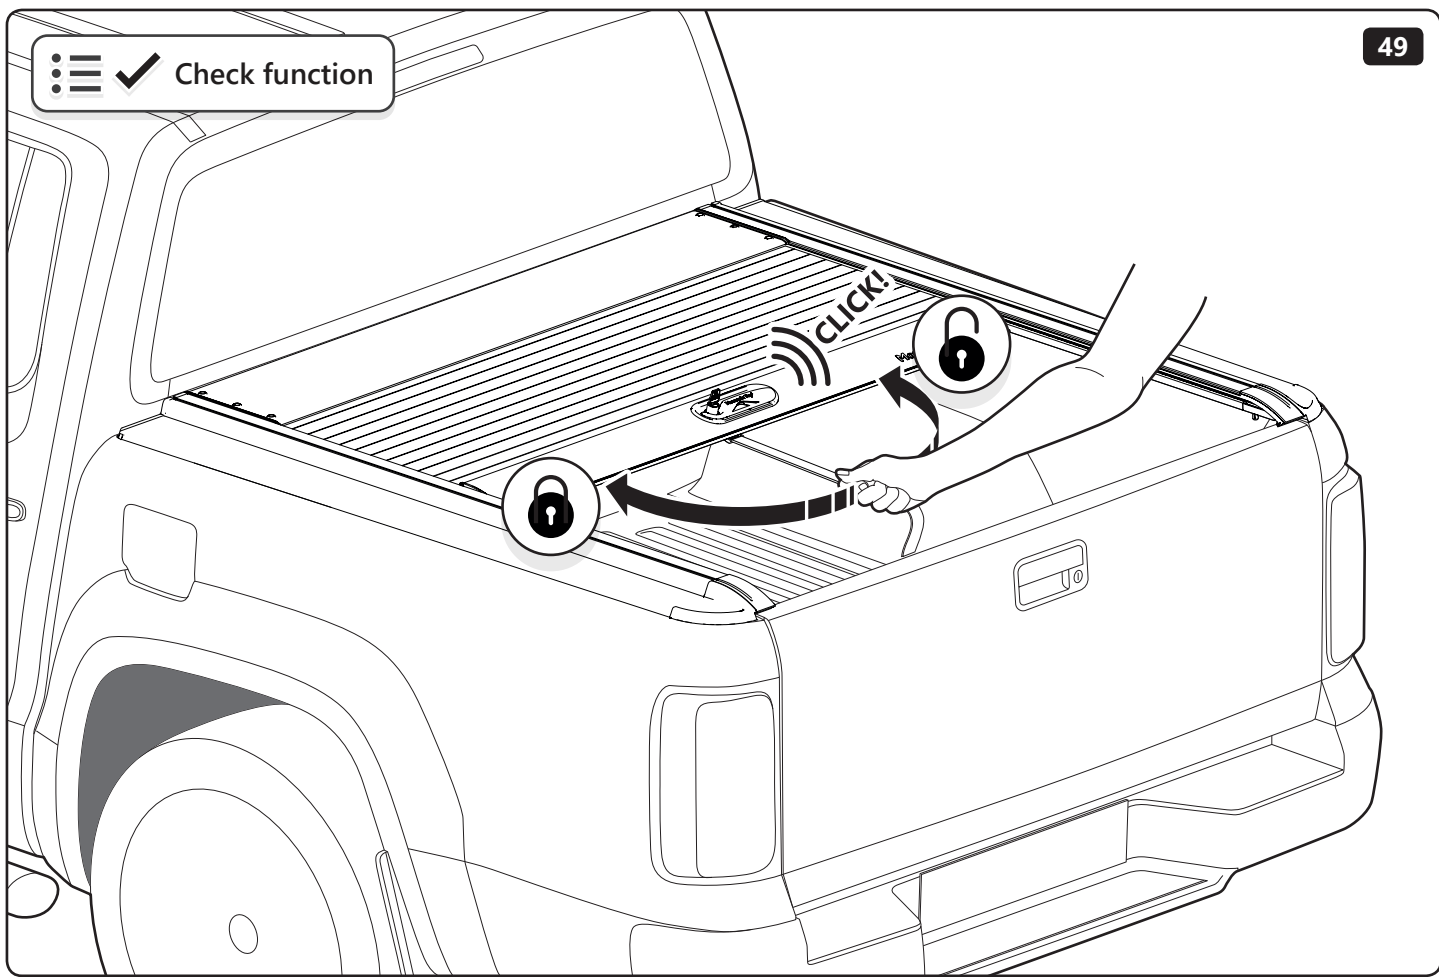

☰ ✓ Check function

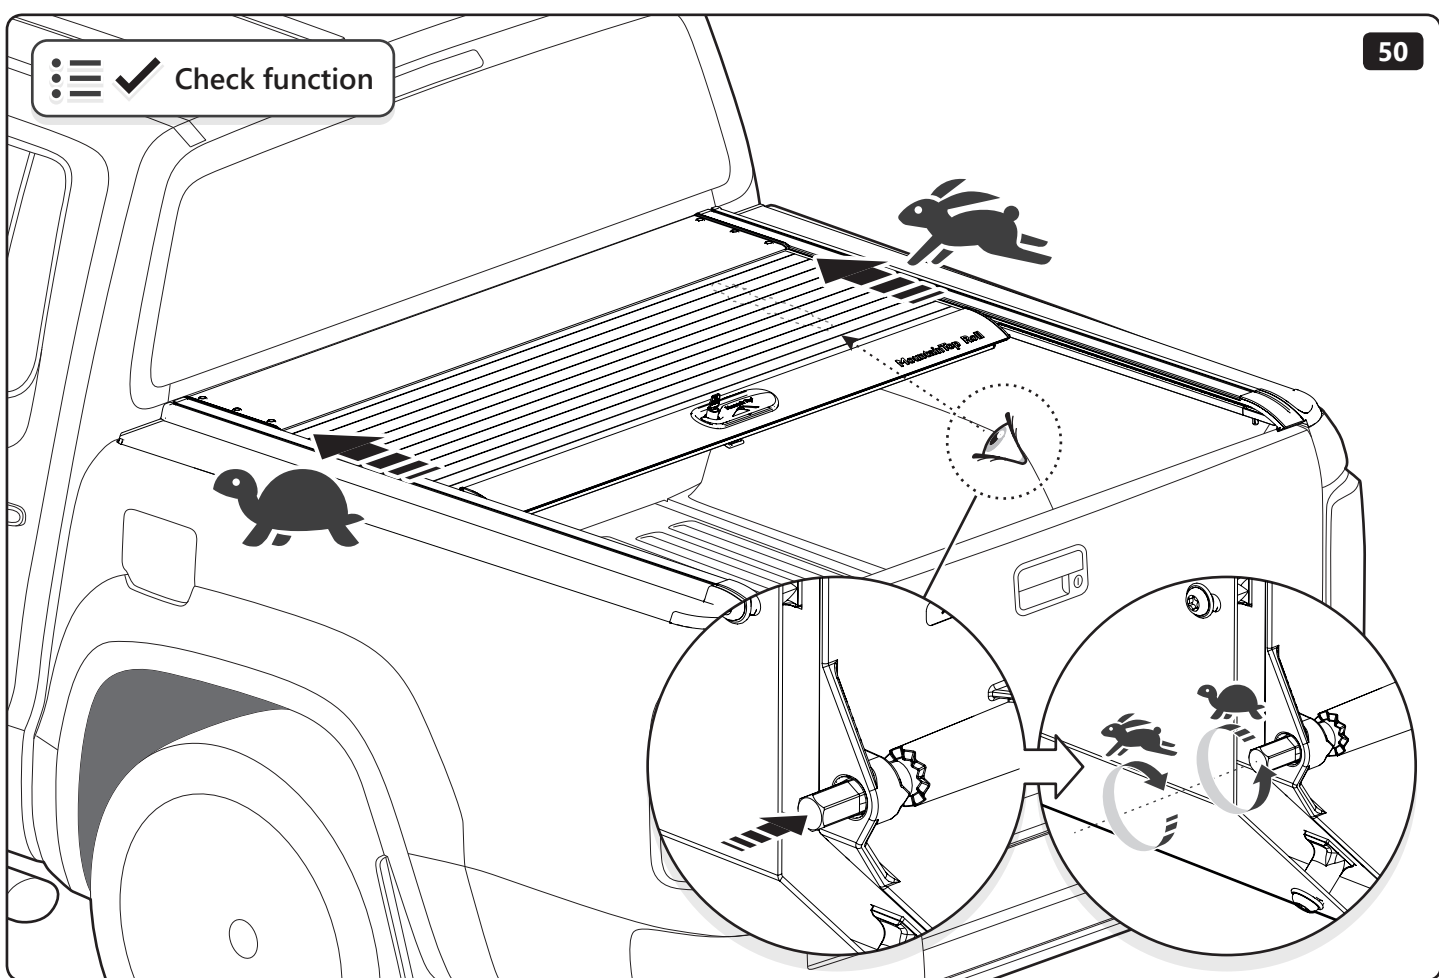



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Fax +45 4810 2960
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
MTR SS90	Ssangyong / 2018 →	Short Bed	2 hour(s)	31-37 Kg
MTRA SS91	Ssangyong / 2018 →	Long Bed	2 hour(s)	31-37 Kg

GB Installation manual	S Monteringsanvisning	D Einbauanleitung
SF Asennusohje	E Instrucciones de montaje	CZ Návod k instalaci
F Notice de montage	H Szerelési utasítás	I Istruzioni de montaggio
PL Instrukcja montażu	P Instruções de instalação	GR Οδηγίες Εγκατάστασης
NL Installatie-instructies	RUS Инструкция по установке	DK Monteringsvejledning
TR Montaj Talimatı	N Monteringsveiledning	RO Instructiuni de instalare